



Fig. 01 CYLINDER

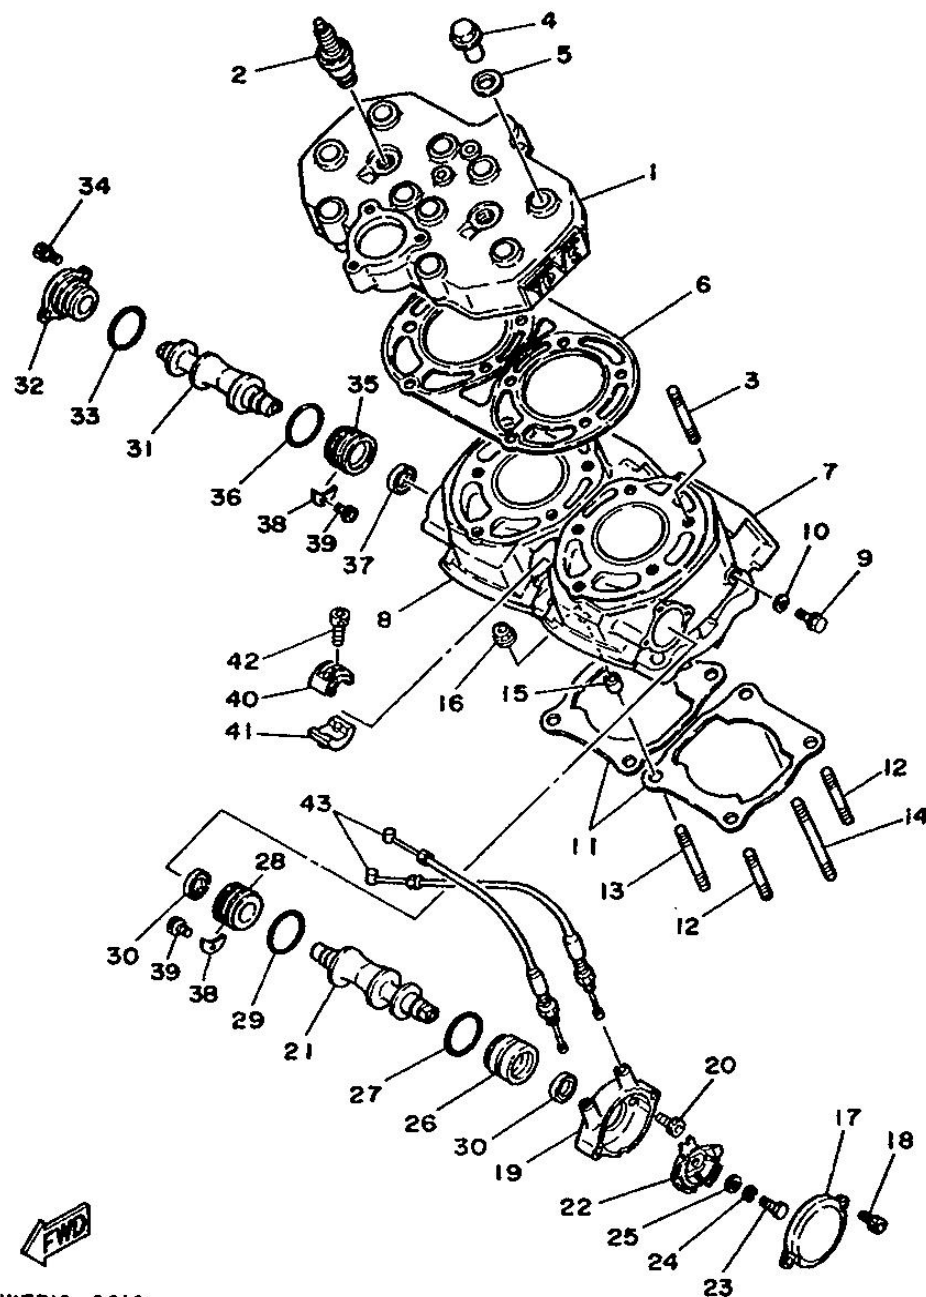

FWD
IWT310-6010


N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-11111-01	HEAD, cylinder 1	1	
2	94701-00188	PLUG, spark (NGK BR9ES)	2	
3	90116-08424	BOLT, stud	10	
4	90179-08343	NUT	10	
5	90201-122A7	WASHER, plate	10	
6	31K-11181-00	GASKET, cylinder head 1	1	
7	1UA-11311-00	CYLINDER 1	1	
8	1UA-11321-00	CYLINDER 2	1	
9	95826-06010	BOLT, flange	2	
10	90430-06166	GASKET	2	
11	29L-11351-00	GASKET, cylinder	2	
12	90116-08318	BOLT, stud	4	
13	90116-08388	BOLT, stud	2	
14	90116-08064	BOLT, stud	2	
15	99510-10114	PIN, dowel	4	
16	90179-08299	NUT	8	
17	1UA-1131R-00	CAP, seal	1	
18	91316-05012	BOLT	2	
19	29L-1131M-00	COVER	1	
20	91316-05012	BOLT	2	
21	31K-1131A-00	VALVE 1	1	
22	29L-1132E-00	PULLEY 1	1	
23	97326-06018	BOLT	1	
24	92906-06100	WASHER, spring	1	
25	92906-06600	WASHER, plate	1	
26	31K-1131U-00	HOLDER 3	1	
27	93210-30640	O-RING	1	

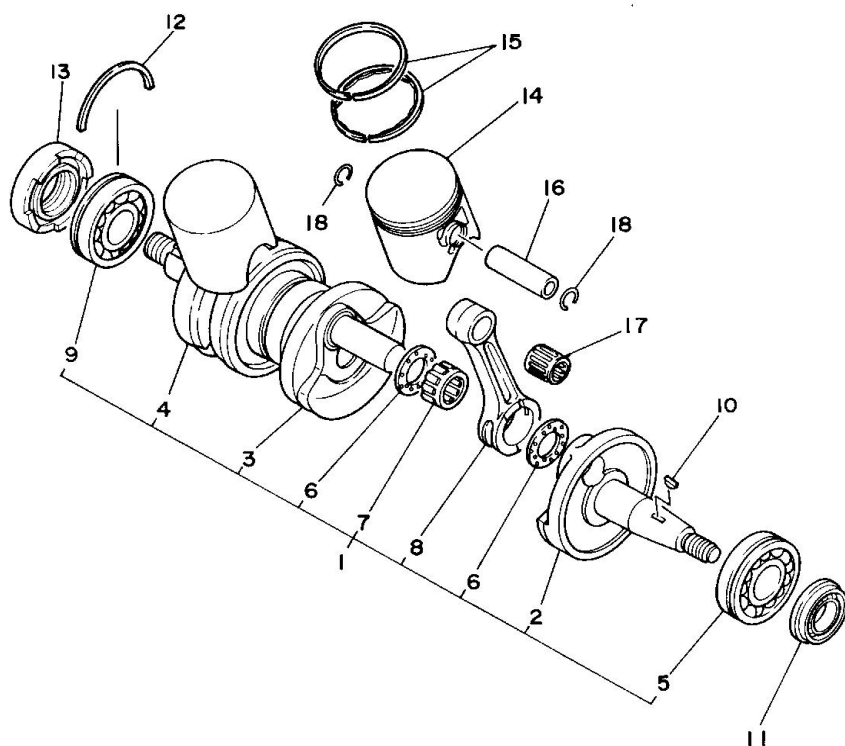

29L010-3021

Fig. 02 CRANKSHAFT & PISTON


N° réfèrent	Référence de la pièce	Description		Remarques
1	29L-11400-30	CRANKSHAFT ASSY	1	
2	29L-11412-00	.CRANK 1	1	
3	29L-11409-30	.CRANK SUB ASSY	1	
4	29L-11442-10	.CRANK 4	1	
5	93306-30548	.BEARING	1	
6	90209-22292	.WASHER	4	
7	93310-522L4	.BEARING, cylindrical	2	
8	29L-11651-00	.ROD, connecting	2	
9	93306-30549	.BEARING	1	
10	90280-05033	KEY, woodruff	1	
11	93103-25108	OIL SEAL	1	
12	278-17424-01	CIRCLIP 1	1	
13	93103-40077	OIL SEAL	1	
14	1UA-11631-00-94	PISTON (STD)	2	
	1UA-11635-00	PISTON (0.25MM O/S)	2	AP
	1UA-11636-00	PISTON (0.50MM O/S)	2	AP
15	1UA-11610-00	PISTON RING SET (STD)	2	
	1UA-11610-10	PISTON RING SET (1ST O/S)	2	AP
	1UA-11610-20	PISTON RING SET (2ND O/S)	2	AP
16	4L0-11633-00	PIN, piston	2	
17	93310-316H6	BEARING, cylindrical	2	
18	4V2-11634-00	CLIP, piston pin	4	

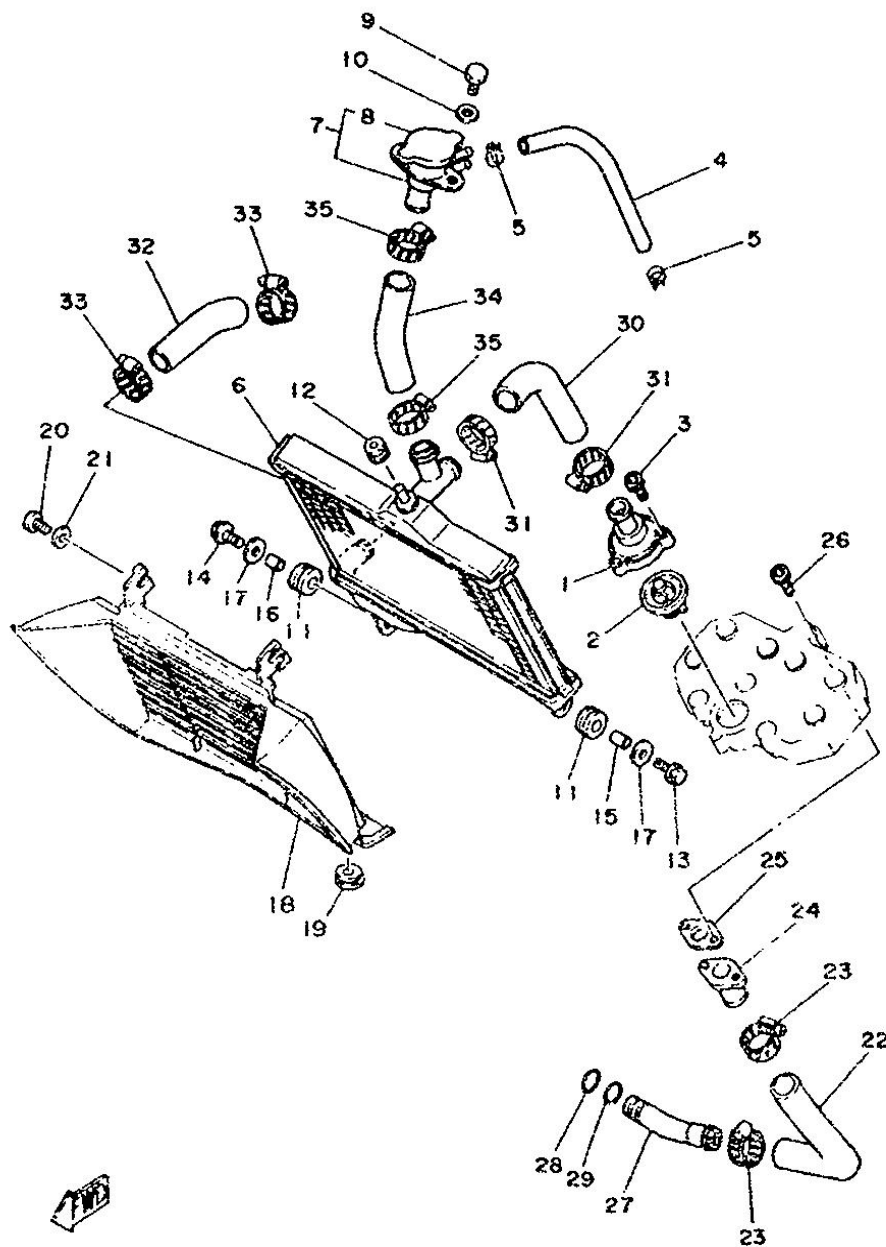

1WT3:0-6040

Fig. 04 RADIATOR & HOSE


N° réfèrent	Référence de la pièce	Description		Remarques
1	29L-12446-00	JOINT	1	
2	29L-12411-00	THERMOSTAT	1	
3	91316-05020	BOLT	3	
4	29L-12485-00	PIPE 5	1	
5	90467-13083	CLIP	2	
6	29L-12461-00	RADIATOR ASSY	1	
7	29L-12590-00	CONDUCTION ASSY	1	
8	22W-12462-00	.CAP, radiator	1	
9	97301-06016	BOLT	2	
10	90201-06067	WASHER, plate	2	
11	90480-15363	GROMMET	2	
12	90480-16284	GROMMET	1	
13	95806-06025	BOLT, flange	1	
14	95806-06020	BOLT, flange	1	
15	90387-07392	COLLAR	1	
16	90387-07390	COLLAR	1	
17	90201-060A3	WASHER, plate	2	
18	51L-12467-00	COVER, radiator	1	
19	90480-12014	GROMMET	2	
20	92506-06016	SCREW, pan head	2	
21	90201-06380	WASHER, plate	2	
22	29L-12481-00	PIPE 1	1	
23	90460-27219	CLAMP, hose	2	
24	4L0-12479-00	JOINT	1	
25	4L0-12435-00	GASKET	1	
26	91316-06020	BOLT	2	
27	29L-12469-00	JOINT 1	1	

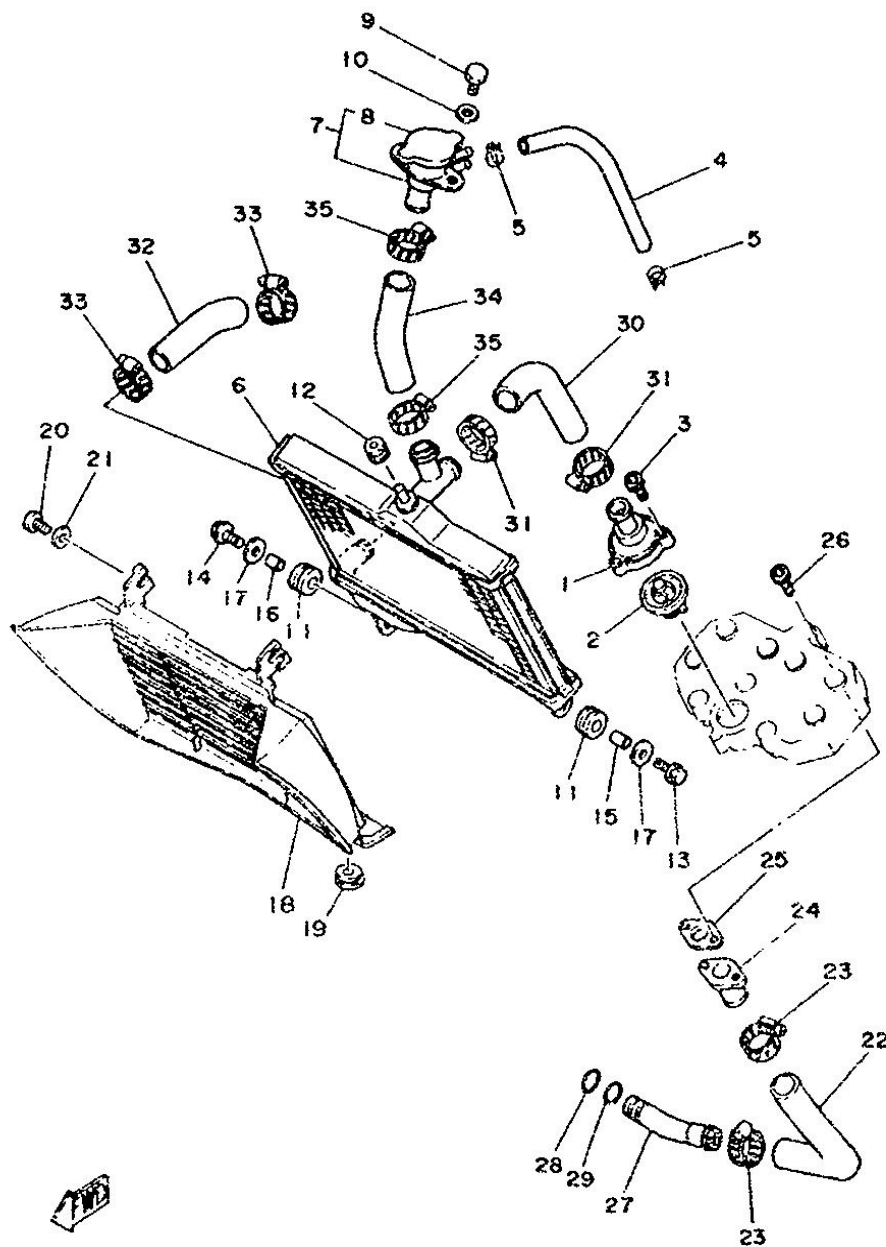

IWT3:0-6040

Fig. 04 RADIATOR & HOSE


[illegible]

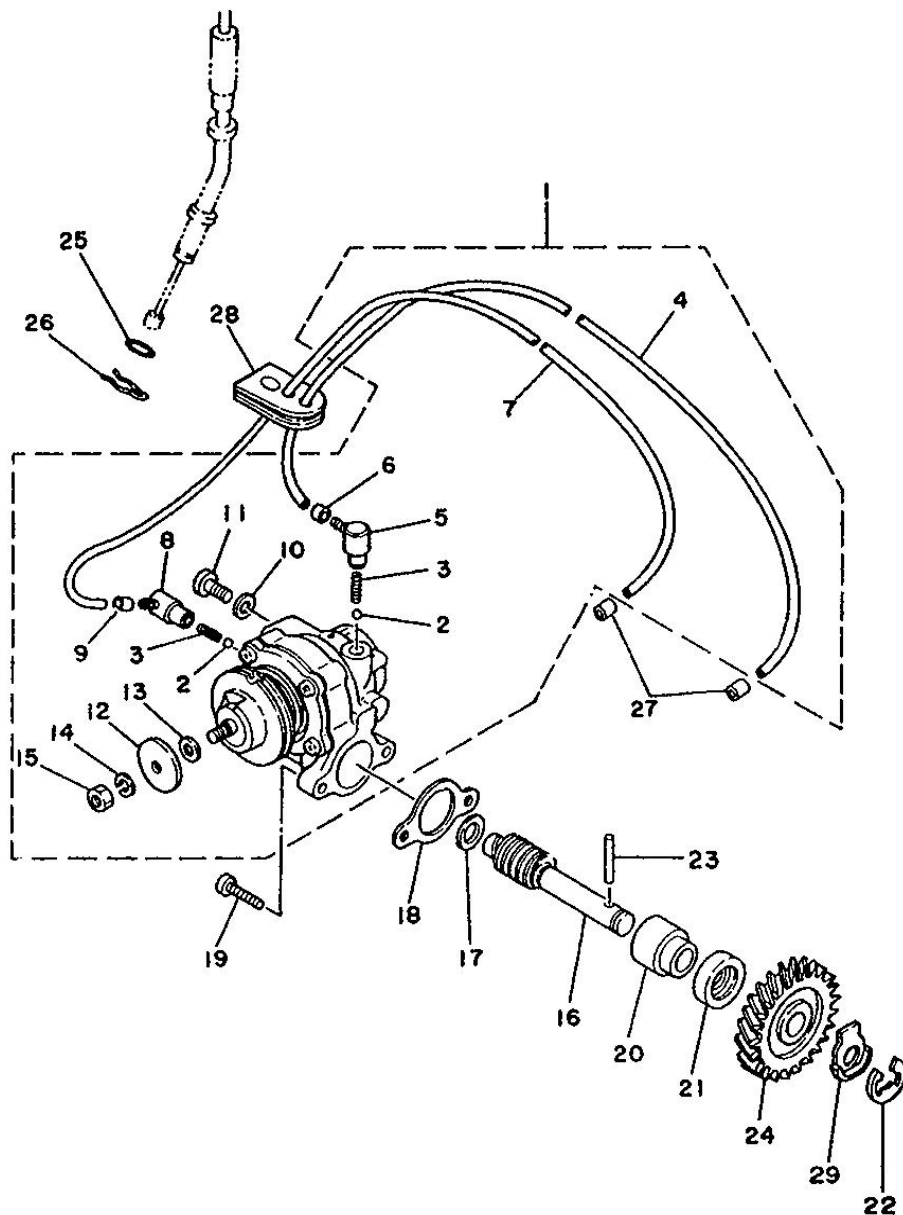

IWT310-6050

Fig. 05 OIL PUMP

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-13101-00	OIL PUMP ASSY	1	
2	93505-32002	.BALL	2	
3	278-13169-00	.SPRING, check ball	2	
4	90445-05203	.HOSE	1	
5	353-13552-01	.NOZZLE	1	
6	90468-02033	.CLIP	1	
7	90445-05765	.HOSE	1	
8	353-13552-01	.NOZZLE	1	
9	90468-02033	.CLIP	1	
10	90430-04004	.GASKET	1	
11	98901-04008	.SCREW, bind	1	
12	137-13138-01	.PLATE, adjusting	1	
13	137-13137-00-03	.SHIM (0.3T)	1	UR
	137-13137-00-05	.SHIM (0.5T)	1	UR
	137-13137-00-10	.SHIM (1.0T)	1	UR
14	92901-05100	.WASHER, spring	1	
15	95301-05600	.NUT	1	
16	4L0-13175-02	SHAFT, worm	1	
17	90201-08624	WASHER, plate	1	
18	8Y0-13116-00	GASKET, pump case	1	
19	98501-05016	SCREW, pan head	2	
20	1E7-13176-00	METAL, worm shaft outer	1	
21	93101-10002	OIL SEAL	1	
22	93430-08036	CIRCLIP	1	
23	93603-22028	PIN, dowel	1	
24	4L0-13178-00	GEAR, pump drive	1	
25	93210-07100	O-RING	1	

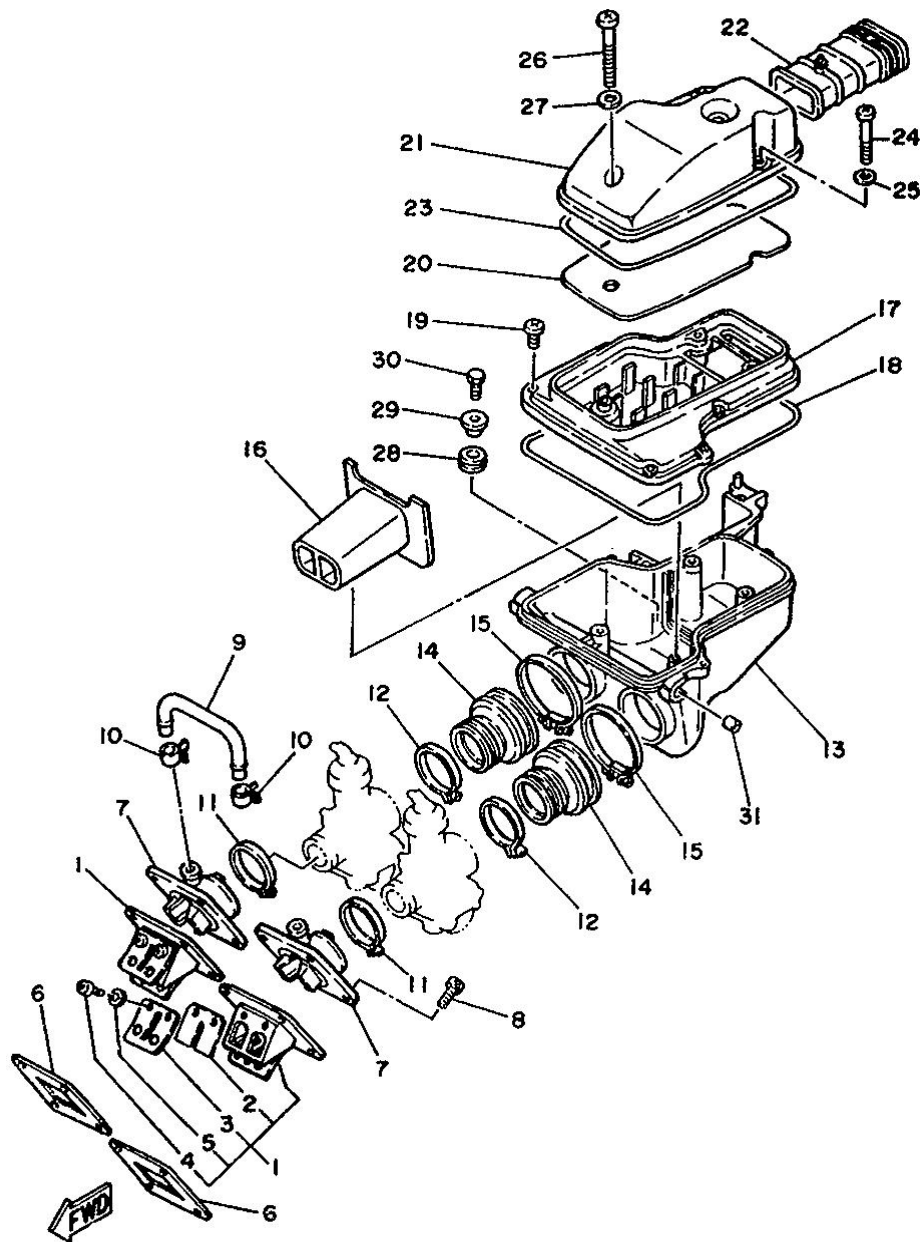


IWT310-6060



Fig. 06 INTAKE

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-13610-00	REED VALVE ASSY	2	
2	1UA-13613-00	.REED, valve	2	
3	1UA-13616-00	.STOPPER, reed valve	2	
4	98501-03008	.SCREW, pan head	4	
5	92990-03100	.WASHER, spring	4	
6	31K-13621-00	GASKET, valve seat	2	
7	31K-13565-00	JOINT, carburetor	2	
8	91316-06025	BOLT	8	
9	29L-14465-00	PIPE	1	
10	90467-20085	CLIP	2	
11	90460-44108	CLAMP, hose	2	
12	90460-49058	CLAMP, hose	2	
13	51L-14411-00	CASE, air cleaner 1	1	
14	29L-14453-00	JOINT, air cleaner 1	2	
15	90460-68230	CLAMP, hose	2	
16	51L-1441F-00	PARTITION, air cleaner case	1	
17	29L-14421-00	CASE, air cleaner 2	1	
18	29L-14452-00	SEAL	1	
19	97701-50525	SCREW, tapping	6	
20	29L-14451-00	ELEMENT, air cleaner	1	
21	29L-14412-00	CAP, cleaner case 1	1	
22	29L-14437-00	DUCT	1	
23	11H-14452-00	SEAL	1	
24	92501-06055	SCREW, pan head	2	
25	92901-06600	WASHER, plate	2	
26	92501-06075	SCREW, pan head	1	
27	92901-06600	WASHER, plate	1	

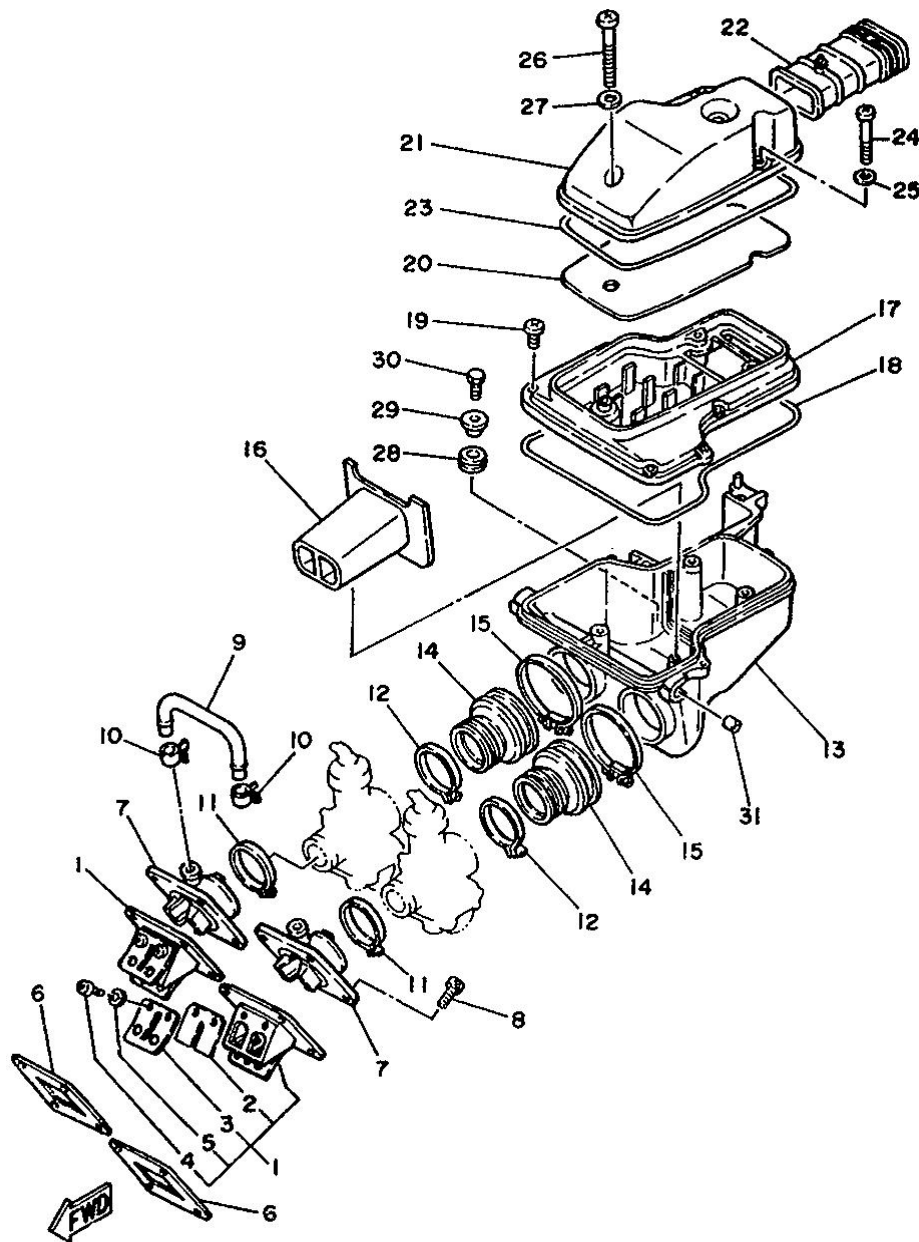

IWT310-6060

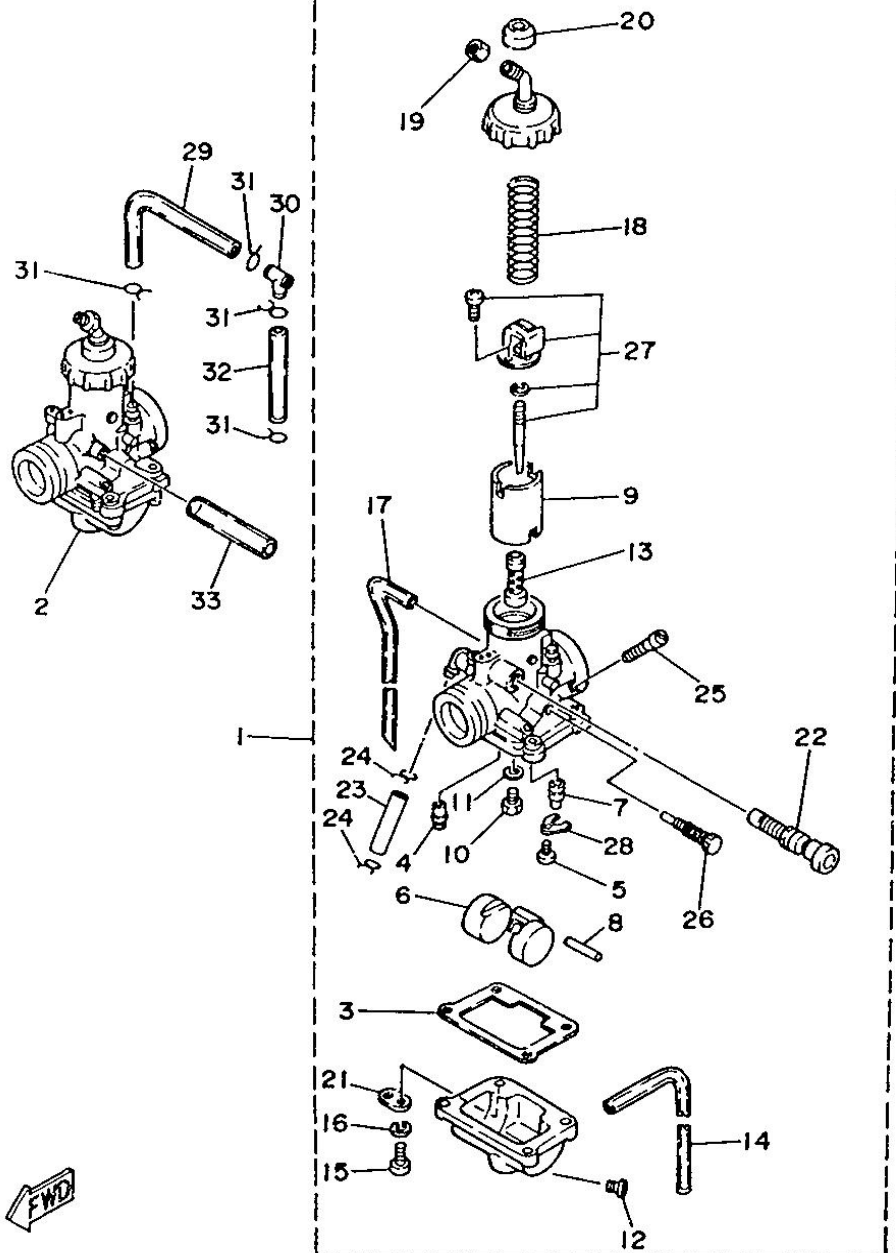


Fig. 06 INTAKE

[illegible]


Fig. 07 CARBURETOR


N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-14101-00	CARBURETOR ASSY 1	1	
2	1UA-14102-00	CARBURETOR ASSY 2	1	
3	304-14184-00	.GASKET, float chamber	1	
4	260-14142-27	.JET, pilot (# 27.5)	1	
5	98501-04008	.SCREW, pan head	1	
6	4L0-14185-00	.FLOAT	1	
7	1UA-14190-28	.NEEDLE VALVE ASSY	1	
8	537-14186-00	.PIN, float	1	
9	29K-14112-20	.VALVE, throttle 1	1	UR # 1
	29K-14113-20	.VALVE, throttle 2	1	UR # 2
10	137-14143-37	.JET, main (#185)	1	
11	137-14153-00	.WASHER, main jet	1	
12	12R-14191-00	.PLUG, drain	1	
13	1XA-14141-28	.NOZZLE, main	1	
14	4L0-14196-00	.PIPE	1	
15	98511-04016	.SCREW, pan head	4	
16	92902-04100	.WASHER, spring	4	
17	4L0-14197-00	.PIPE	1	
18	4L0-14131-00	.SPRING, throttle valve	1	
19	802-14161-00	.NUT, cable adjusting	1	
20	3X3-14169-00	.CAP	1	
21	500-14146-00	.PLATE	1	
22	4U5-14171-00	.PLUNGER, starter	1	
23	51L-14987-00	.HOSE	1	
24	90467-10008	.CLIP	2	
25	10W-14104-00	.AIR SCREW SET	1	
26	23L-14103-00	THROTTLE SCREW SET	1	



1WV171-6070

Fig. 07 CARBURETOR

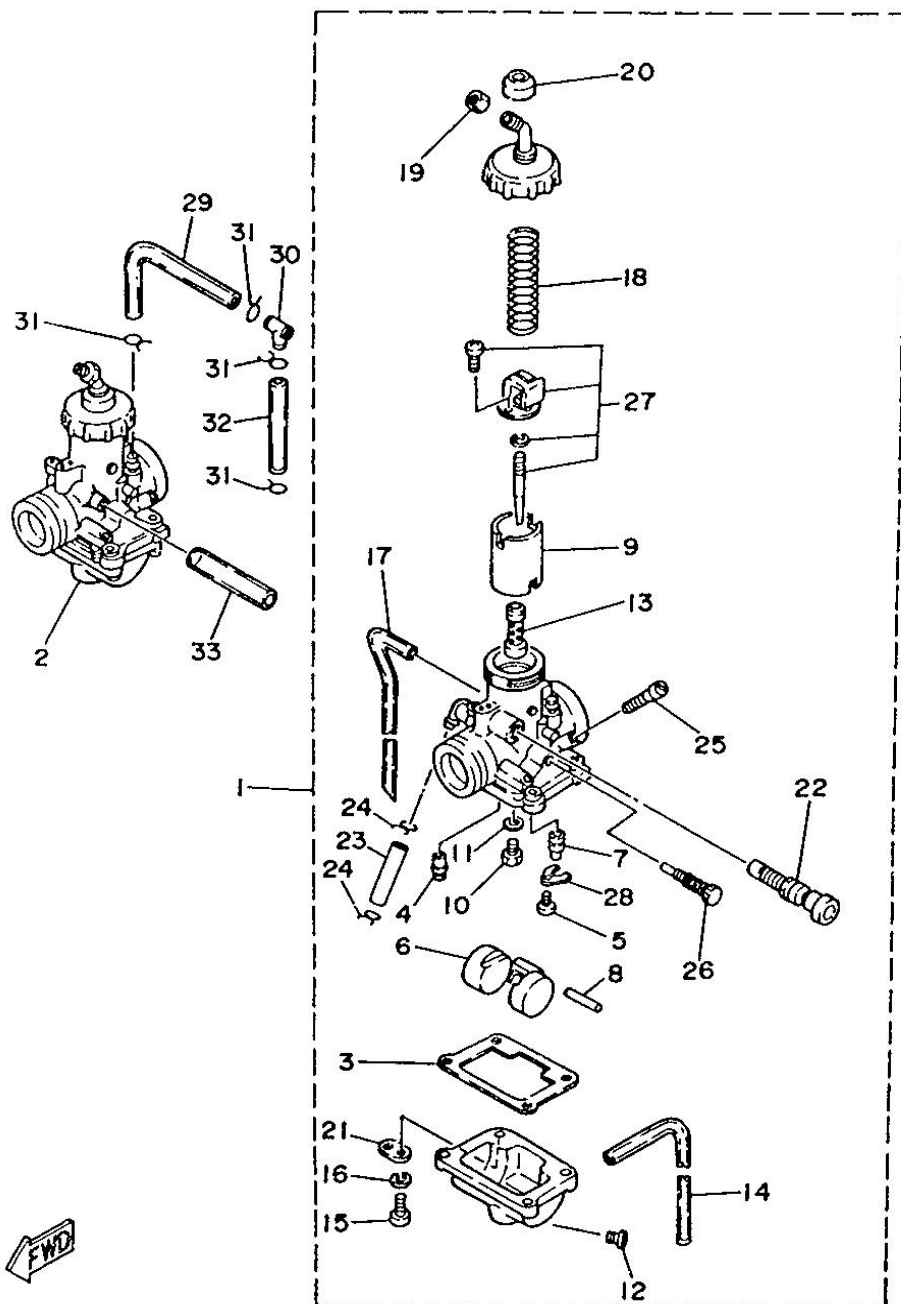[illegible]

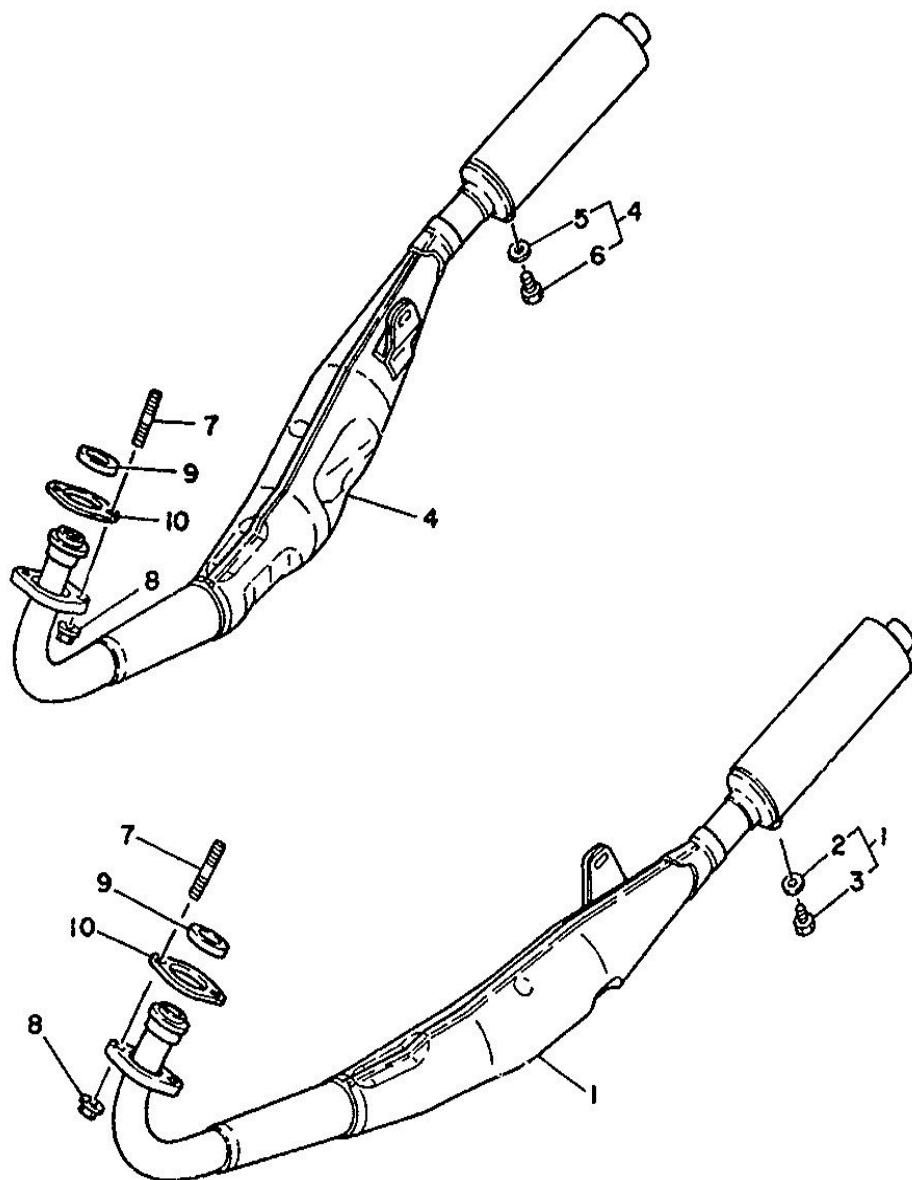

1WT310-6080

Fig. 08 EXHAUST

[illegible]


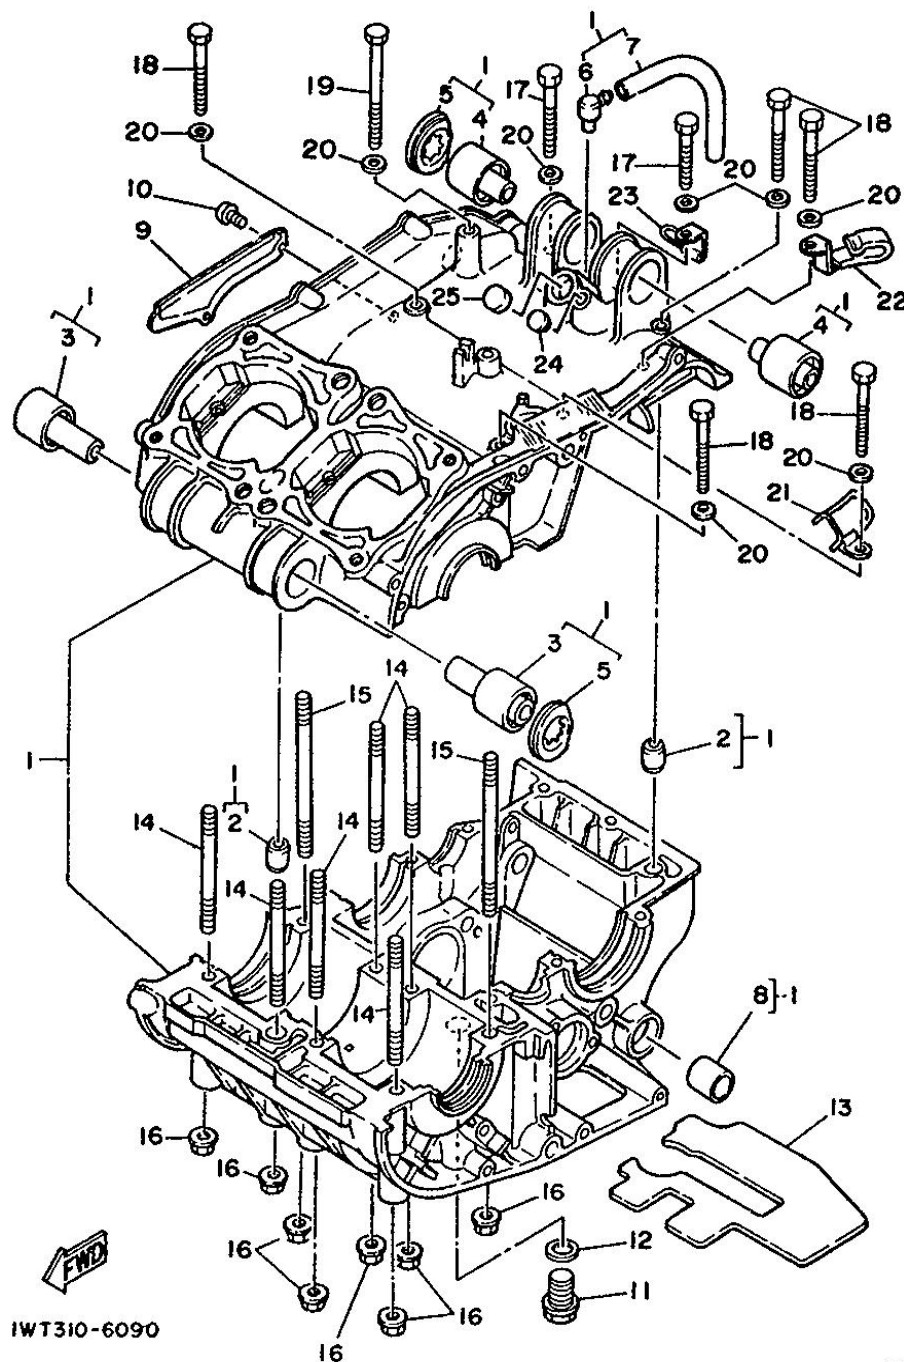


Fig. 09 CRANKCASE


N° réfèrent	Référence de la pièce	Description		Remarques
1	29L-15100-03	CRANKCASE ASSY	1	
2	99510-12016	.PIN, dowel	2	
3	4L0-15316-00	.DAMPER, engine mount 1	2	
4	4L0-15326-00	.DAMPER, engine mount 2	2	
5	4L0-15328-00	.SPACER, damper	2	
6	498-15371-00	.BREATHER	1	
7	90446-07112	.HOSE	1	
8	90383-12022	.BUSH, formed	1	
9	278-15492-01	COVER	1	
10	98501-05010	SCREW, pan head	2	
11	90340-14010	PLUG, straight screw	1	
12	137-15353-00	GASKET, drain	1	
13	48H-15337-00	DAMPER 4	1	
14	90116-08064	BOLT, stud	6	
15	90116-08232	BOLT, stud	2	
16	95701-08500	NUT, flange	8	
17	97311-06045	BOLT	2	
18	97311-06060	BOLT	5	
19	97311-06090	BOLT	1	
20	92901-06200	WASHER, plain	8	
21	90462-16130	CLAMP	1	
22	90465-08125	CLAMP	1	
23	90465-06094	CLAMP	1	
24	90338-05038	PLUG	1	
25	90338-16029	PLUG	1	

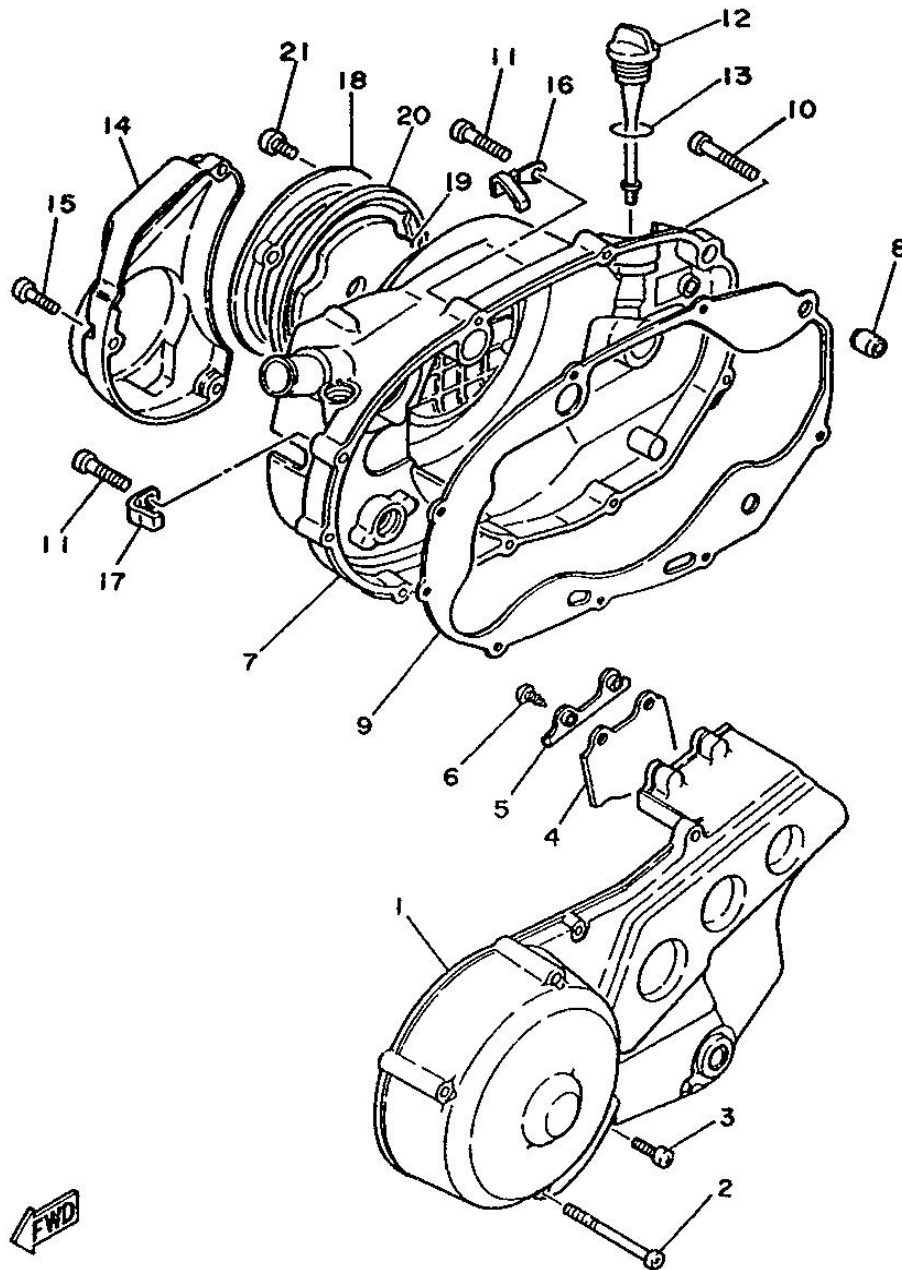

 48H110-5100

Fig. 10 CRANKCASE COVER 1

N° réfèrent	Référence de la pièce	Description		Remarques
1	29L-15410-00	CRANKCASE COVER ASSY 1	1	
2	92506-06055	SCREW, pan head	3	
3	92506-06020	SCREW, pan head	4	
4	1A0-15497-00	PLATE, dust seal	1	
5	1A0-15491-00	PROTECTOR	1	
6	97706-50512	SCREW, tapping	2	
7	29L-15421-00	COVER, crankcase 2	1	
8	99510-12016	PIN, dowel	1	
9	4L0-15461-01	GASKET, crankcase cover 2	1	
10	92506-06040	SCREW, pan head	1	
11	92506-06030	SCREW, pan head	8	
12	4L0-15362-00	PLUG, oil level	1	
13	93210-19123	O-RING	1	
14	48H-15420-00	CRANKCASE COVER ASSY 2	1	
15	92506-06020	SCREW, pan head	3	
16	90462-08071	CLAMP	1	
17	90462-08070	CLAMP	1	
18	29L-15431-00	COVER, crankcase 3	1	
19	31K-15317-00	SPACER, engine mount	1	
20	48H-15327-00	SPACER, engine mount	1	
21	98506-05014	SCREW, pan head	3	

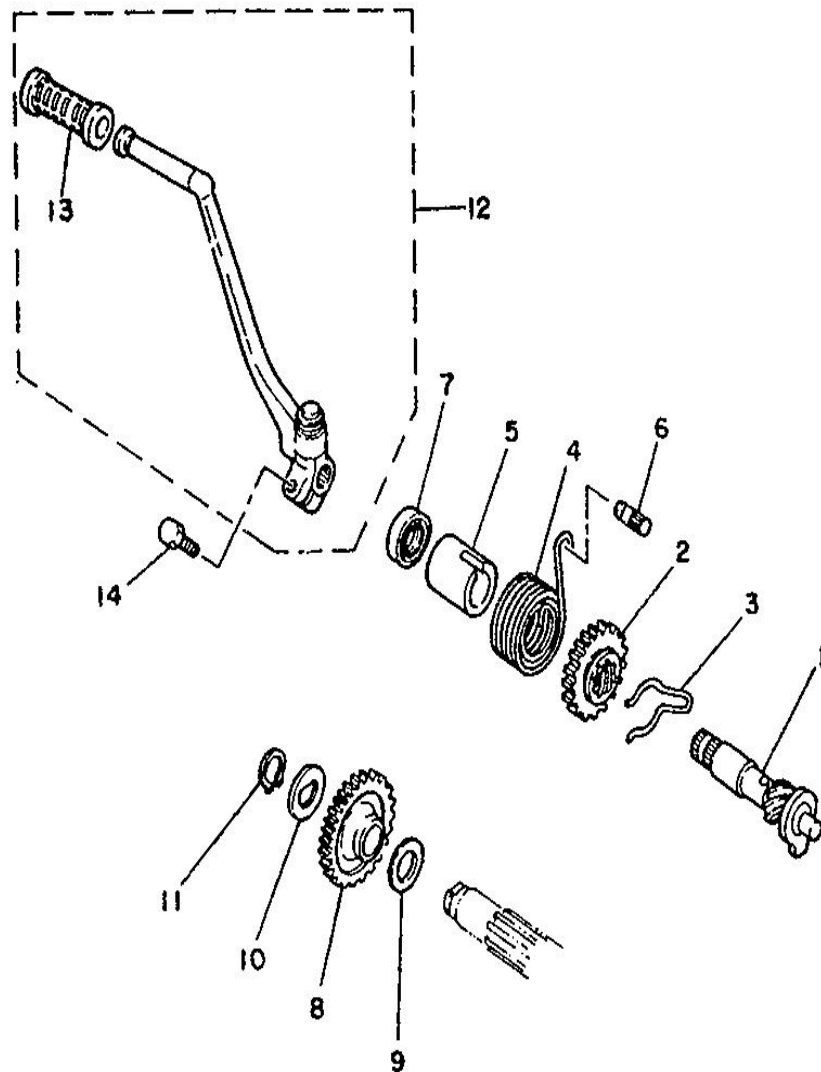

29L01C-3120

Fig. 11 STARTER

N° référé	Référence de la pièce	Description		Remarques
1	4L0-15660-00	KICK AXLE ASSY	1	
2	4L0-15641-00	GEAR, kick (22T)	1	
3	90468-26091	CLIP	1	
4	90508-30051	SPRING, torsion	1	
5	4L0-15666-00	SPACER	1	
6	248-15668-00	STOPPER	1	
7	93101-20048	OIL SEAL	1	
8	4L0-15651-00	GEAR, kick idle (26T)	1	
9	164-17417-00-10	SHIM 1 (1.0T)	1	UN
10	90214-15020	WASHER, claw	1	
11	99009-15400	CIRCLIP	1	
12	51L-15620-01	KICK CRANK ASSY	1	
13	156-15618-01	.COVER, kick lever	1	
14	97326-08030	BOLT	1	

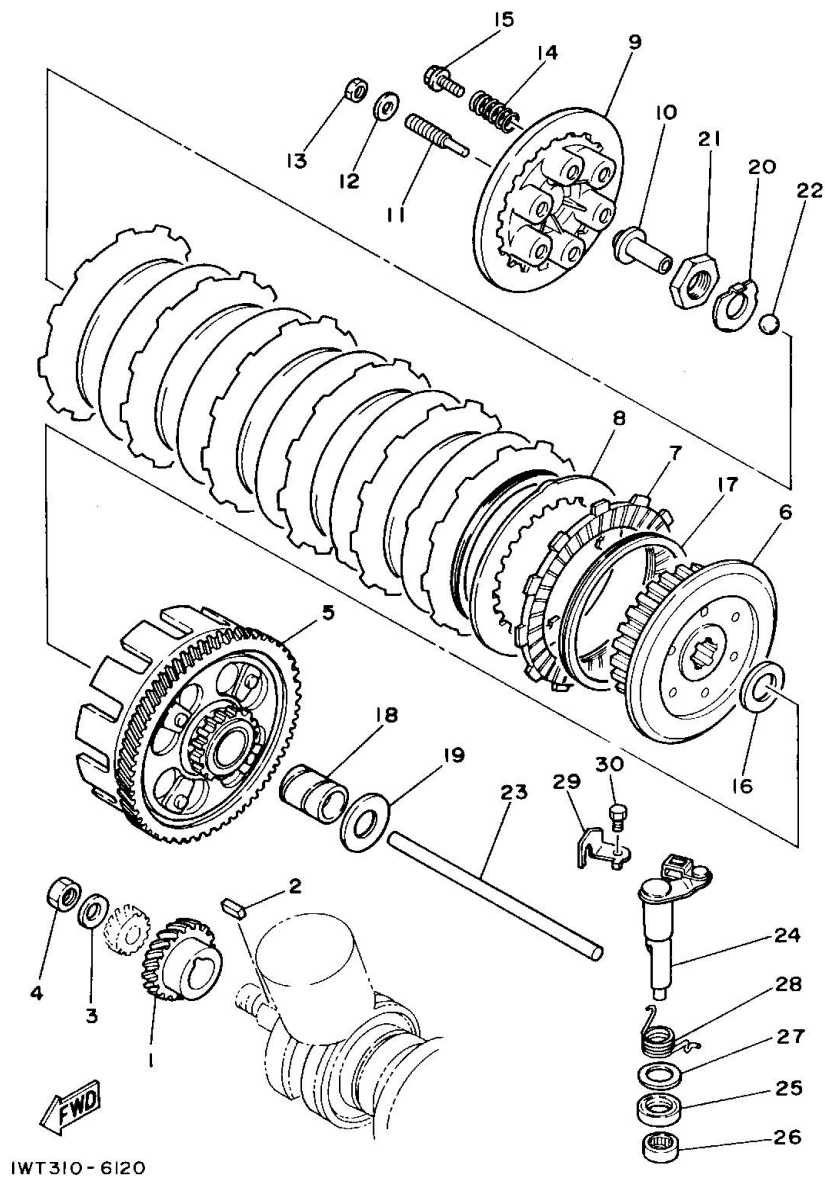


Fig. 12 CLUTCH

N° réfèrent	Référence de la pièce	Description		Remarques
1	4L0-16111-00	GEAR, primary drive (23T)	1	
2	90282-07023	KEY, straight	1	
3	90208-16019	WASHER, conical spring	1	
4	90170-16182	NUT	1	
5	31K-16150-10	PRIMARY DRIVEN GEAR COMP.	1	
6	1A0-16371-00	BOSS, clutch	1	
7	4L0-16321-01	PLATE, friction	7	
8	498-16325-00	PLATE, clutch 2	6	
9	29L-16351-00	PLATE, pressure 1	1	
10	29L-16356-00	ROD, push 1	1	
11	90149-08143	SCREW	1	
12	92901-08200	WASHER, plain	1	
13	95311-08700	NUT	1	
14	90501-23138	SPRING, compression	6	
15	90159-06016	SCREW, with washer	6	
16	360-16154-00	PLATE, thrust 1	1	
17	278-16367-00	RING, cushion	7	
18	278-16181-01	SPACER 1	1	
19	360-16154-00	PLATE, thrust 1	1	
20	90215-20223	WASHER, lock	1	
21	90170-20320	NUT	1	
22	93515-32029	BALL	1	
23	29L-16357-00	ROD, push 2	1	
24	29L-16380-00	PUSH LEVER ASSY	1	
25	93102-17004	OIL SEAL	1	
26	93315-11720	BEARING, cylindrical	1	
27	90201-17327	WASHER, plate	1	

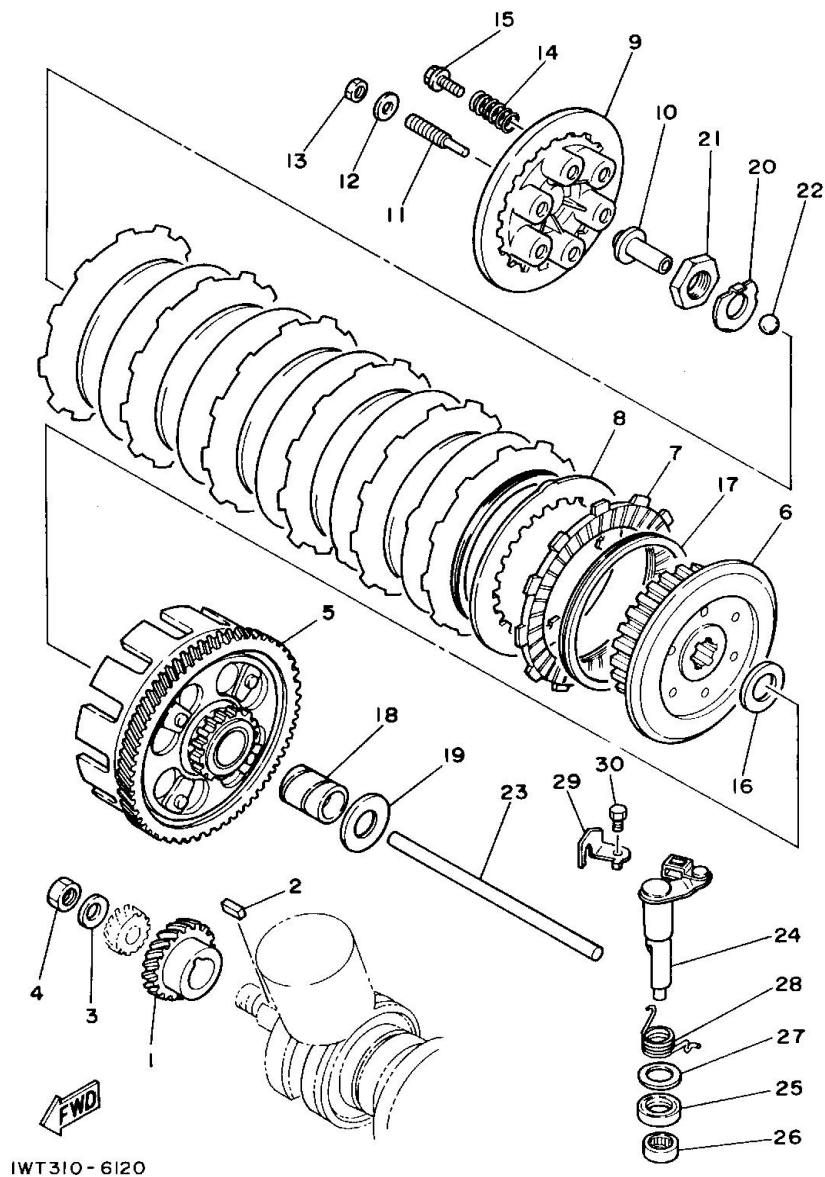


Fig. 12 CLUTCH

[illegible]


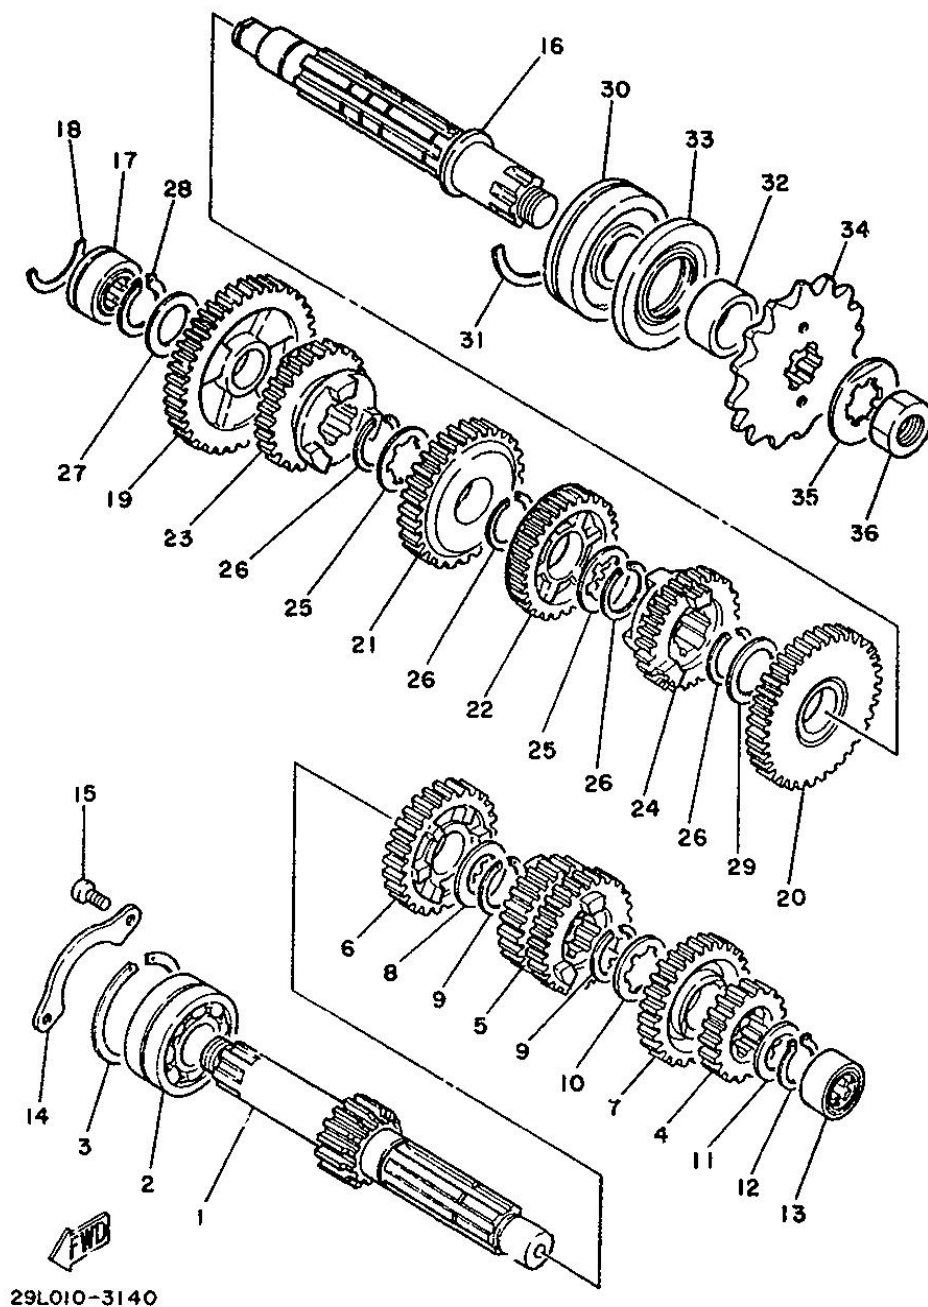


Fig. 13 TRANSMISSION

N° réfèrent	Référence de la pièce	Description		Remarques
1	29L-17411-00	AXLE, main (14T)	1	
2	93305-20502	BEARING (B5205)	1	
3	93440-52009	CIRCLIP	1	
4	29L-17121-00	GEAR, 2nd pinion (18T)	1	
5	29L-17131-00	GEAR, 3rd/4th pinion (22T, 24T)	1	
6	29L-17151-00	GEAR, 5th pinion (26T)	1	
7	29L-17161-00	GEAR, 6th pinion (27T)	1	
8	90201-25490	WASHER, plate	1	
9	93440-25084	CIRCLIP	2	
10	90209-21105	WASHER	1	
11	90201-20266	WASHER, plate (1.0T)	1	
12	99009-20400	CIRCLIP	1	
13	93311-22027	BEARING, cylindrical	1	
14	4L0-17471-00	PLATE, cover	1	
15	92501-06012	SCREW, pan head	2	
16	29L-17421-00	AXLE, drive	1	
17	93311-42045	BEARING, cylindrical	1	
18	278-17425-00	CIRCLIP 2	1	
19	4L0-17211-01	GEAR, 1st wheel (36T)	1	
20	4L0-17221-01	GEAR, 2nd wheel (32T)	1	
21	29L-17231-00	GEAR, 3rd wheel (29T)	1	
22	4L0-17241-01	GEAR, 4th wheel (26T)	1	
23	29L-17251-10	GEAR, 5th wheel (25T)	1	
24	29L-17261-10	GEAR, 6th wheel (24T)	1	
25	90209-21105	WASHER	2	
26	93440-25084	CIRCLIP	4	
27	90201-20276	WASHER, plate	1	

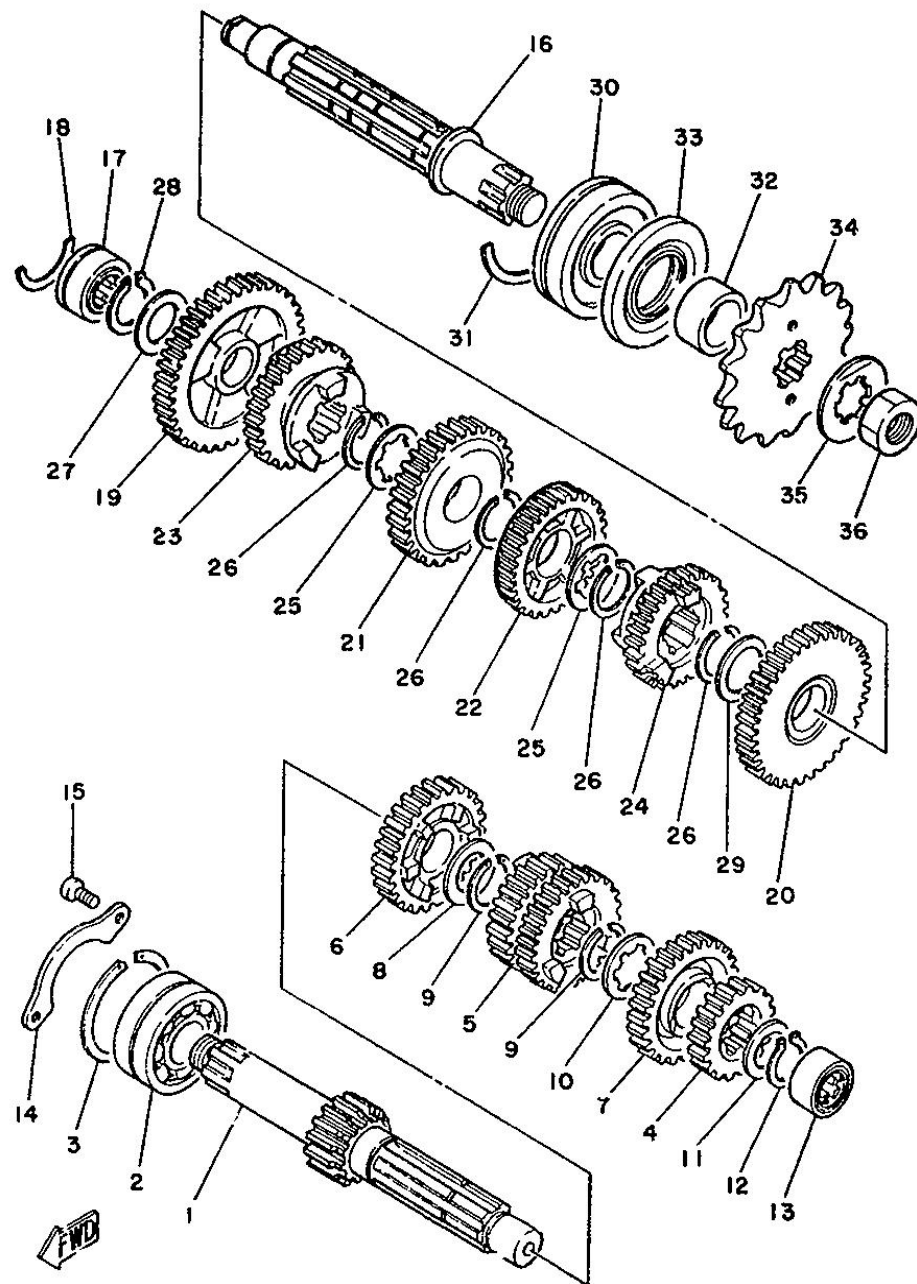

29L010-3140

Fig. 13 TRANSMISSION

[illegible]


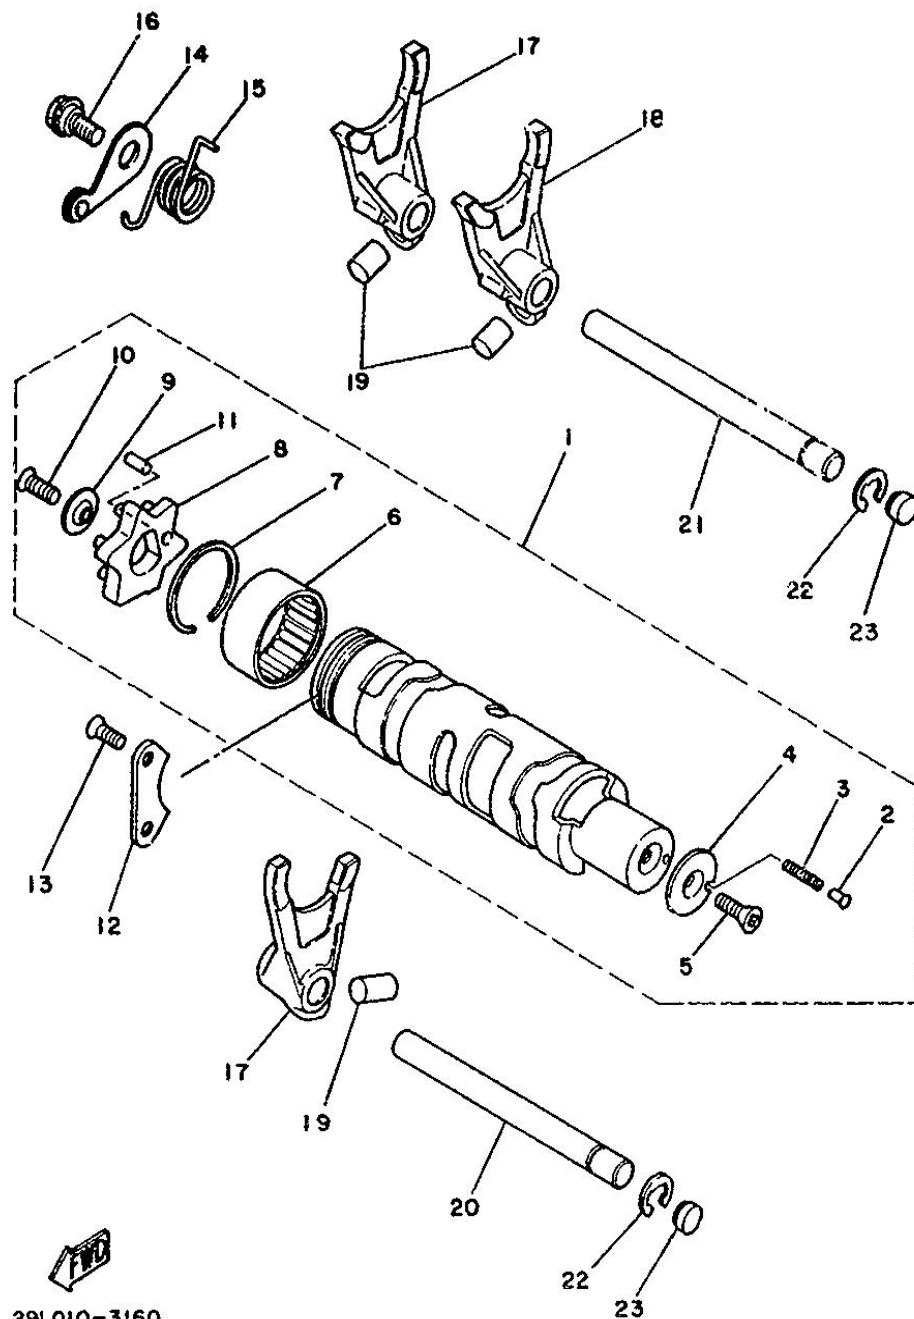


Fig. 14 SHIFT CAM & FORK

N° réfèrent	Référence de la pièce	Description		Remarques
1	29L-18540-00	SHIFT CAM ASSY	1	
2	278-18542-00	.POINT, neutral	1	
3	90501-06022	.SPRING, compression	1	
4	278-18566-00	.PLATE, side 2	1	
5	98701-05012	.SCREW, flat head	1	
6	93315-23612	.BEARING, cylindrical	1	
7	93440-34025	.CIRCLIP	1	
8	4L0-18185-00	.SEGMENT	1	
9	3R4-18561-00	.PLATE, side 1	1	
10	98701-05016	.SCREW, flat head	1	
11	93604-12037	.PIN, dowel	1	
12	4L0-18562-00	PLATE, stopper 2	1	
13	92701-06015	SCREW, flat head	2	
14	4L0-18140-00	STOPPER LEVER ASSY	1	
15	90508-26452	SPRING, torsion	1	
16	1W1-18177-00	BOLT, stopper	1	
17	4L0-18511-00	FORK, shift 1	2	
18	4L0-18512-00	FORK, shift 2	1	
19	90250-08017	PIN, straight	3	
20	4L0-18531-01	BAR, shift fork guide 1	1	
21	29L-18535-00	BAR, shift fork guide 2	1	
22	93430-08036	CIRCLIP	2	
23	90334-10014	PLUG, straight	2	

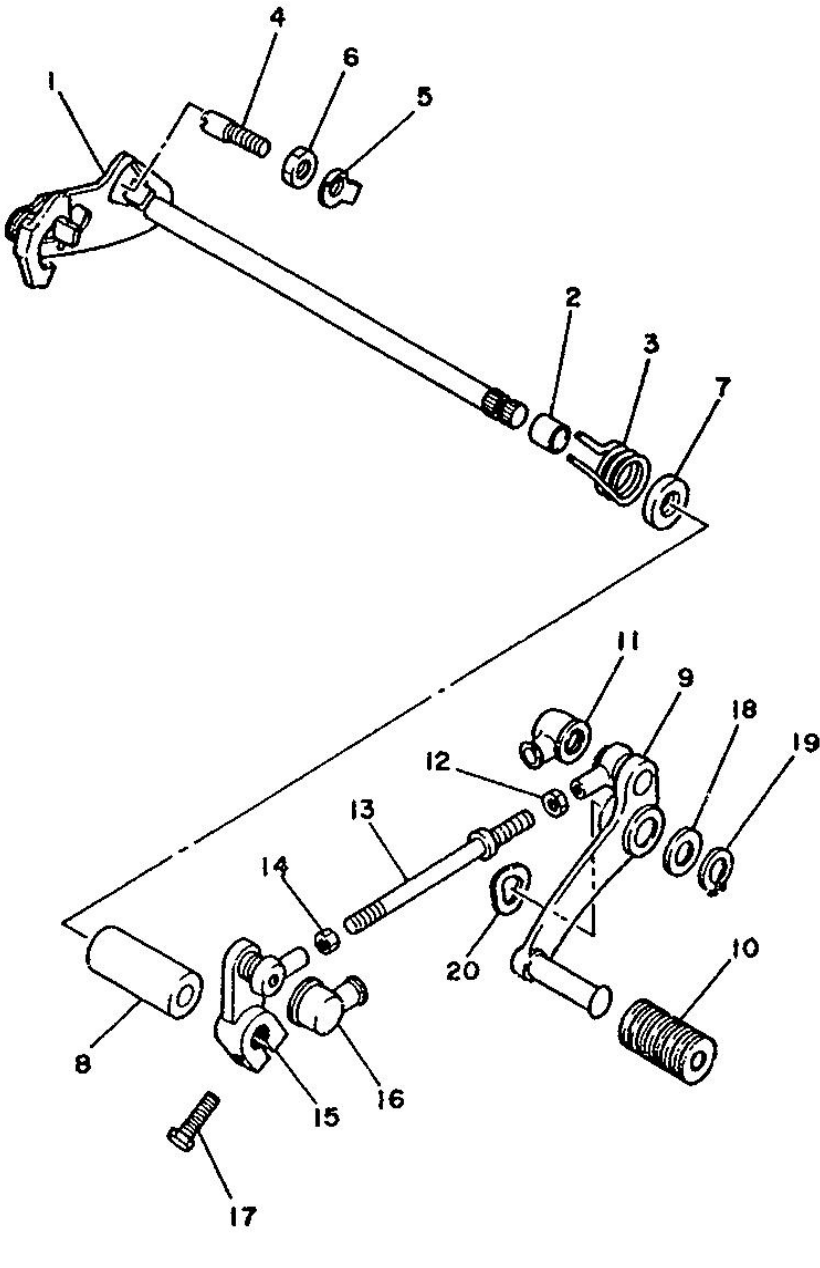


IWT310-6150

Fig. 15 SHIFT SHAFT

N° référé	Référence de la pièce	Description		Remarques
1	4L0-18101-00	SHIFT SHAFT ASSY	1	
2	90560-12171	SPACER	1	
3	90508-32374	SPRING, torsion	1	
4	90149-08094	SCREW	1	
5	90215-08174	WASHER, lock	1	
6	90170-08029	NUT	1	
7	93102-12106	OIL SEAL	1	
8	90387-125A8	COLLAR	1	
9	1UA-18111-00	PEDAL, shift	1	
10	132-18113-01	COVER, shift pedal	1	
11	2H9-18154-00	COVER, dust	1	
12	95306-06700	NUT	1	
13	1UA-18115-00	ROD, shift	1	
14	90170-06289	NUT	1	
15	1UA-18112-00	ARM, shift	1	
16	2H9-18154-00	COVER, dust	1	
17	97316-06020	BOLT	1	
18	90201-122A7	WASHER, plate	1	
19	99009-12400	CIRCLIP	1	
20	90206-12074	WASHER, wave	1	


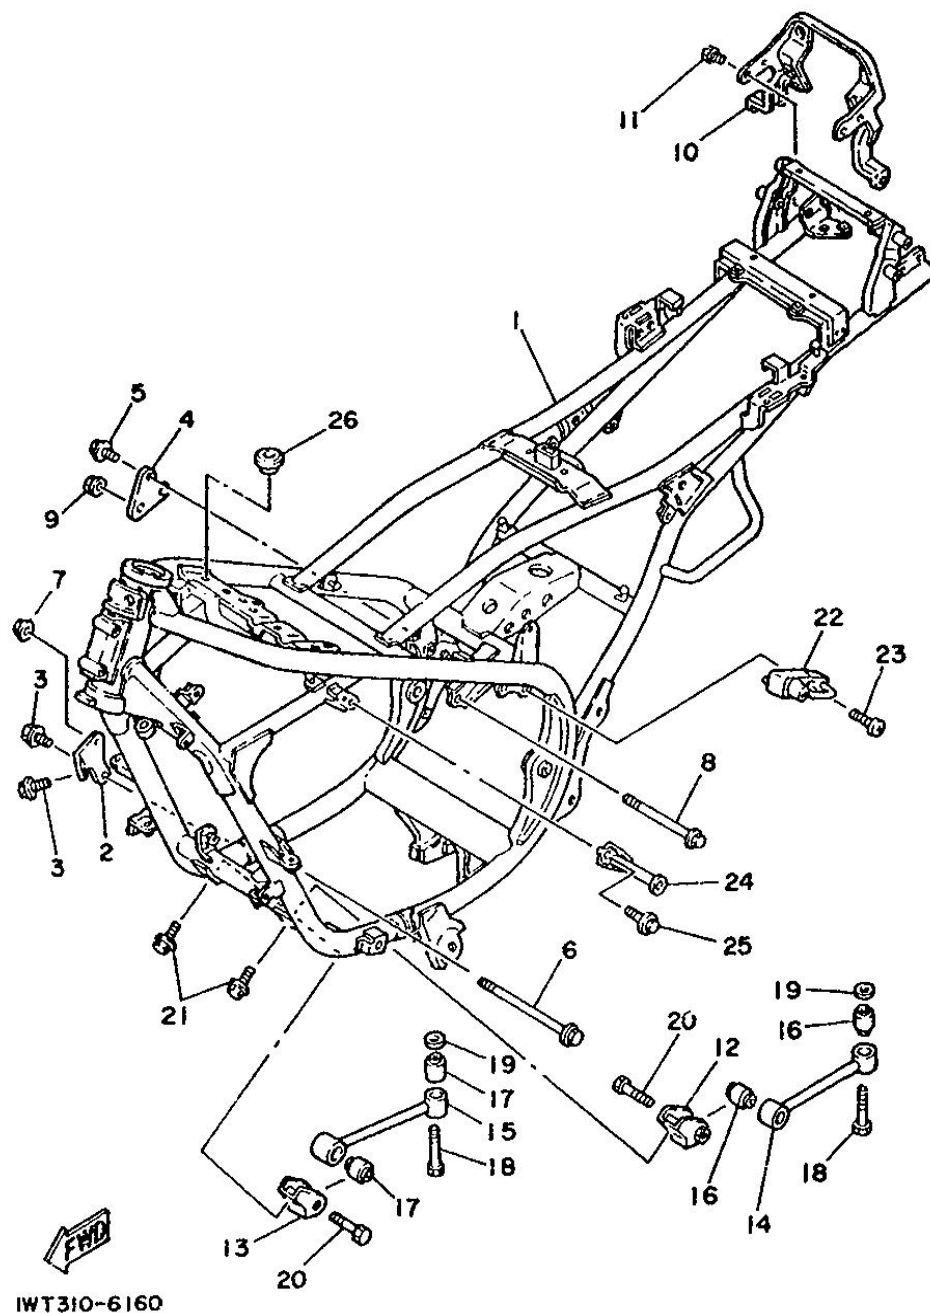


Fig. 16 FRAME

N° réfèrent	Référence de la pièce	Description		Remarques
1	1WT-21110-00-33	FRAME COMP.	1	YAMAHA BLACK
2	29L-21315-01	STAY, engine 2	1	
3	95023-08016	BOLT, flange	2	
4	29L-21316-00	STAY, engine 3	1	
5	95023-08016	BOLT, flange	2	
6	95021-10150	BOLT, flange	1	
7	95701-10500	NUT, flange	1	
8	95021-10115	BOLT, flange	1	
9	95701-10500	NUT, flange	1	
10	1UA-21260-00	REAR FENDER BRACKET COMP.	1	
11	98002-06010	BOLT	4	
12	4L0-21317-00	STAY, engine 4	1	
13	4L0-21318-00	STAY, engine 5	1	
14	1UA-21314-00	STAY, engine 1	1	
15	1UA-21319-00	STAY, engine 6	1	
16	4L0-21485-00	DAMPER, rubber 1	2	
17	4L0-21485-00	DAMPER, rubber 1	2	
18	98001-10040	BOLT	2	
19	92990-10600	WASHER, plate	2	
20	98001-10040	BOLT	2	
21	95806-08012	BOLT, flange	2	
22	47X-21308-00	HELMET HANGER ASSY	1	
23	90149-06154	SCREW	1	
24	1WT-28359-00	STAY 2	2	
25	91006-06010	BOLT, flange	2	
26	137-24181-00	DAMPER, locating 1	1	

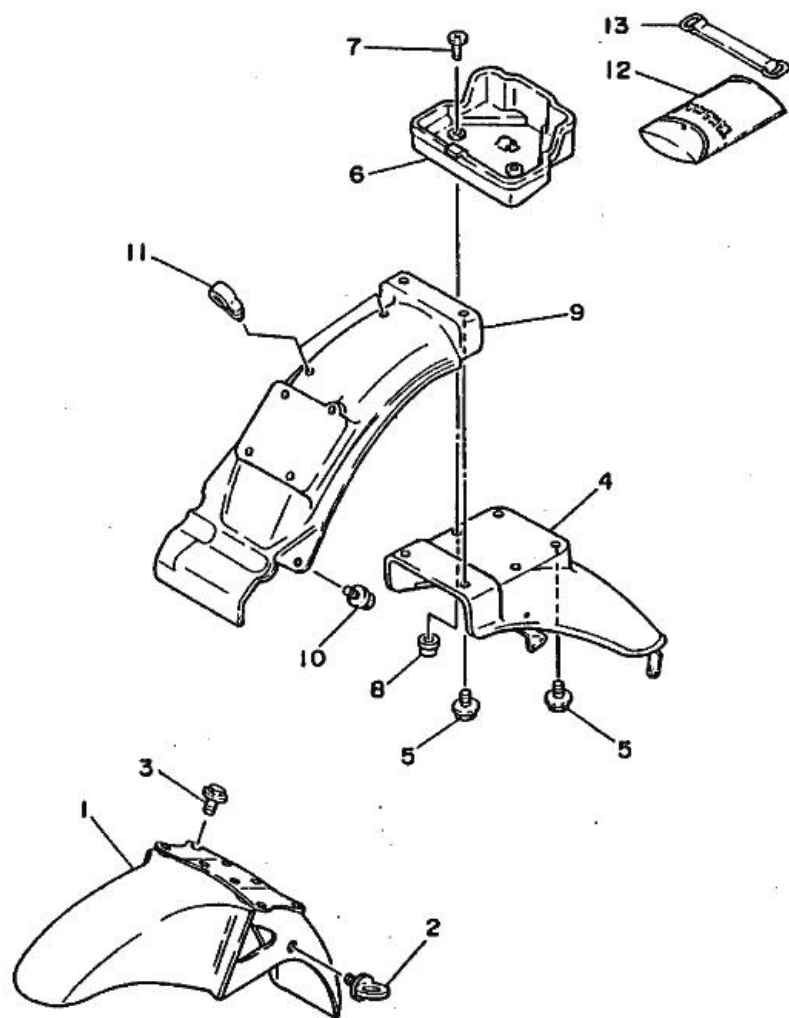

IWV171-6170

Fig. 17 FENDER

[illegible]


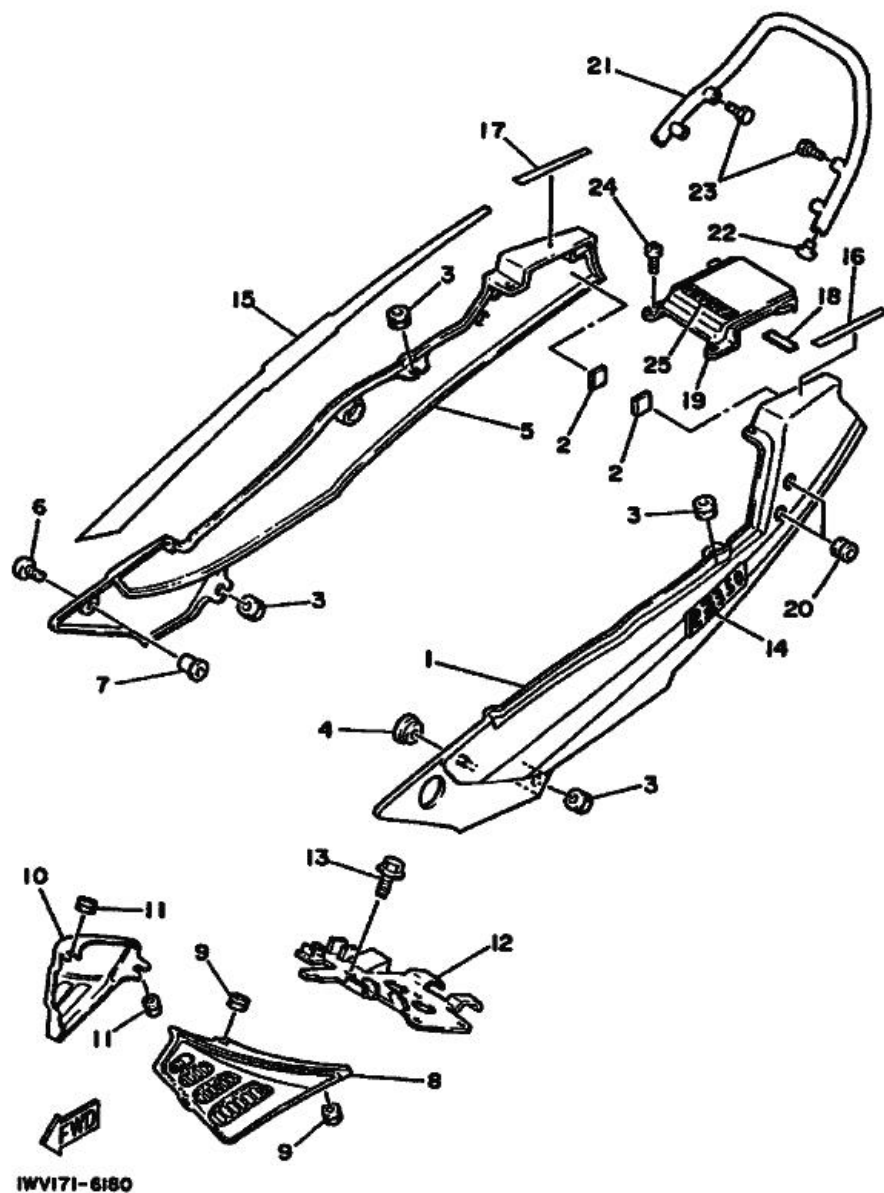


Fig. 18 SIDE COVER

N° réf.	Référence de la pièce	Description		Remarques
1	1UA-21711-00-GE	COVER, side 1	1	SILKY WHITE
2	4J2-21778-00	DAMPER, locating 1	2	
3	90480-12053	GROMMET	4	
4	90480-13426	GROMMET	1	
5	1UA-21721-00-GE	COVER, side 2	1	SILKY WHITE
6	90110-06090	BOLT, hexagon socket head	1	
7	90179-06520	NUT	1	
8	29L-21731-00	COVER, side 3	1	
9	90480-12014	GROMMET	2	
10	29L-21741-00	COVER, side 4	1	
11	90480-12014	GROMMET	2	
12	1UA-21243-00	PLATE, bridge	1	
13	90119-06042	BOLT, with washer	2	
14	1WV-2173E-00	GRAPHIC 1	1	
15	1WV-2173F-00	GRAPHIC 2	1	
16	1WT-2174G-00	GRAPHIC 3	1	FOR SW
17	1WT-2174H-00	GRAPHIC 4	1	FOR SW
18	50W-2639G-00	SEAL	1	
19	1UA-21651-00-AJ	COVER, rear fender	1	STORMY RED
20	90480-19453	GROMMET	4	
21	1UA-21645-00	STAY, rear	1	
22	1J3-24742-00	GROMMET	2	
23	98006-08035	BOLT	4	
24	98906-06016	SCREW, bind	2	
25	1XG-2163G-00	EMBLEM 1	1	

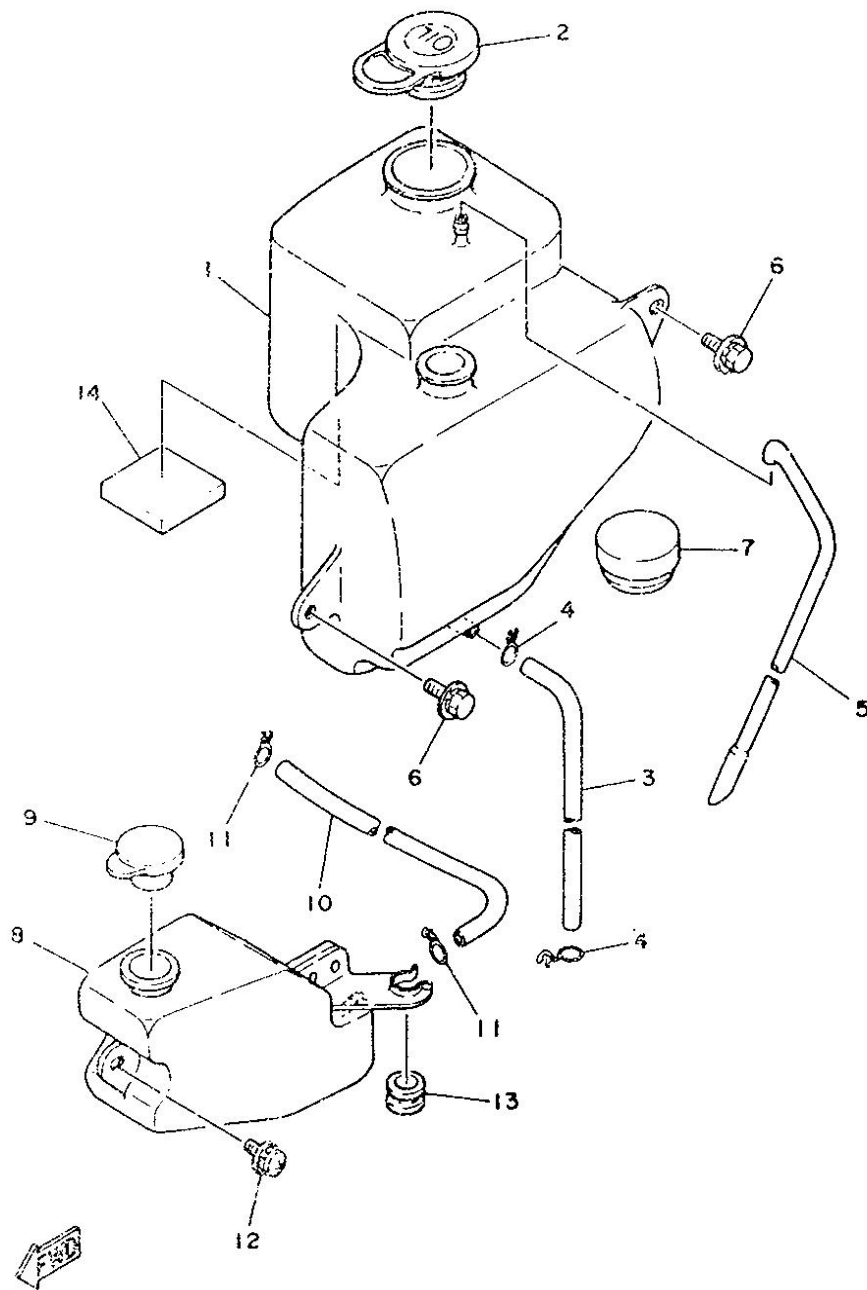

(WV:7)-6190

2000, 2001, 2002, 2003, 2004, 2005, 2006, 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015, 2016, 2017, 2018, 2019, 2020, 2021, 2022, 2023, 2024, 2025, 2026, 2027, 2028, 2029, 2030, 2031, 2032, 2033, 2034, 2035, 2036, 2037, 2038, 2039, 2040, 2041, 2042, 2043, 2044, 2045, 2046, 2047, 2048, 2049, 2050, 2051, 2052, 2053, 2054, 2055, 2056, 2057, 2058, 2059, 2060, 2061, 2062, 2063, 2064, 2065, 2066, 2067, 2068, 2069, 2070, 2071, 2072, 2073, 2074, 2075, 2076, 2077, 2078, 2079, 2080, 2081, 2082, 2083, 2084, 2085, 2086, 2087, 2088, 2089, 2090, 2091, 2092, 2093, 2094, 2095, 2096, 2097, 2098, 2099, 2100, 2101, 2102, 2103, 2104, 2105, 2106, 2107, 2108, 2109, 2110, 2111, 2112, 2113, 2114, 2115, 2116, 2117, 2118, 2119, 2120, 2121, 2122, 2123, 2124, 2125, 2126, 2127, 2128, 2129, 2130, 2131, 2132, 2133, 2134, 2135, 2136, 2137, 2138, 2139, 2140, 2141, 2142, 2143, 2144, 2145, 2146, 2147, 2148, 2149, 2150, 2151, 2152, 2153, 2154, 2155, 2156, 2157, 2158, 2159, 2160, 2161, 2162, 2163, 2164, 2165, 2166, 2167, 2168, 2169, 2170, 2171, 2172, 2173, 2174, 2175, 2176, 2177, 2178, 2179, 2180, 2181, 2182, 2183, 2184, 2185, 2186, 2187, 2188, 2189, 2190, 2191, 2192, 2193, 2194, 2195, 2196, 2197, 2198, 2199, 2200, 2201, 2202, 2203, 2204, 2205, 2206, 2207, 2208, 2209, 2210, 2211, 2212, 2213, 2214, 2215, 2216, 2217, 2218, 2219, 2220, 2221, 2222, 2223, 2224, 2225, 2226, 2227, 2228, 2229, 2230, 2231, 2232, 2233, 2234, 2235, 2236, 2237, 2238, 2239, 2240, 2241, 2242, 2243, 2244, 2245, 2246, 2247, 2248, 2249, 2250, 2251, 2252, 2253, 2254, 2255, 2256, 2257, 2258, 2259, 2260, 2261, 2262, 2263, 2264, 2265, 2266, 2267, 2268, 2269, 2270, 2271, 2272, 2273, 2274, 2275, 2276, 2277, 2278, 2279, 2280, 2281, 2282, 2283, 2284, 2285, 2286, 2287, 2288, 2289, 2290, 2291, 2292, 2293, 2294, 2295, 2296, 2297, 2298, 2299, 2300, 2301, 2302, 2303, 2304, 2305, 2306, 2307, 2308, 2309, 2310, 2311, 2312, 2313, 2314, 2315, 2316, 2317, 2318, 2319, 2320, 2321, 2322, 2323, 2324, 2325, 2326, 2327, 2328, 2329, 2330, 2331, 2332, 2333, 2334, 2335, 2336, 2337, 2338, 2339, 2340, 2341, 2342, 2343, 2344, 2345, 2346, 2347, 2348, 2349, 2350, 2351, 2352, 2353, 2354, 2355, 2356, 2357, 2358, 2359, 2360, 2361, 2362, 2363, 2364, 2365, 2366, 2367, 2368, 2369, 2370, 2371, 2372, 2373, 2374, 2375, 2376, 2377, 2378, 2379, 2380, 2381, 2382, 2383, 2384, 2385, 2386, 2387, 2388, 2389, 2390, 2391, 2392, 2393, 2394, 2395, 2396, 2397, 2398, 2399, 2400, 2401, 2402, 2403, 2404, 2405, 2406, 2407, 2408, 2409, 2410, 2411, 2412, 2413, 2414, 2415, 2416, 2417, 2418, 2419, 2420, 2421, 2422, 2423, 2424, 2425, 2426, 2427, 2428, 2429, 2430, 2431, 2432, 2433, 2434, 2435, 2436, 2437, 2438, 2439, 2440, 2441, 2442, 2443, 2444, 2445, 2446, 2447, 2448, 2449, 2450, 2451, 2452, 2453, 2454, 2455, 2456, 2457, 2458, 2459, 2460, 2461, 2462, 2463, 2464, 2465, 2466, 2467, 2468, 2469, 2470, 2471, 2472, 2473, 2474, 2475, 2476, 2477, 2478, 2479, 2480, 2481, 2482, 2483, 2484, 2485, 2486, 2487, 2488, 2489, 2490, 2491, 2492, 2493, 2494, 2495, 2496, 2497, 2498, 2499, 2500, 2501, 2502, 2503, 2504, 2505, 2506, 2507, 2508, 2509, 2510, 2511, 2512, 2513, 2514, 2515, 2516, 2517, 2518, 2519, 2520, 2521, 2522, 2523, 2524, 2525, 2526, 2527, 2528, 2529, 2530, 2531, 2532, 2533, 2534, 2535, 2536, 2537, 2538, 2539, 2540, 2541, 2542, 2543, 2544, 2545, 2546, 2547, 2548, 2549, 2550, 2551, 2552, 2553, 2554, 2555, 2556, 2557, 2558, 2559, 2560, 2561, 2562, 2563, 2564, 2565, 2566, 2567, 2568, 2569, 2570, 2571, 2572, 2573, 2574, 2575, 2576, 2577, 2578, 2579, 2580, 2581, 2582, 2583, 2584, 2585, 2586, 2587, 2588, 2589, 2590, 2591, 2592, 2593, 2594, 2595, 2596, 2597, 2598, 2599, 2600, 2601, 2602, 2603, 2604, 2605, 2606, 2607, 2608, 2609, 2610, 2611, 2612, 2613, 2614, 2615, 2616, 2617, 2618, 2619, 2620, 2621, 2622, 2623, 2624, 2625, 2626, 2627, 2628, 2629, 2630, 2631, 2632, 2633, 2634, 2635, 2636, 2637, 2638, 2639, 2640, 2641, 2642, 2643, 2644, 2645, 2646, 2647, 2648, 2649, 2650, 2651, 2652, 2653, 2654, 2655, 2656, 2657, 2658, 2659, 2660, 2661, 2662, 2663, 2664, 2665, 2666, 2667, 2668, 2669, 2670, 2671, 2672, 2673, 2674, 2675, 2676, 2677, 2678, 2679, 2680, 2681, 26

1997

Fig. 19 OIL TANK

N° référé	Référence de la pièce	Description		Remarques
1	29L-21751-01	TANK, oil	1	
2	10V-21771-00	BODY, cap	1	
3	29L-24316-00	PIPE 6	1	
4	90467-08003	CLIP	2	
5	29L-24317-00	PIPE 7	1	
6	90119-06044	BOLT, with washer	2	
7	29L-21746-00	DAMPER	1	
8	29L-21870-00	RECOVERY TANK ASSY	1	
9	4L0-21815-01	CAP	1	
10	29L-21766-00	PIPE, oil	1	
11	90467-10008	CLIP	2	
12	90159-06060	SCREW, with washer	1	
13	90480-12014	GROMMET	1	
14	2X6-24183-00	DAMPER	1	


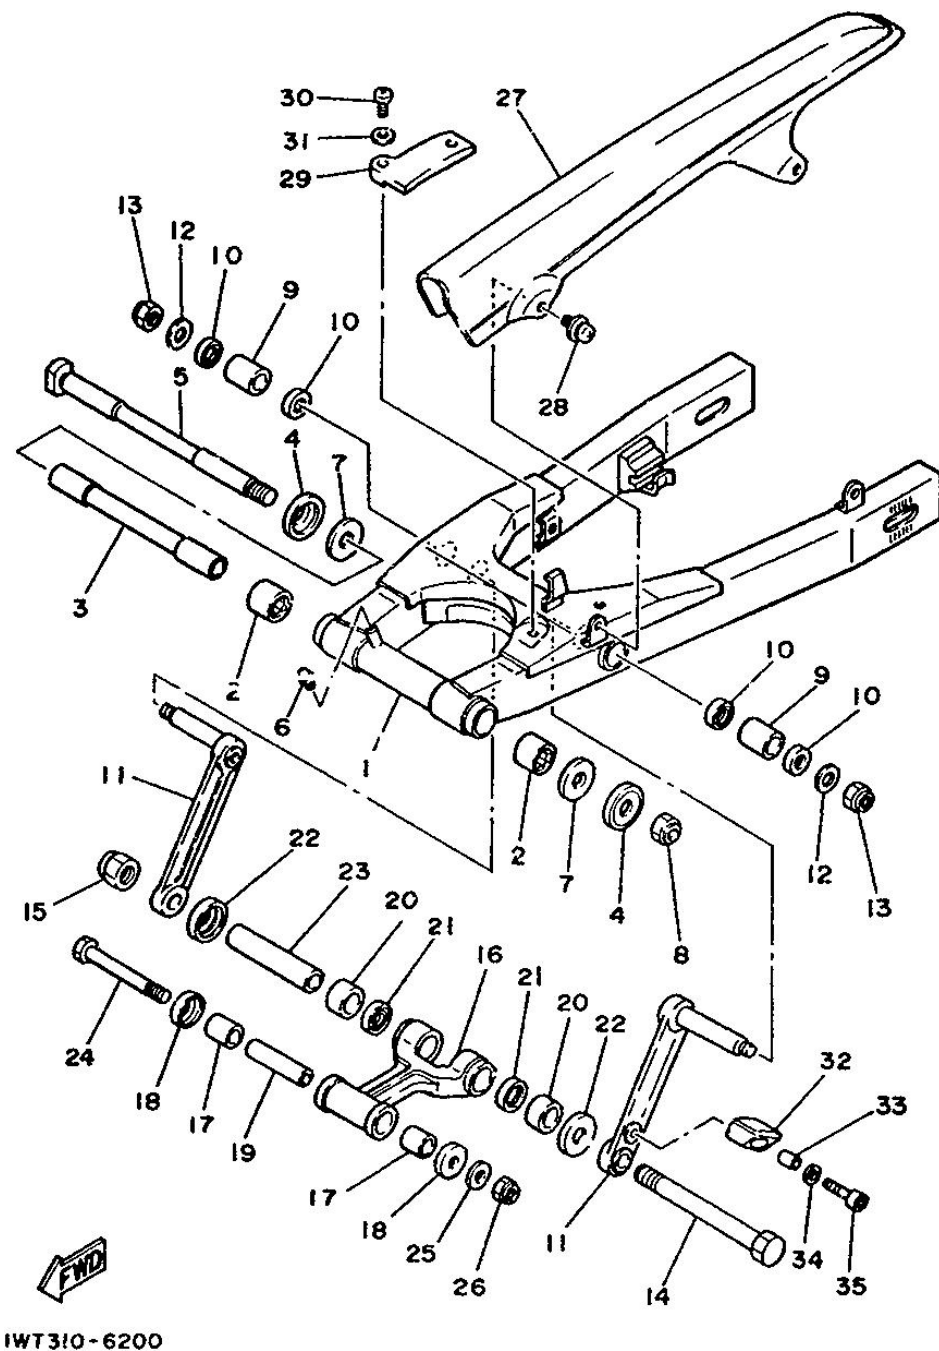


Fig. 20 REAR ARM


N° référé	Référence de la pièce	Description		Remarques
1	51L-22110-00-35	REAR ARM COMP.	1	SILVER
2	93320-32403	BEARING	2	
3	51L-22184-00	BUSH	1	
4	4X7-22129-00	COVER, thrust 2	2	
5	29L-22141-00	SHAFT, pivot	1	
6	93700-06004	NIPPLE, grease	1	
7	90201-161J3	WASHER, plate	2	
8	90185-14070	NUT, self-locking	1	
9	90386-18136	BUSH	2	
10	93109-18020	OIL SEAL	4	
11	31K-2217M-00	ARM 1	2	
12	90201-12191	WASHER, plate	2	
13	95601-12100	NUT, u	2	
14	90101-14654	BOLT	1	
15	90185-14137	NUT, self-locking	1	
16	31K-2217A-00	ARM, relay	1	
17	90386-18118	BUSH	2	
18	26H-22129-00	COVER, thrust 2	2	
19	90387-127H2	COLLAR	1	
20	90386-20134	BUSH	2	
21	93109-20029	OIL SEAL	2	
22	26H-22128-00	COVER, thrust 1	2	
23	90387-144H4	COLLAR	1	
24	90109-10739	BOLT	1	
25	90201-10126	WASHER, plate	1	
26	95602-10100	NUT, u	1	
27	29L-22311-00	CASE, chain	1	

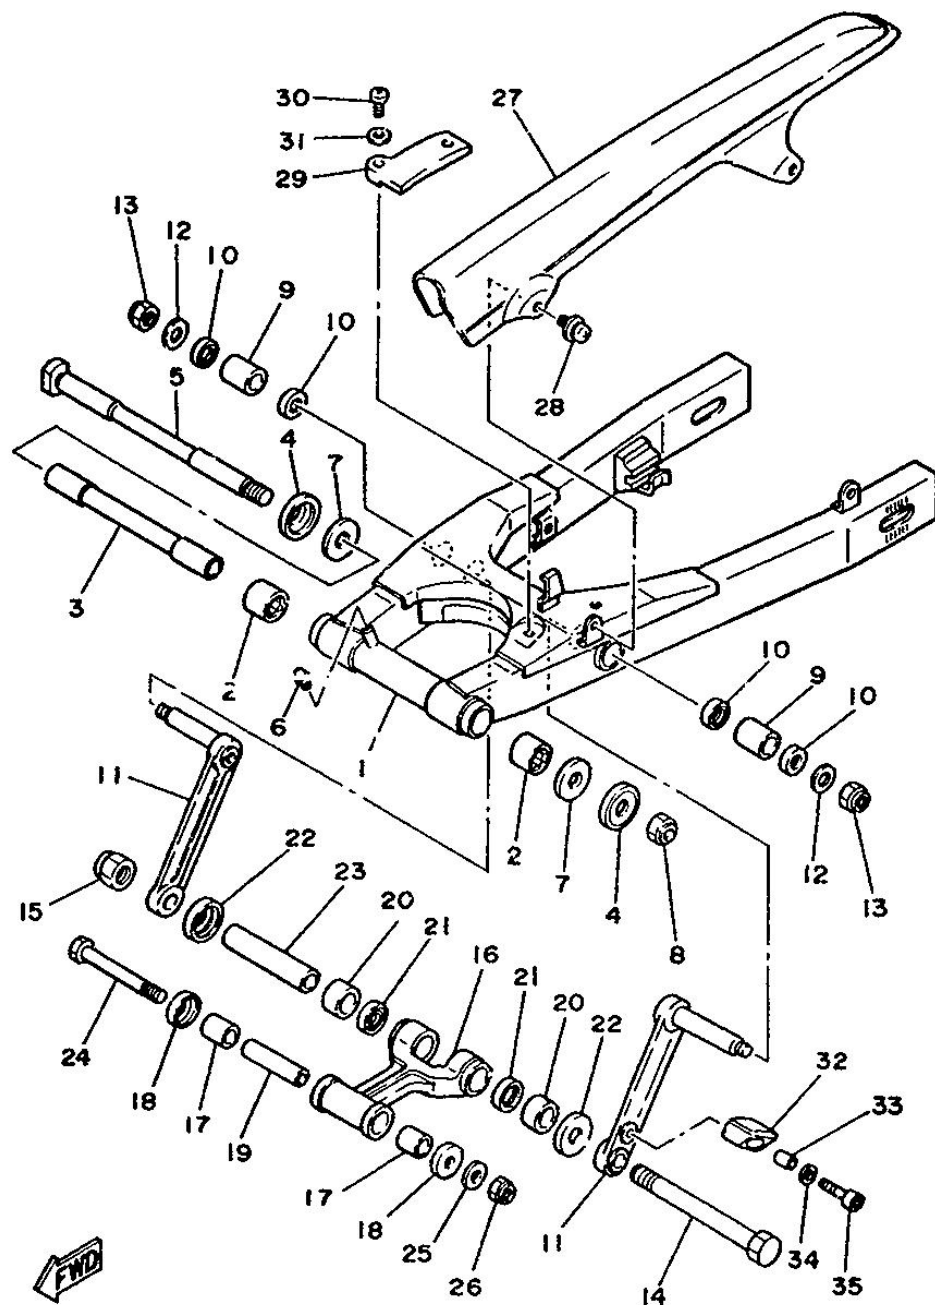

IWT310-6200

Fig. 20 REAR ARM

[illegible]

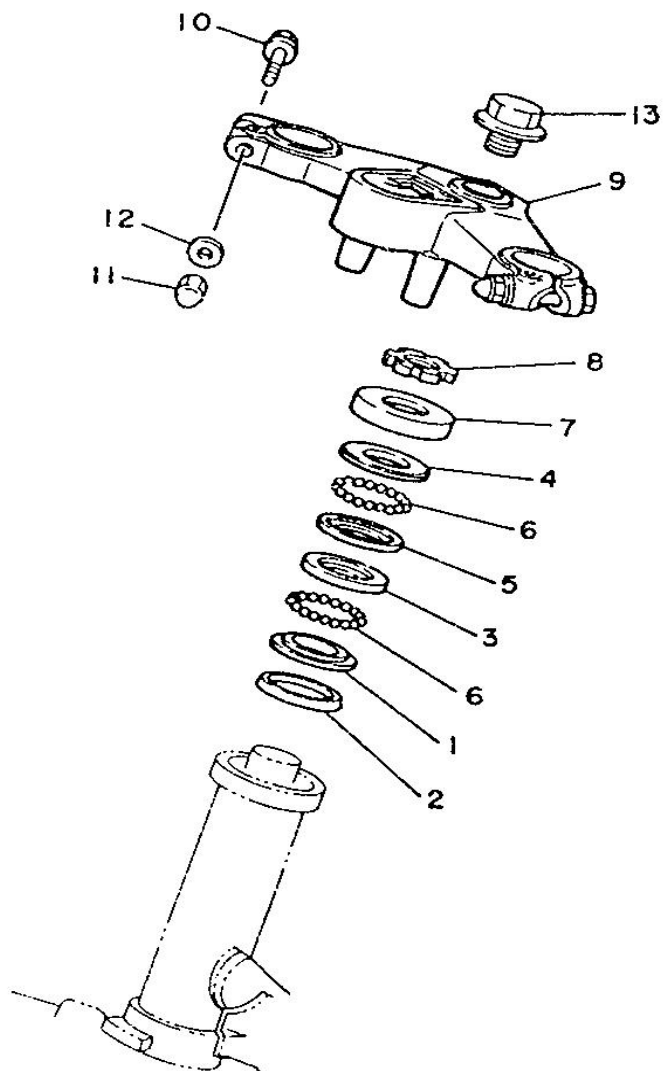

iWT310-6220

Fig. 22 STEERING

N° référé	Référence de la pièce	Description		Remarques
1	156-23411-00	RACE, ball 1	1	
2	164-23462-00	SEAL, steering	1	
3	156-23412-00	RACE, ball 2	1	
4	183-23411-00	RACE, ball 1	1	
5	183-23412-00	RACE, ball 2	1	
6	93501-04011	BALL	38	
7	4K0-23415-00	COVER, ball race 1	1	
8	90179-25495	NUT	1	
9	1UA-23435-00-98	CROWN, handle	1	LOW GLOSS BLACK
10	91026-08050	BOLT, flange	2	
11	95306-08800	NUT	2	
12	92906-08600	WASHER, plate	2	
13	90105-14365	BOLT, washer based	1	

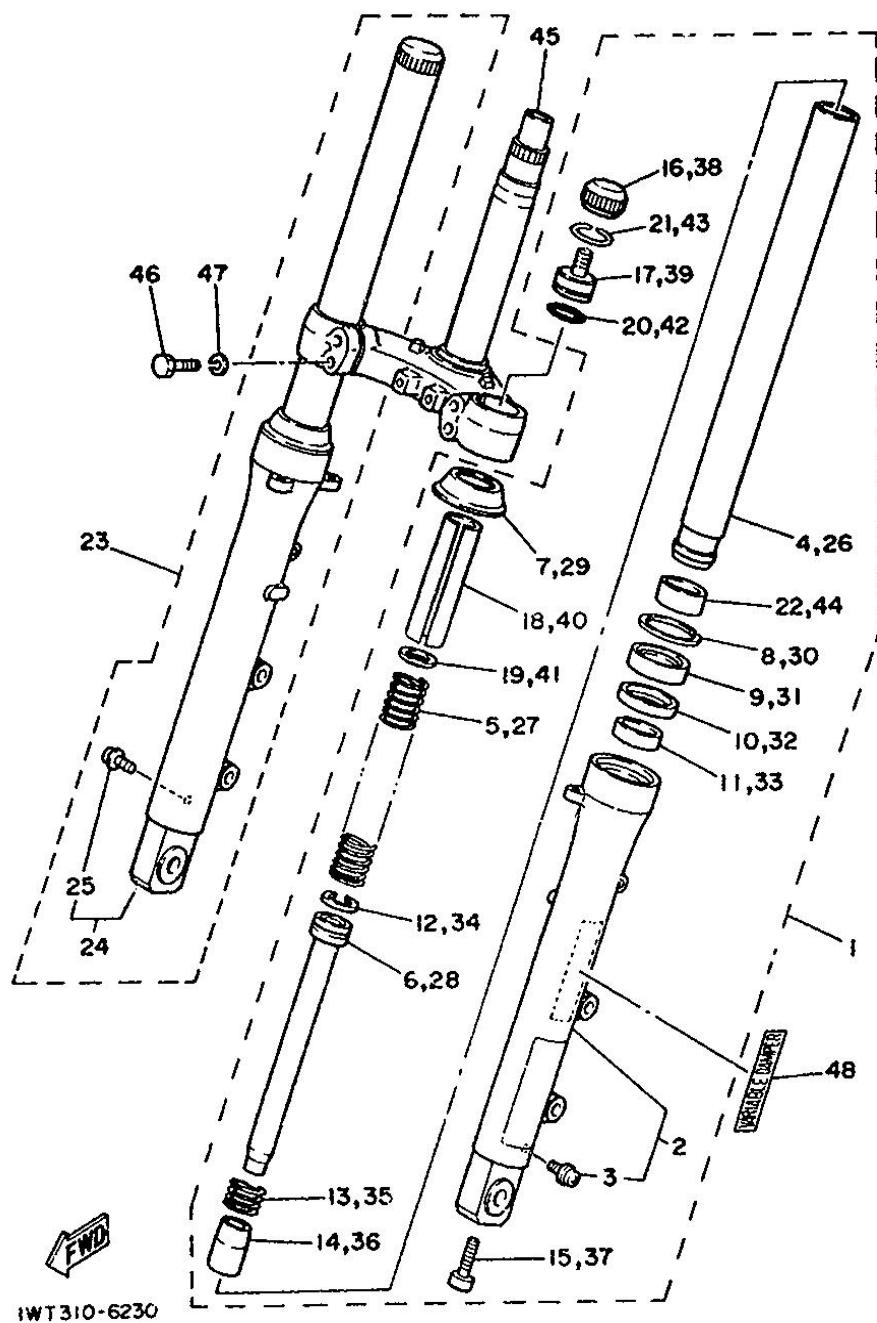


Fig. 23 FRONT FORK

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-23102-00	FRONT FORK ASSY (L.H)	1	
2	51L-23126-00-38	.TUBE, outer 1	1	CLEAR BUFFING
3	1E7-23119-00	..PLUG, drain	1	
4	1UA-23110-00	.INNER TUBE COMP. 1	1	
5	1UA-23141-00	.SPRING, front fork	1	
6	1UA-23171-00	.PISTON, front fork	1	
7	1UA-23144-00	.SEAL, dust	1	
8	34X-23156-00	.CLIP, oil seal	1	
9	1UA-23145-00	.OIL SEAL	1	
10	10V-23147-00	.O-RING	1	
11	51L-23125-00	.METAL, slide 1	1	
12	51L-23157-00	.RING, piston	1	
13	51L-23151-00	.SPRING, rebound	1	
14	10V-23166-00	.SPACER, oil lock	1	
15	3M7-23181-00	.BOLT, hexagon socket head	1	
16	1UA-23168-00	.CAP, front fork	1	
17	1UA-23111-00	.BOLT, cap	1	
18	51L-23118-00	.SPACER	1	
19	51L-23142-00	.SEAT, spring upper	1	
20	1UA-23147-00	.O-RING	1	
21	1UA-23153-00	.RING, snap	1	
22	10V-23135-00	.METAL, slide 2	1	
23	1UA-23103-00	FRONT FORK ASSY (R.H)	1	
24	51L-23136-00-38	.TUBE, outer 2	1	CLEAR BUFFING
25	1E7-23119-00	..PLUG, drain	1	
26	1UA-23110-00	.INNER TUBE COMP. 1	1	
27	1UA-23141-00	.SPRING, front fork	1	


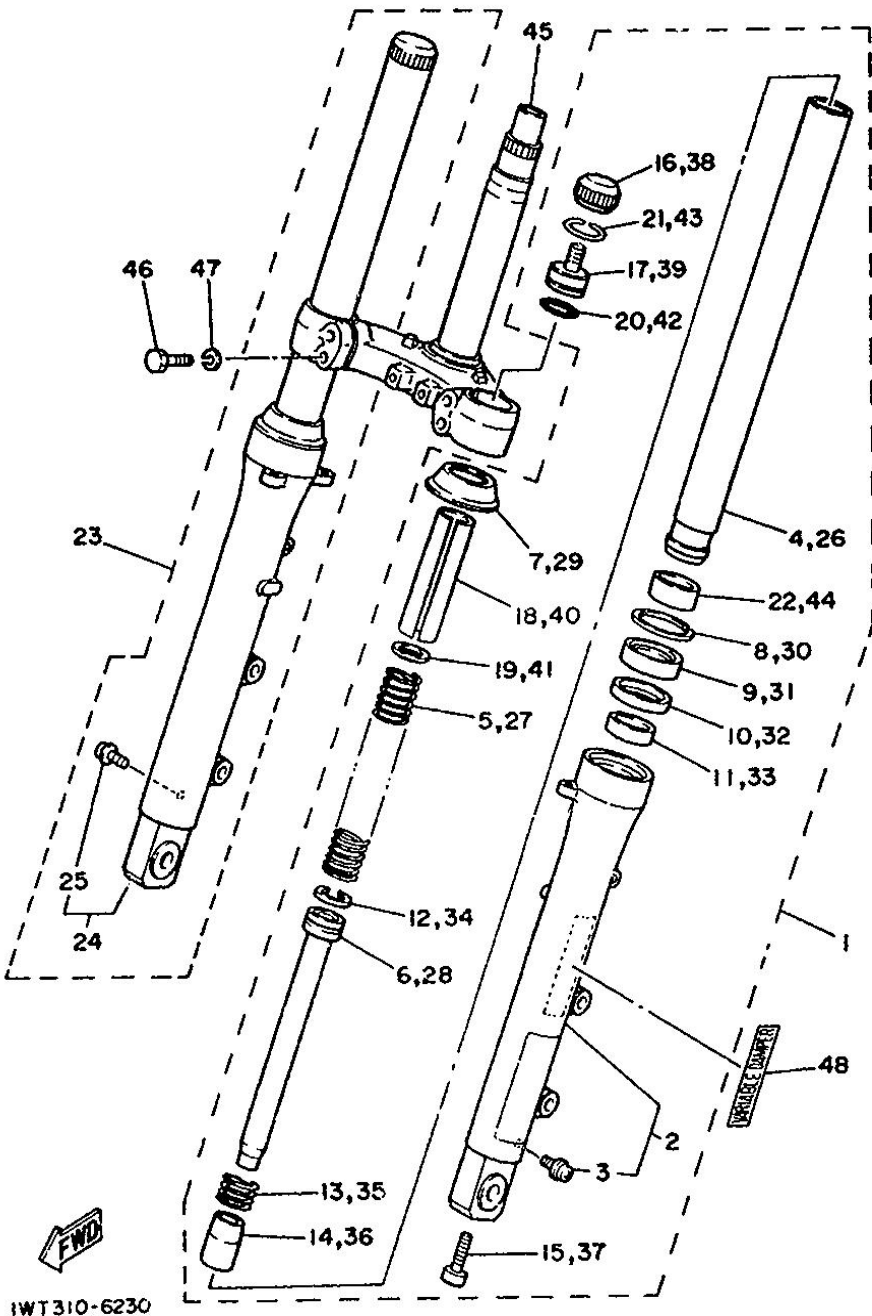


Fig. 23 FRONT FORK

N° référé	Référence de la pièce	Description		Remarques
28	1UA-23171-00	.PISTON, front fork	1	
29	1UA-23144-00	.SEAL, dust	1	
30	34X-23156-00	.CLIP, oil seal	1	
31	1UA-23145-00	.OIL SEAL	1	
32	10V-23147-00	.O-RING	1	
33	51L-23125-00	.METAL, slide 1	1	
34	51L-23157-00	.RING, piston	1	
35	51L-23151-00	.SPRING, rebound	1	
36	10V-23166-00	.SPACER, oil lock	1	
37	3M7-23181-00	.BOLT, hexagon socket head	1	
38	1UA-23168-00	.CAP, front fork	1	
39	1UA-23111-00	.BOLT, cap	1	
40	51L-23118-00	.SPACER	1	
41	51L-23142-00	.SEAT, spring upper	1	
42	1UA-23147-00	.O-RING	1	
43	1UA-23153-00	.RING, snap	1	
44	10V-23135-00	.METAL, slide 2	1	
45	31K-23340-30	UNDER BRACKET COMP.	1	
46	90101-08592	BOLT	4	
47	3J3-23159-00	WASHER, spring, lower	4	
48	51L-23108-00	EMBLEM	2	

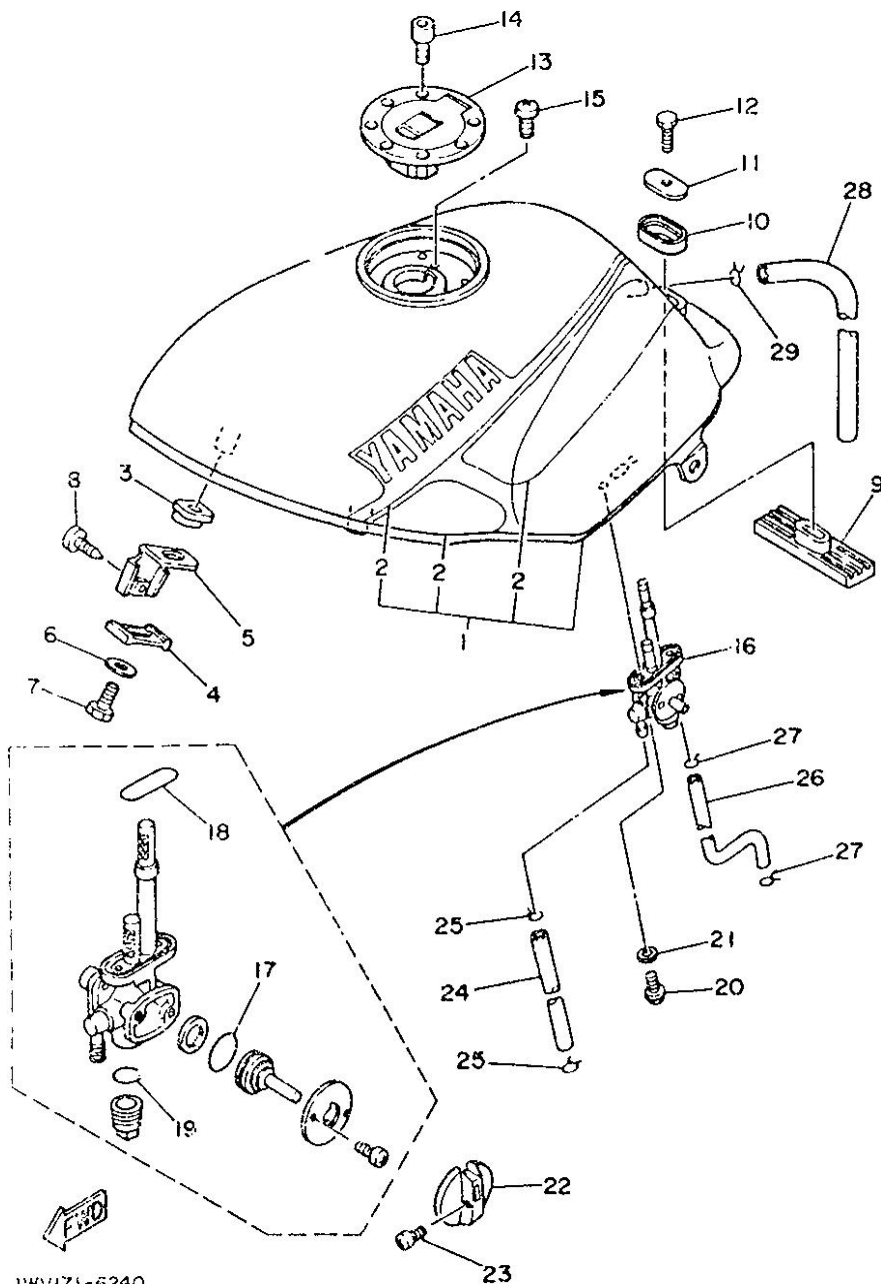

11VV171-6240

Fig. 24 FUEL TANK

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-24110-00-01	FUEL TANK COMP.	1	SILKY WHITE/STORMY RED
2	1WT-24240-00	.GRAPHIC SET	1	FOR SW/SMR
3	1A0-24181-00	DAMPER, locating 1	2	
4	1A0-24186-00	WASHER, special	2	
5	1UA-24191-00	BRACKET, fuel tank 1	2	
6	90209-06186	WASHER	2	
7	98006-06008	BOLT	2	
8	90157-06046	SCREW, pan head	2	
9	29L-24182-00	DAMPER, locating 2	1	
10	3Y6-24183-00	DAMPER, locating 3	1	
11	12R-24186-00	WASHER, special	1	
12	98002-08030	BOLT	1	
13	1TX-24602-00	CAP ASSY	1	
14	90110-05112	BOLT, hexagon socket head	3	
15	98501-05010	SCREW, pan head	1	
16	1UA-24500-00	FUEL COCK ASSY 1	1	
17	3H3-24534-00	.O-RING	1	
18	2W6-24512-00	.O-RING	1	
19	4X8-24565-00	.GASKET	1	
20	90149-06011	SCREW	2	
21	90202-06010	WASHER, plate	2	
22	46X-24524-00	LEVER, cock	1	
23	98506-03008	SCREW, pan head	1	
24	1UA-24311-00	PIPE, fuel 1	1	
25	90467-10041	CLIP	2	
26	29L-2416A-00	HOSE	1	
27	90467-08075	CLIP	2	


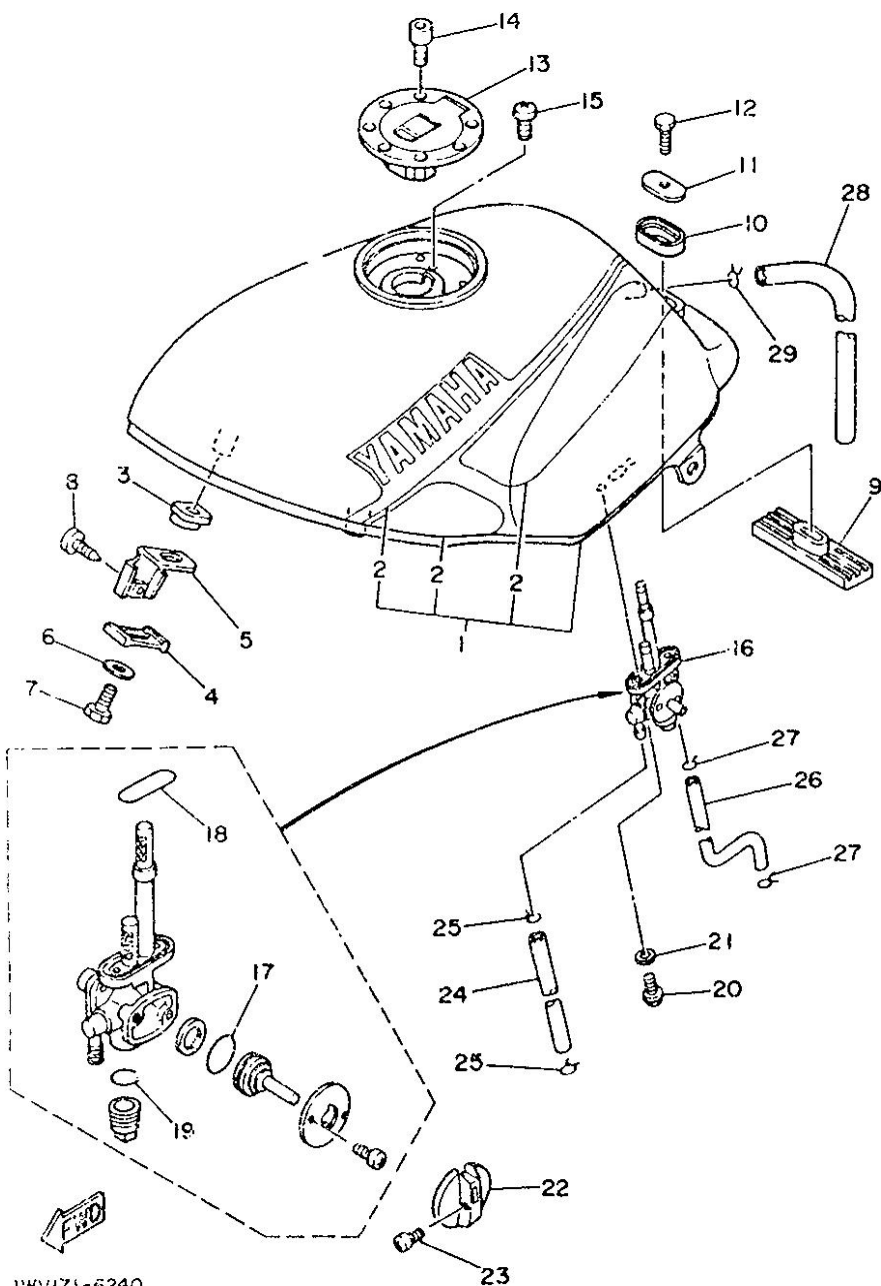


Fig. 24 FUEL TANK

[illegible]

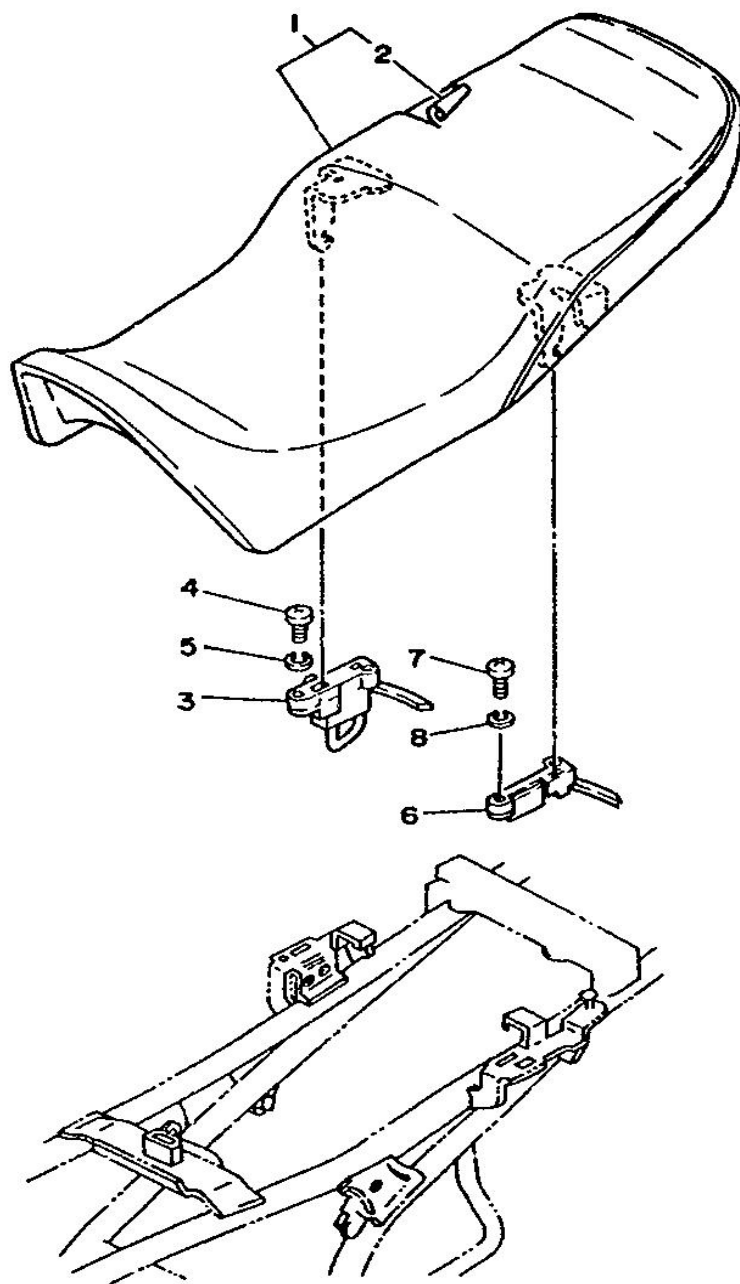

1WT310-6250

Fig. 25 SEAT

[illegible]


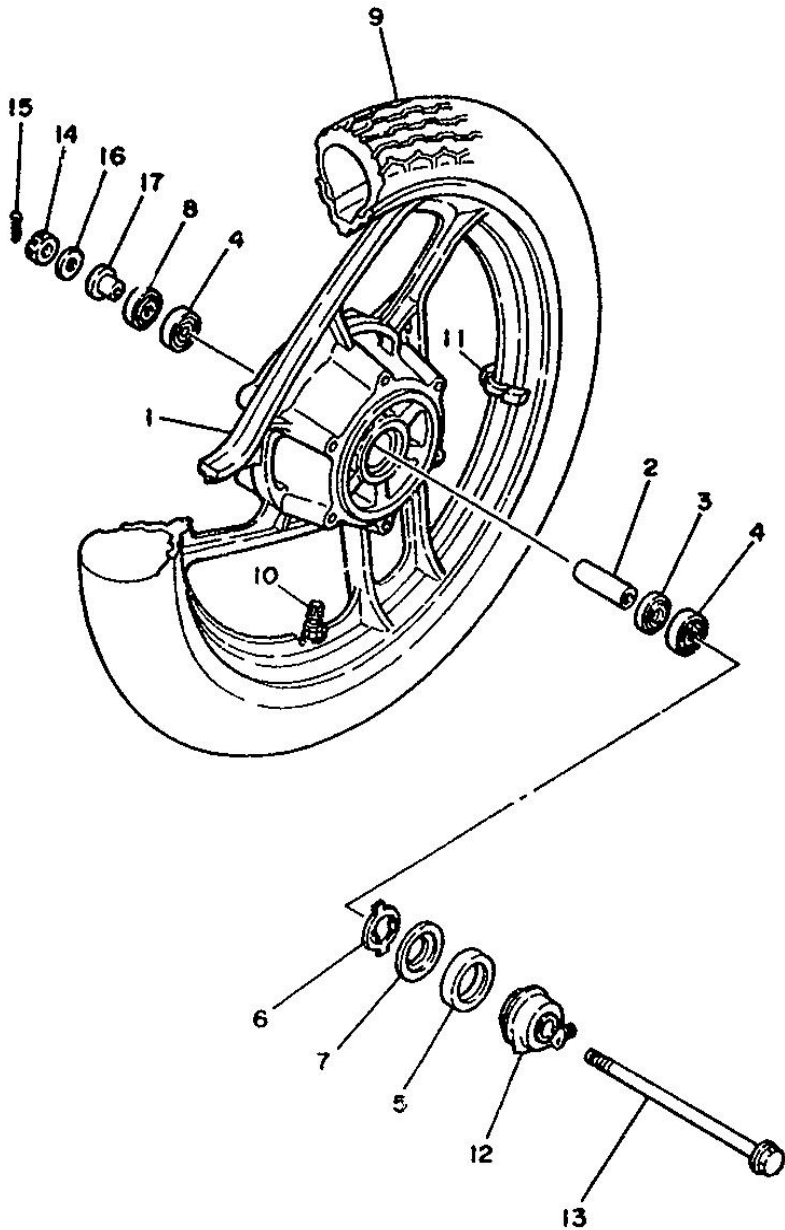


Fig. 26 FRONT WHEEL

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-25168-00-FH	CAST WHEEL, front	1	FIRE RED
2	90387-123A9	COLLAR	1	
3	2U2-25315-00	FLANGE, spacer	1	
4	93306-30109	BEARING	2	
5	93105-45017	OIL SEAL	1	
6	341-25149-00	CLUTCH, meter	1	
7	341-25846-00	RETAINER, clutch	1	
8	93106-20002	OIL SEAL	1	
9	94109-187J7	TIRE (90/90 51H F202)	1	UR YOKOHAMA
	94109-184J2	TIRE (90/90 51H K300M)	1	UR DUNLOP
10	93900-00018	VALVE, rim	1	UR YOKOHAMA
	93900-00015	VALVE, rim	1	UR DUNLOP
11	29L-25398-00	BALANCER, wheel (10G)	1	UN
	29L-25398-10	BALANCER, wheel (20G)	1	UN
	29L-25398-20	BALANCER, wheel (30G)	1	UN
12	4L0-25190-00	GEAR UNIT ASSY	1	
13	4L0-25181-00	AXLE, wheel	1	
14	90171-12005	NUT, castle	1	
15	91401-30025	PIN, cotter	1	
16	92901-12200	WASHER, plain	1	
17	90387-12670	COLLAR	1	



IWT310-6260

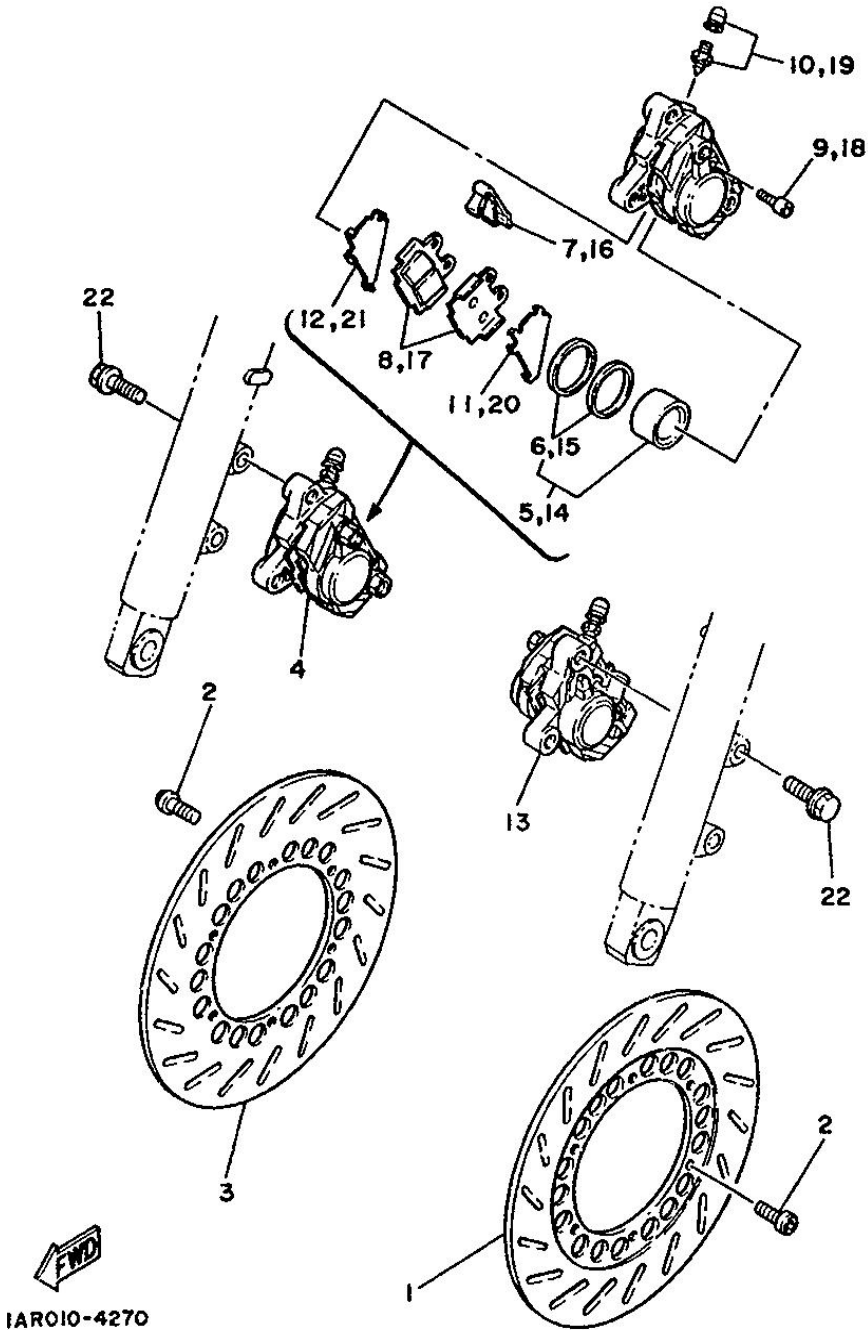

IAR010-4270

Fig. 27 FRONT BRAKE CALIPER

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-25831-10-33	DISC, brake (LEFT)	1	YAMAHA BLACK
2	90149-08230	SCREW	12	
3	1UA-25831-00-33	DISC, brake (RIGHT)	1	YAMAHA BLACK
4	51L-25810-01	CALIPER ASSY (RIGHT)	1	
5	51L-W0057-00	.PISTON ASSY, caliper	1	
6	51L-W0047-00	..CALIPER SEAL KIT	1	
7	51L-25919-00	.SUPPORT, pad	1	
8	51L-W0046-01	.BRAKE PAD KIT, rear	1	
9	51L-25924-00	.PIN, pad	2	
10	51L-W0048-00	.BREED SCREW KIT	1	
11	51L-25827-00	.SHIM, caliper	1	
12	51L-25827-10	.SHIM, caliper	1	
13	51L-25810-11	CALIPER ASSY (LEFT)	1	
14	51L-W0057-00	.PISTON ASSY, caliper	1	
15	51L-W0047-00	..CALIPER SEAL KIT	1	
16	51L-25919-00	.SUPPORT, pad	1	
17	51L-W0046-01	.BRAKE PAD KIT, rear	1	
18	51L-25924-00	.PIN, pad	2	
19	51L-W0048-00	.BREED SCREW KIT	1	
20	51L-25827-00	.SHIM, caliper	1	
21	51L-25827-10	.SHIM, caliper	1	
22	90105-10308	BOLT, washer based	4	

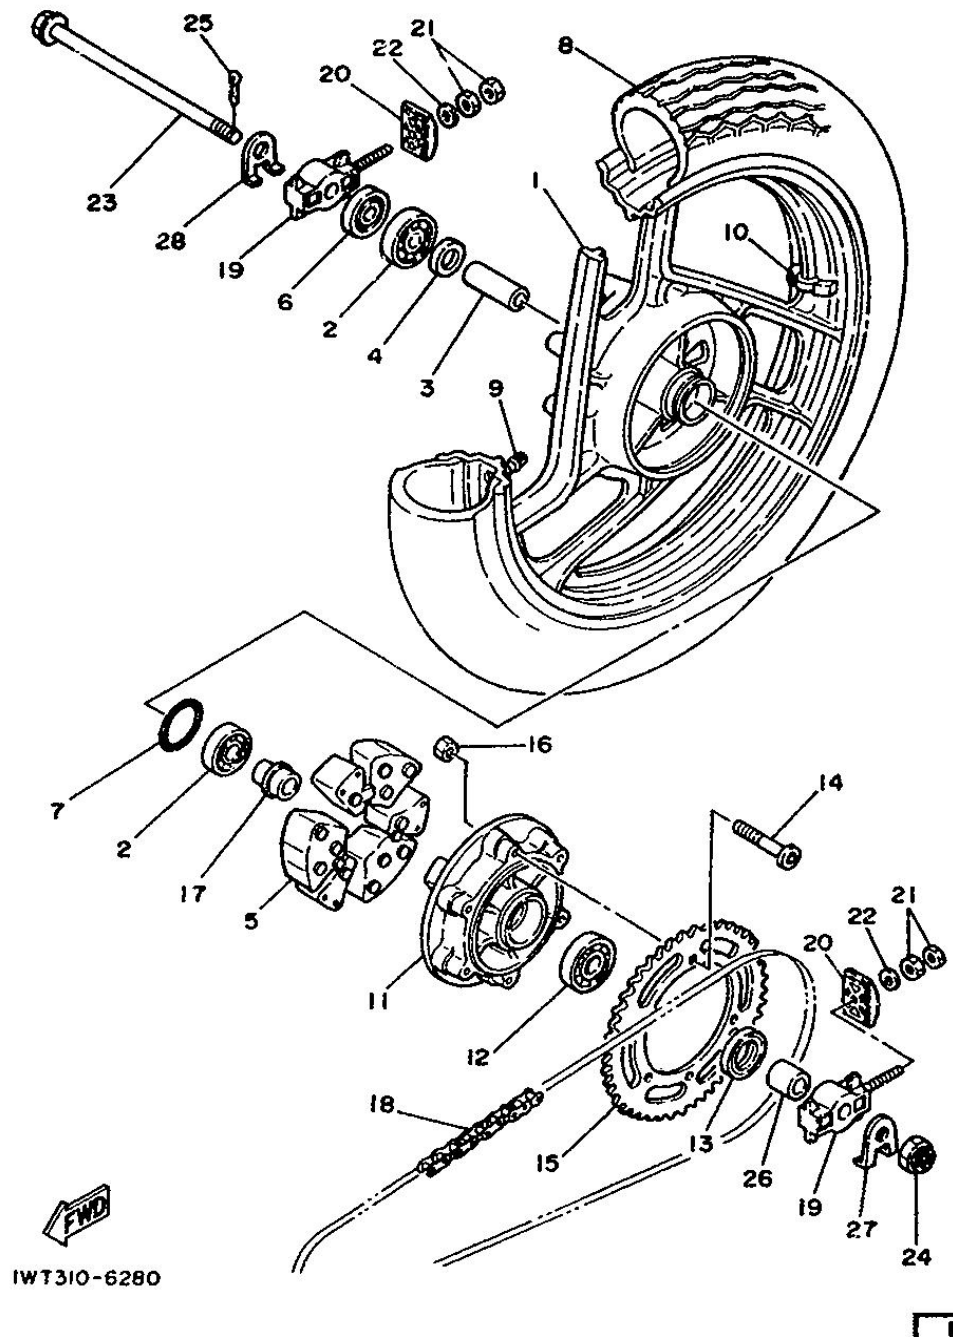


Fig. 28 REAR WHEEL

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-25338-20-FH	CAST WHEEL, rear	1	FIRE RED
2	93306-30206	BEARING (B6302ZZ)	2	
3	90387-154A0	COLLAR	1	
4	2R6-25115-00	FLANGE, spacer 1	1	
5	29L-25364-00	DAMPER	3	
6	93102-22014	OIL SEAL	1	
7	93210-48530	O-RING	1	
8	94111-187M4	TIRE (110/80 58H R202)	1	UR YOKOHAMA
	94111-184J3	TIRE (110/80 58H K300)	1	UR DUNLOP
9	93900-00018	VALVE, rim	1	UR YOKOHAMA
	93900-00015	VALVE, rim	1	UR DUNLOP
10	29L-25398-00	BALANCER, wheel (10G)	1	UN
	29L-25398-10	BALANCER, wheel (20G)	1	UN
	29L-25398-20	BALANCER, wheel (30G)	1	UN
11	29L-25366-00	CLUTCH, hub	1	
12	93306-30416	BEARING (B6304RS)	1	
13	93102-32298	OIL SEAL	1	
14	90110-08057	BOLT, hexagon socket head	6	
15	31K-25439-20-33	SPROCKET, driven (39T)	1	YAMAHA BLACK
16	90185-08113	NUT, self-locking	6	
17	4L0-25377-00	COLLAR, wheel	1	
18	94580-93106	CHAIN	1	
19	51L-25388-00	PULLER, chain 1	2	
20	51L-22174-00	END 1	2	
21	95301-08600	NUT	4	
22	92901-08600	WASHER, plate	2	
23	51L-25381-01	AXLE, wheel	1	


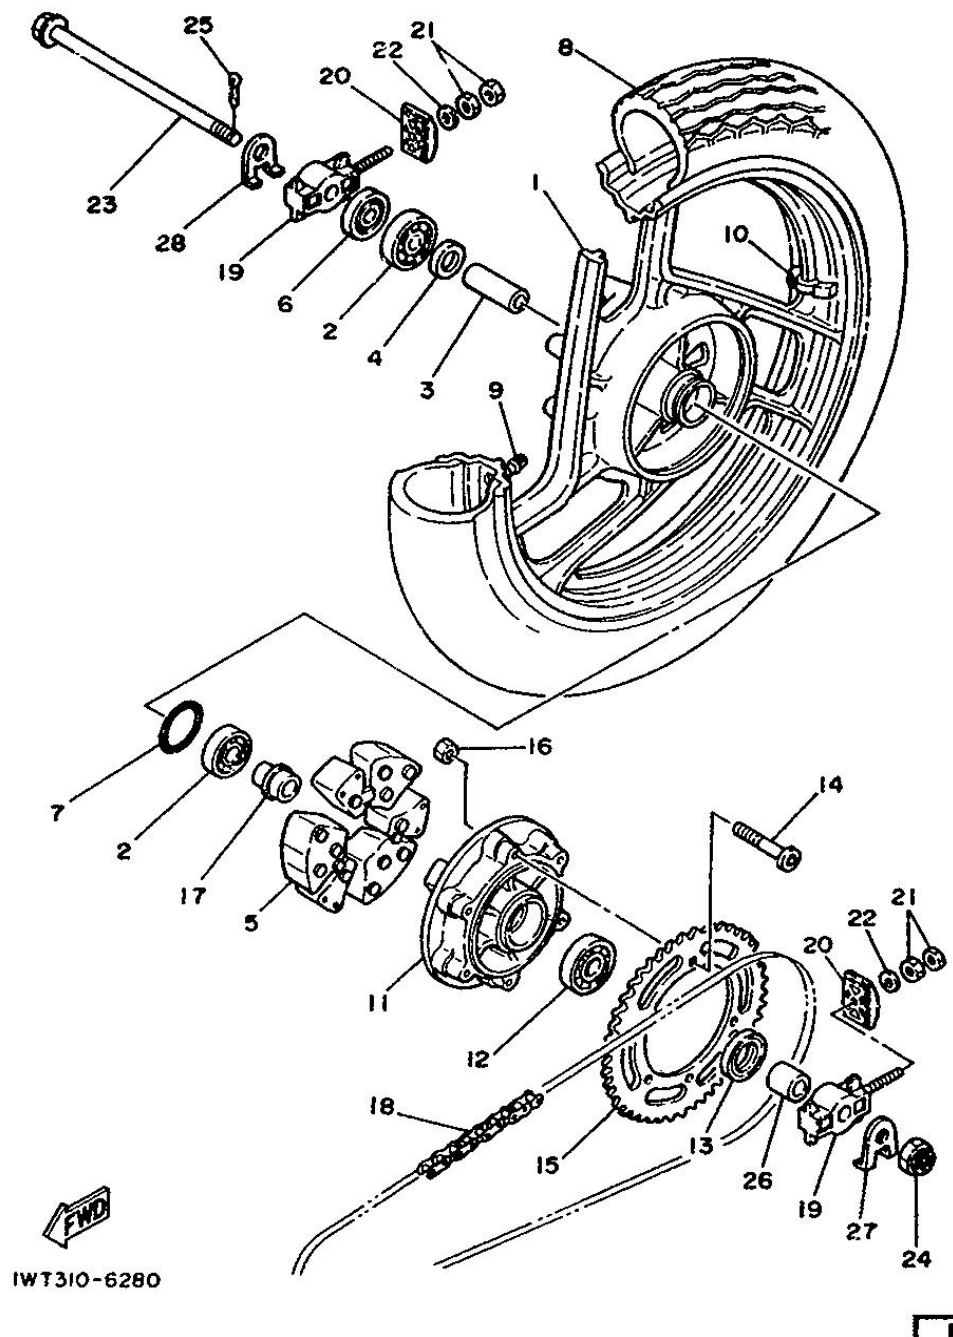


Fig. 28 REAR WHEEL


[illegible]

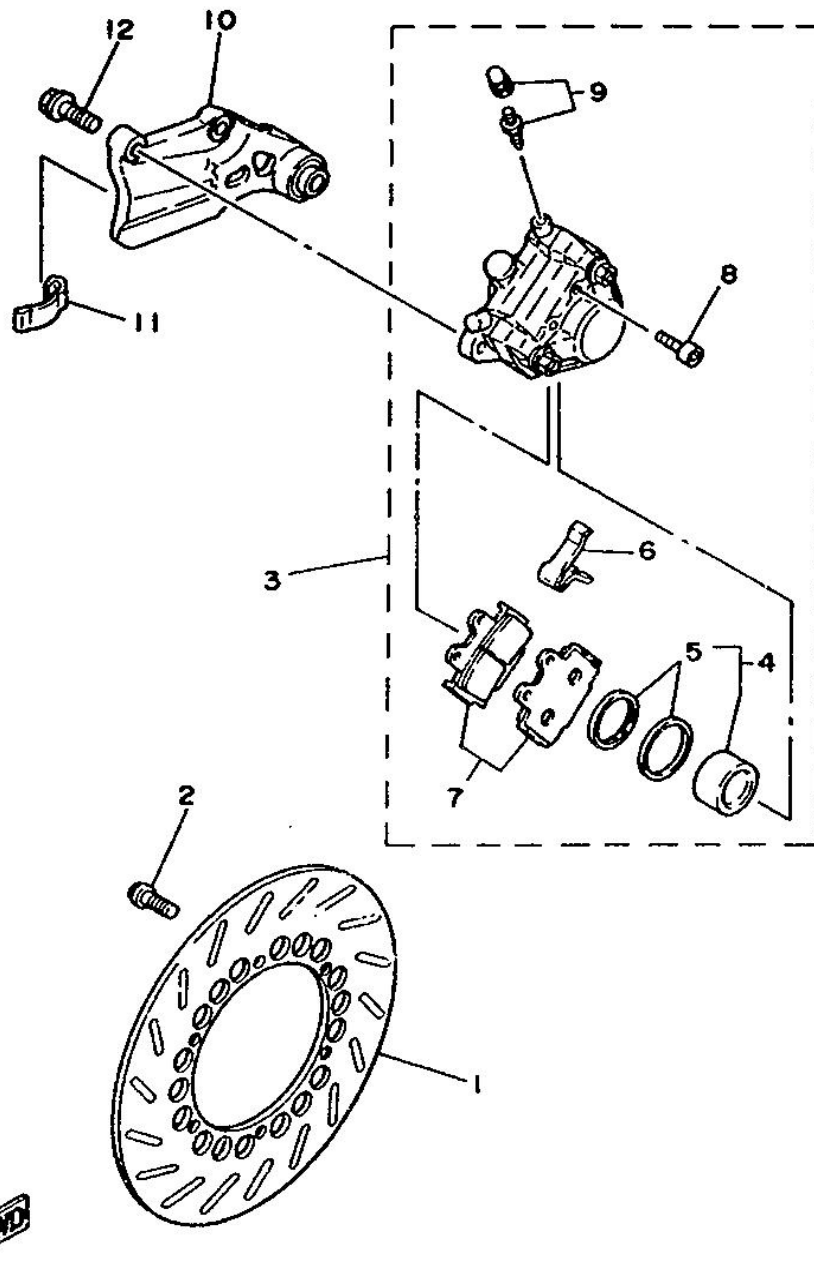

51L010-4290

Fig. 29 REAR BRAKE CALIPER

N° référé	Référence de la pièce	Description		Remarques
1	1UA-25831-00-33	DISC, brake (RIGHT)	1	YAMAHA BLACK
2	90149-08230	SCREW	6	
3	51L-25810-51	CALIPER ASSY	1	
4	51L-W0057-00	.PISTON ASSY, caliper	1	
5	51L-W0047-00	..CALIPER SEAL KIT	1	
6	51L-25919-00	.SUPPORT, pad	1	
7	51L-W0046-01	.BRAKE PAD KIT, rear	1	
8	51L-25924-00	.PIN, pad	2	
9	51L-W0048-00	.BREED SCREW KIT	1	
10	51L-25819-00-98	BRACKET, caliper	1	LOW GLOSS BLACK
11	33M-25927-00	SPRING, support	1	
12	90105-10363	BOLT, washer based	2	

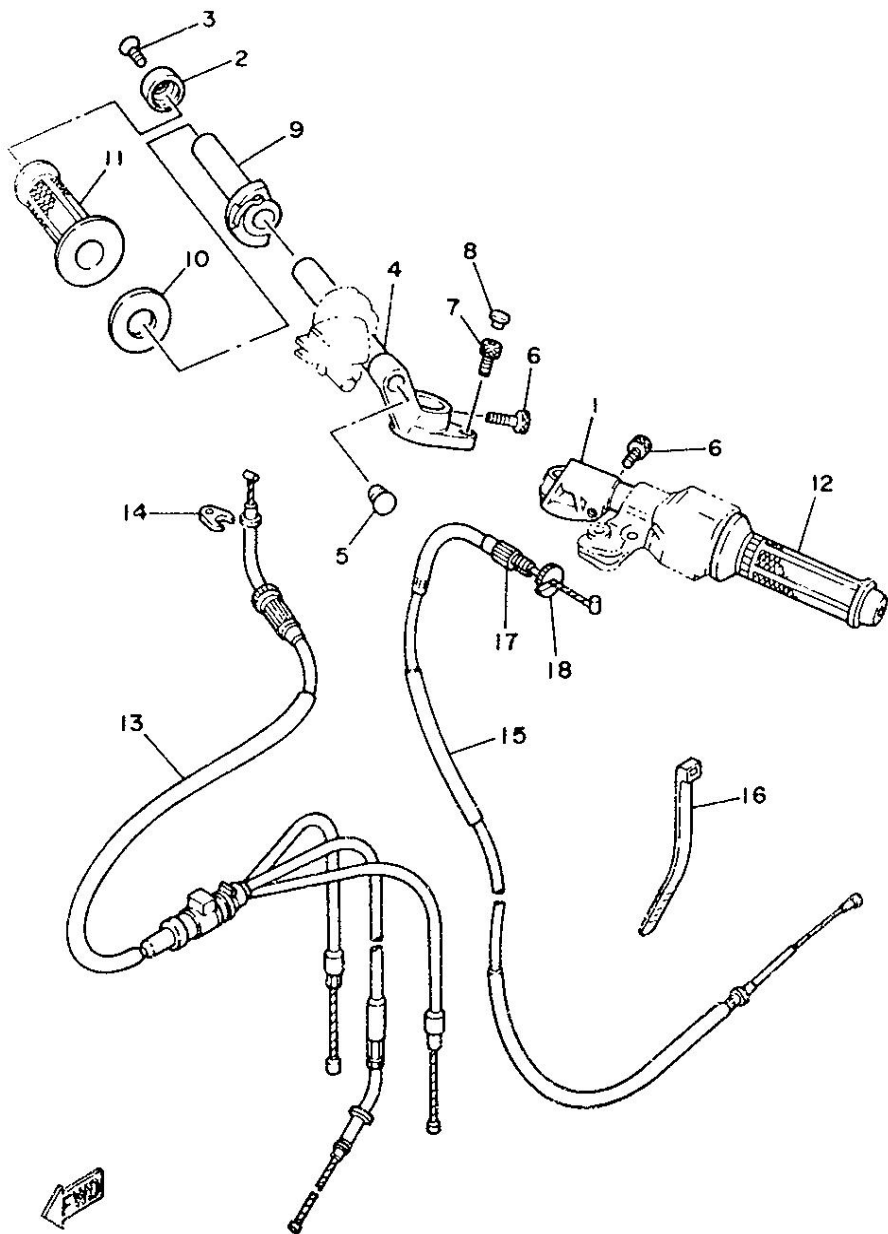


1WT310-6300

1. *Chlorophyll a* and *Chlorophyll b* were determined by the method of Lichtenthaler and Whistler (1973).

10

Fig. 30 STEERING HANDLE & CABLE

N° référé	Référence de la pièce	Description		Remarques
1	1JF-26121-00	HANDLEBAR (LEFT)	1	
2	29L-26246-00	END, grip	2	
3	92706-06030	SCREW, flat head	2	
4	1JF-26122-00	HANDLEBAR (RIGHT)	1	
5	90338-19166	PLUG	2	
6	91316-08025	BOLT	2	
7	91316-06016	BOLT	2	
8	2H9-23469-00	CAP, bolt	2	
9	36Y-26243-00	TUBE, throttle guide	1	
10	2H7-26249-00	RING, leaf	1	
11	31A-26242-00	GRIP (R.H)	1	
12	31A-26241-00	GRIP (L.H)	1	
13	1UA-26260-00	CABLE ASSY, throttle & pump	1	
14	5H0-26393-00	HOLDER	1	
15	1UA-26335-00	CABLE, clutch	1	
16	5A8-82591-00	BAND	1	
17	90123-08083	BOLT	1	
18	90179-08316	NUT	1	

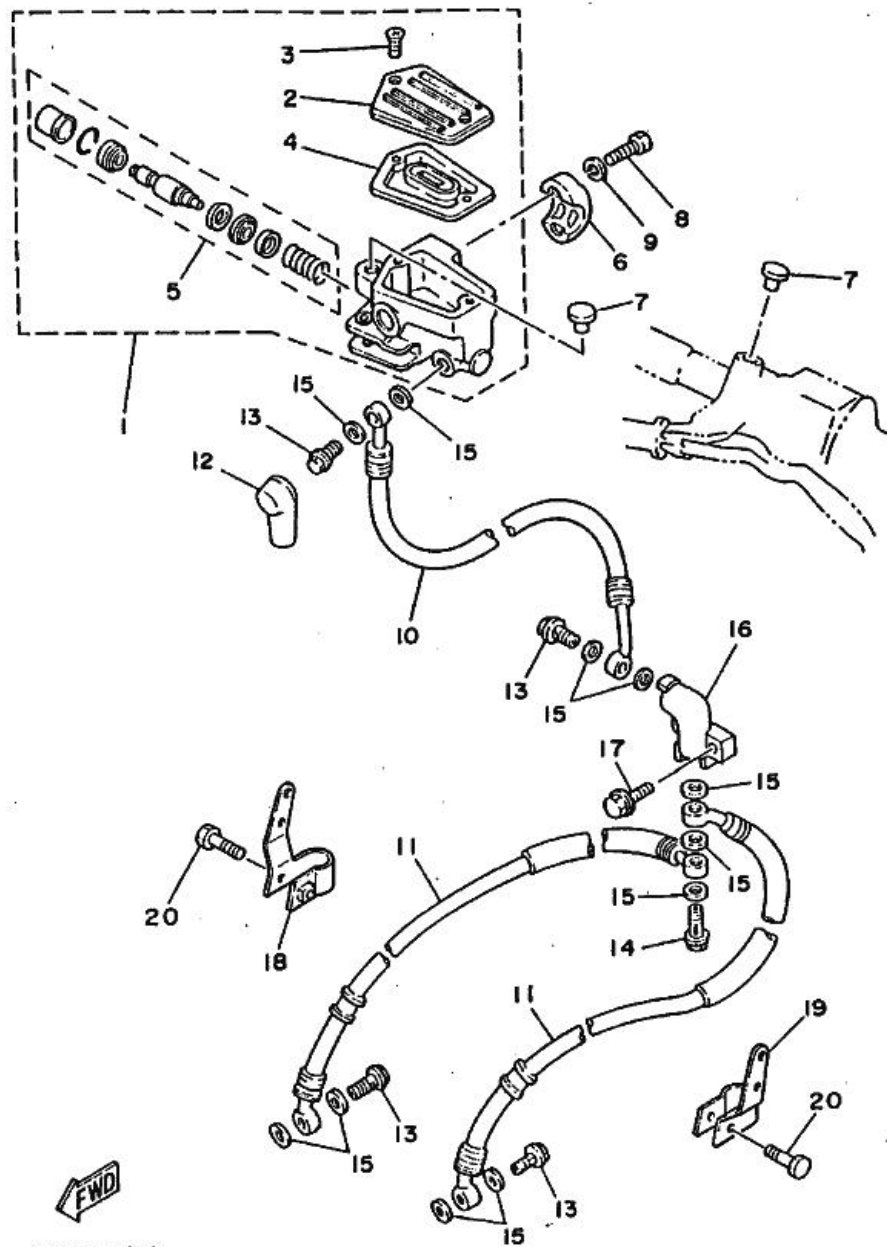

IWW171-6310

Fig. 31 FRONT MASTER CYLINDER

N° réfèrent	Référence de la pièce	Description		Remarques
1	36Y-25850-00	MASTER CYLINDER ASSY	1	
2	1AE-25852-00	.CAP, reservoir	1	
3	98706-04012	.SCREW, flat head	2	
4	36Y-25854-00	.DIAPHRAGM, reservoir	1	
5	36Y-W0041-00	.CYLINDER KIT, master	1	
6	36Y-25867-00	BRACKET, master cylinder	1	
7	90338-09012	PLUG	2	
8	91316-06025	BOLT	2	
9	92906-06100	WASHER, spring	2	
10	57V-25872-00	HOSE, brake 1	1	
11	51L-25873-00	HOSE, brake 2	2	
12	4L0-25862-00	BOOT, master cylinder	1	
13	90401-10096	BOLT, union	4	
14	90401-10095	BOLT, union	1	
15	90201-10118	WASHER, plate	11	
16	47X-25885-00	JOINT	1	
17	98006-06025	BOLT	1	
18	57V-25875-00	HOLDER, brake hose 1	1	
19	57V-25876-00	HOLDER, brake hose 2	1	
20	97001-06025	BOLT	2	

Fig. 32 STAND & FOOTREST

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-27442-00	BRACKET 2	1	
2	1UA-27443-00	BRACKET 3	1	
3	1UA-27410-00	FRONT FOOTREST ASSY (LEFT)	1	
4	46X-27413-00	.COVER, footrest	1	
5	90157-05079	.SCREW, pan head	2	
6	90185-10115	NUT, self-locking	1	
7	1HX-27431-00	FOOTREST, rear 1	1	
8	90387-061G0	COLLAR	1	
9	91701-06045	PIN, clevis	1	
10	91401-20015	PIN, cotter	1	
11	90501-12743	SPRING, compression	1	
12	93501-04004	BALL	1	
13	1HX-27437-00	WASHER, special	1	
14	29L-27414-01	DAMPER, footrest	1	
15	90209-08249	WASHER	1	
16	90185-08097	NUT, self-locking	1	
17	90105-08284	BOLT, washer based	1	
18	90109-10754	BOLT	1	
19	91316-10030	BOLT	1	
20	1UA-27420-00	FRONT FOOTREST ASSY (RIGHT)	1	
21	46X-27413-00	.COVER, footrest	1	
22	90157-05079	.SCREW, pan head	2	
23	90185-10115	NUT, self-locking	1	
24	1HX-27441-00	FOOTREST, rear 2	1	
25	90387-061G0	COLLAR	1	
26	91701-06045	PIN, clevis	1	
27	91401-20015	PIN, cotter	1	


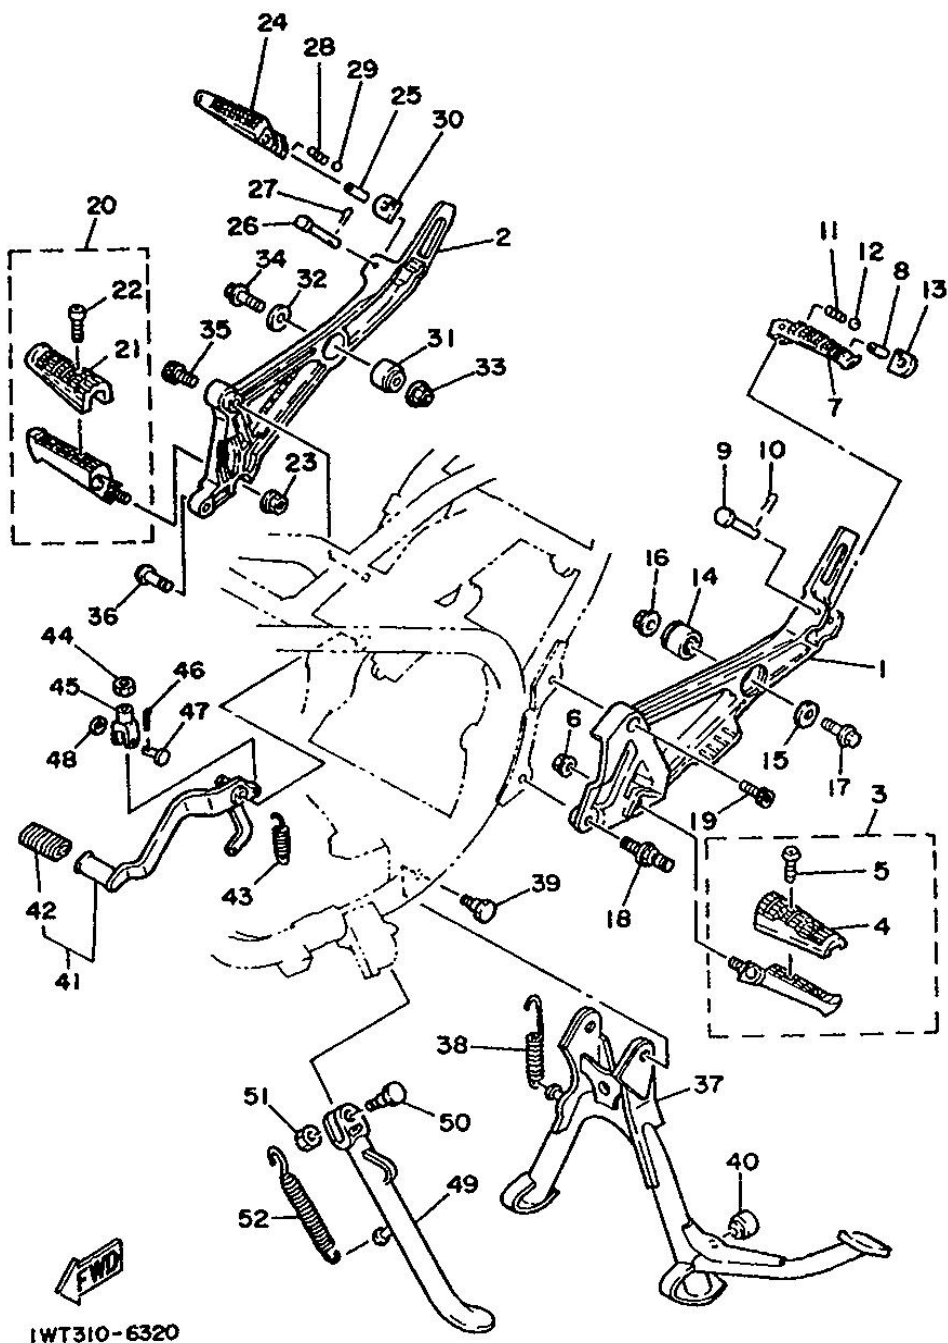


Fig. 32 STAND & FOOTREST

N° référé	Référence de la pièce	Description		Remarques
28	90501-12743	SPRING, compression	1	
29	93501-04004	BALL	1	
30	1HX-27437-00	WASHER, special	1	
31	29L-27414-01	DAMPER, footrest	1	
32	90209-08249	WASHER	1	
33	90185-08097	NUT, self-locking	1	
34	90105-08284	BOLT, washer based	1	
35	91316-10030	BOLT	1	
36	90149-10232	SCREW	1	
37	29L-27111-01-R4	STAND, main	1	BLACK
38	90506-35349	SPRING, tension	1	
39	90109-10737	BOLT	2	
40	109-27114-00	STOPPER, main stand	1	
41	51L-27200-00	PEDAL, brake	1	
42	22N-18113-00	.COVER, shift pedal	1	
43	90506-20192	SPRING, tension	1	
44	95301-08700	NUT	1	
45	1J3-27222-01	JOINT	1	
46	91401-16012	PIN, cotter	1	
47	90240-08013	PIN, clevis	1	
48	90201-08083	WASHER, plate	1	
49	1UA-27311-00-R4	STAND, side	1	BLACK
50	90109-10590	BOLT	1	
51	90185-10037	NUT, self-locking	1	
52	90507-29032	SPRING, tension	1	

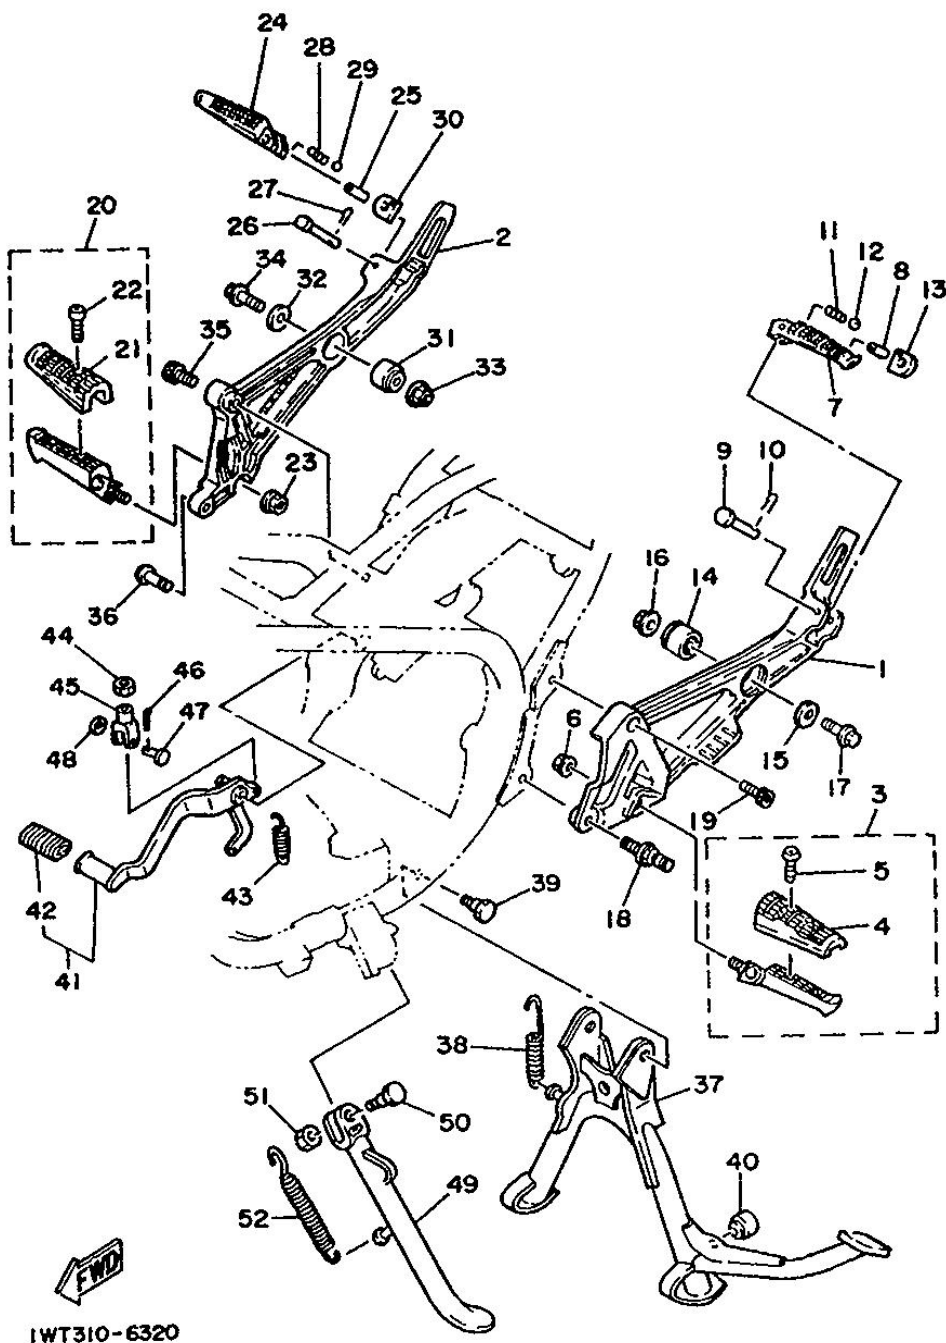

1WT310-6320

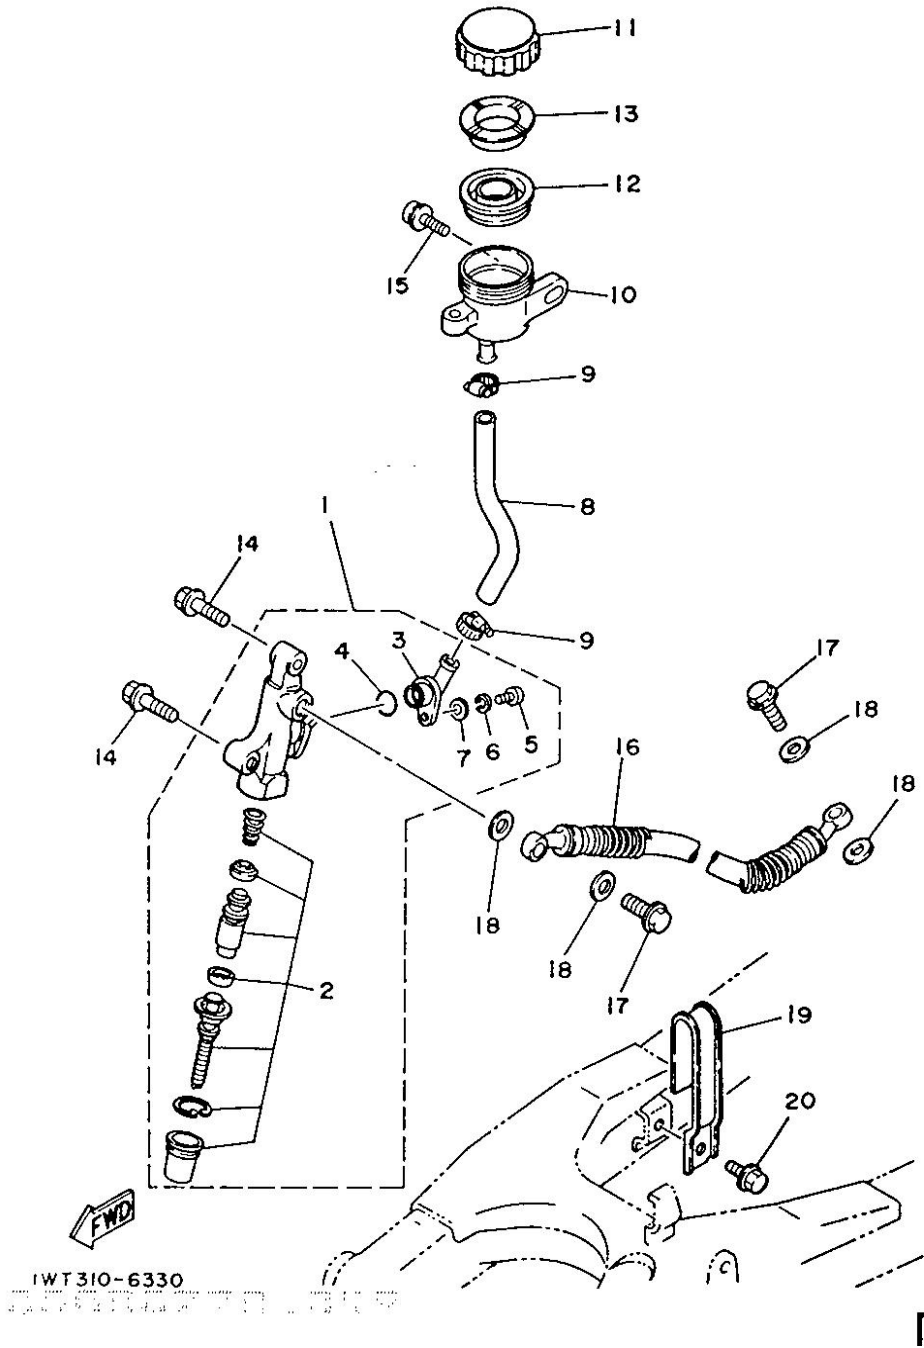


Fig. 33 REAR MASTER CYLINDER

N° réfèrent	Référence de la pièce	Description		Remarques
1	29L-25850-51	MASTER CYLINDER ASSY	1	
2	29L-W0042-50	.CYLINDER KIT, master	1	
3	29L-2582A-50	.JOINT	1	
4	93210-15620	.O-RING	1	
5	98511-04012	.SCREW, pan head	1	
6	92902-04100	.WASHER, spring	1	
7	92901-04600	.WASHER, plate	1	
8	29L-25895-00	HOSE, reservoir	1	
9	90467-14057	CLIP	2	
10	1A1-25894-01	TANK, reservoir	1	
11	1A1-25852-00	CAP, reservoir	1	
12	360-25854-00	DIAPHRAGM, reservoir	1	
13	360-25855-01	BUSH, diaphragm	1	
14	90157-08066	SCREW, pan head	2	
15	90159-06056	SCREW, with washer	1	
16	51L-25872-50	HOSE, brake 1	1	
17	90401-10096	BOLT, union	2	
18	90201-10118	WASHER, plate	4	
19	29L-25875-00	HOLDER, brake hose 1	1	
20	98006-06008	BOLT	1	

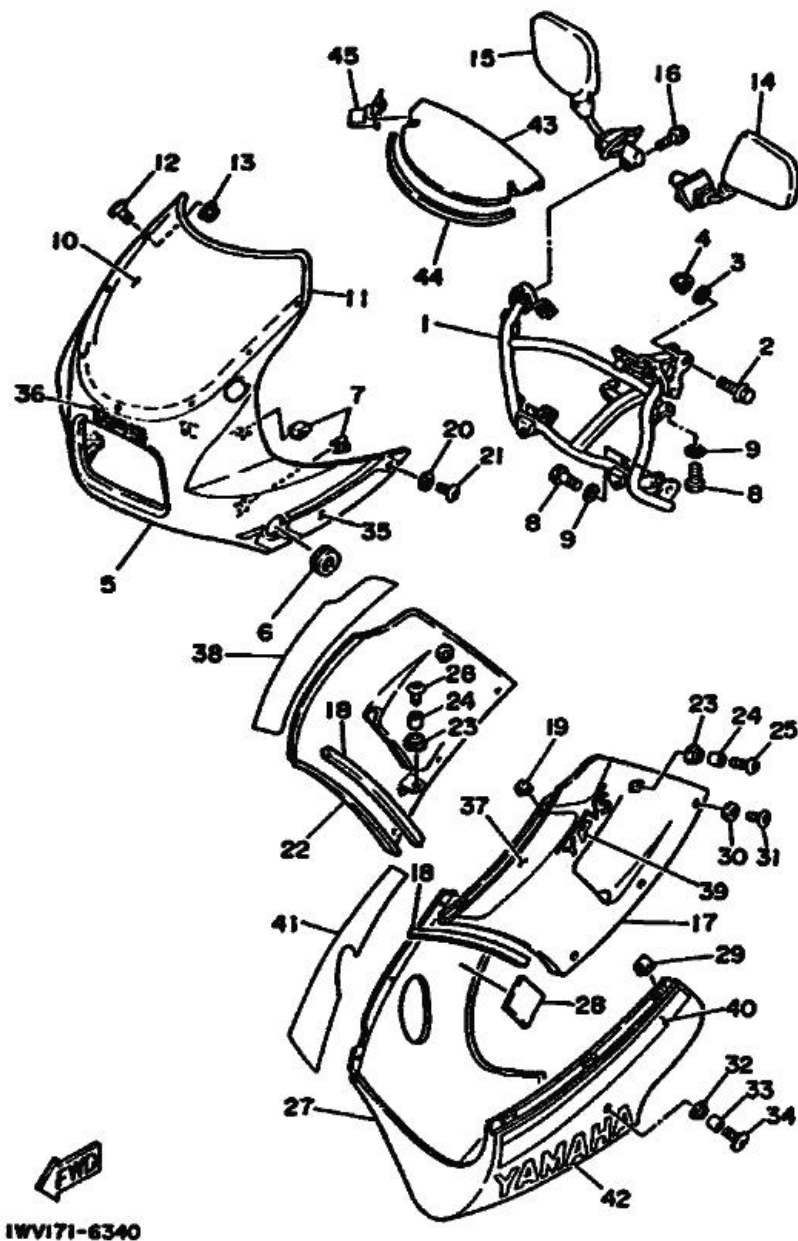


Fig. 34 COWLING 1

N° réfèrent	Référence de la pièce	Description		Remarques
1	51L-28356-03	STAY 1	1	
2	90101-08626	BOLT	2	
3	92906-08600	WASHER, plate	2	
4	95306-08800	NUT	2	
5	47X-2835G-01-AJ	BODY, front upper 1	1	STORMY RED
6	90480-35394	GROMMET	2	
7	47X-21736-00	NUT, plate	6	
8	97326-06016	BOLT	4	
9	92906-06100	WASHER, spring	4	
10	1AG-2837U-00	SCREEN	1	
11	47X-28346-00	MOLE 2	1	
12	90150-05020	SCREW, round head	7	
13	95706-05100	NUT, flange	5	
14	1VU-26280-00	BACK MIRROR ASSY (LEFT)	1	
15	1VU-26290-00	BACK MIRROR ASSY (RIGHT)	1	
16	90105-10330	BOLT, washer based	2	
17	51L-2835U-00-GE	PANEL 1	1	SILKY WHITE
18	51L-28217-00	DAMPER 1	2	
19	90183-05024	NUT, spring	4	
20	90202-06007	WASHER, plate	4	
21	90110-05079	BOLT, hexagon socket head	4	
22	51L-2835V-00-GE	PANEL 2	1	SILKY WHITE
23	90480-13398	GROMMET	4	
24	90387-067K6	COLLAR	4	
25	90110-06078	BOLT, hexagon socket head	2	
26	90110-06090	BOLT, hexagon socket head	2	
27	51L-2835J-00-GE	BODY, front lower 1	1	SILKY WHITE


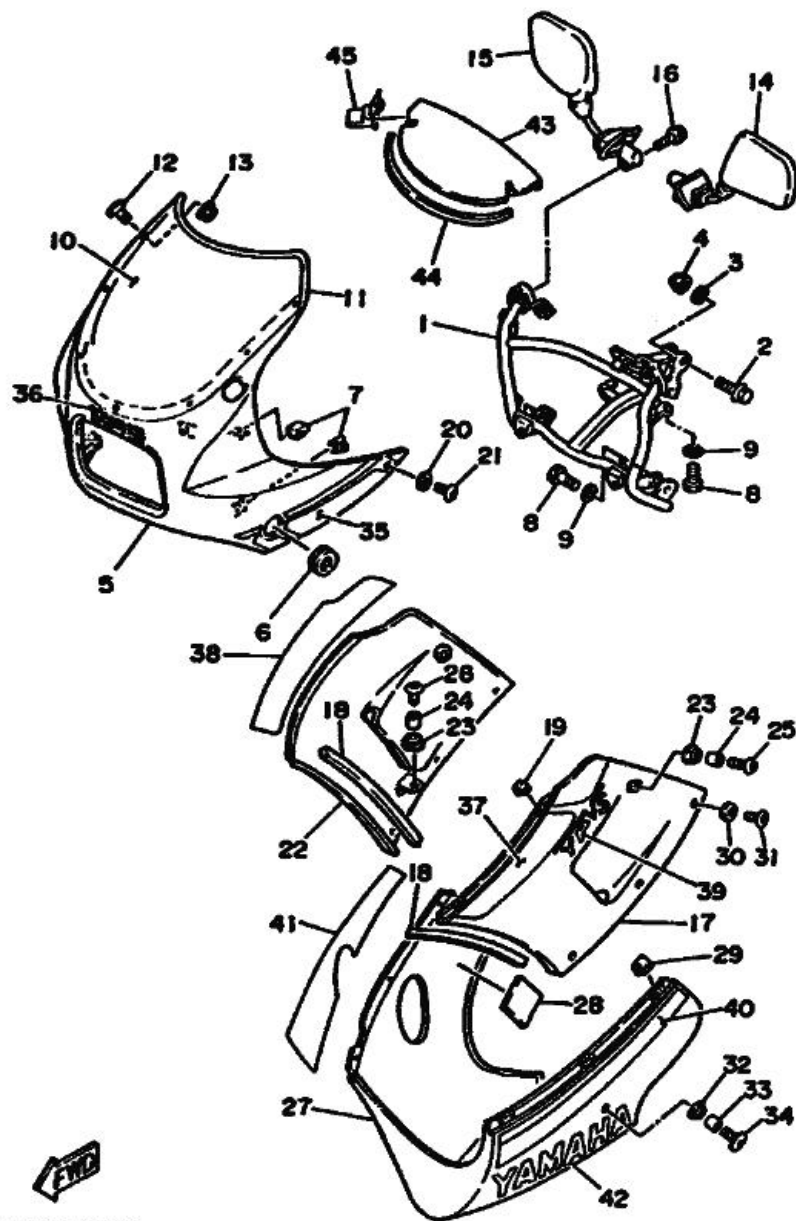


Fig. 34 COWLING 1


N° réfèrent	Référence de la pièce	Description		Remarques
28	51L-28371-00	DAMPER	1	
29	90183-05024	NUT, spring	6	
30	90202-06007	WASHER, plate	6	
31	90110-05079	BOLT, hexagon socket head	6	
32	90480-13398	GROMMET	2	
33	90387-057K6	COLLAR	2	
34	90110-06078	BOLT, hexagon socket head	2	
35	1WT-2834X-00	GRAPHIC SET 1, cowling	1	FOR SW
36	1FM-28338-00	EMBLEM	1	
37	1WT-28398-00	GRAPHIC 5	1	FOR SW
38	1WT-28399-00	GRAPHIC 6	1	FOR SW
39	1WT-28368-00	EMBLEM	2	FOR SW
40	1WT-2839A-00	GRAPHIC 7	1	FOR SW
41	1WT-2839E-00	GRAPHIC 8	1	FOR SW
42	1WT-28315-00	EMBLEM	2	FOR SW
43	51L-2836M-00	PANEL, inner 3	1	
44	51L-28345-00	MOLE 1	1	
45	51L-28344-00	CLIP	2	

Fig. 37 METER

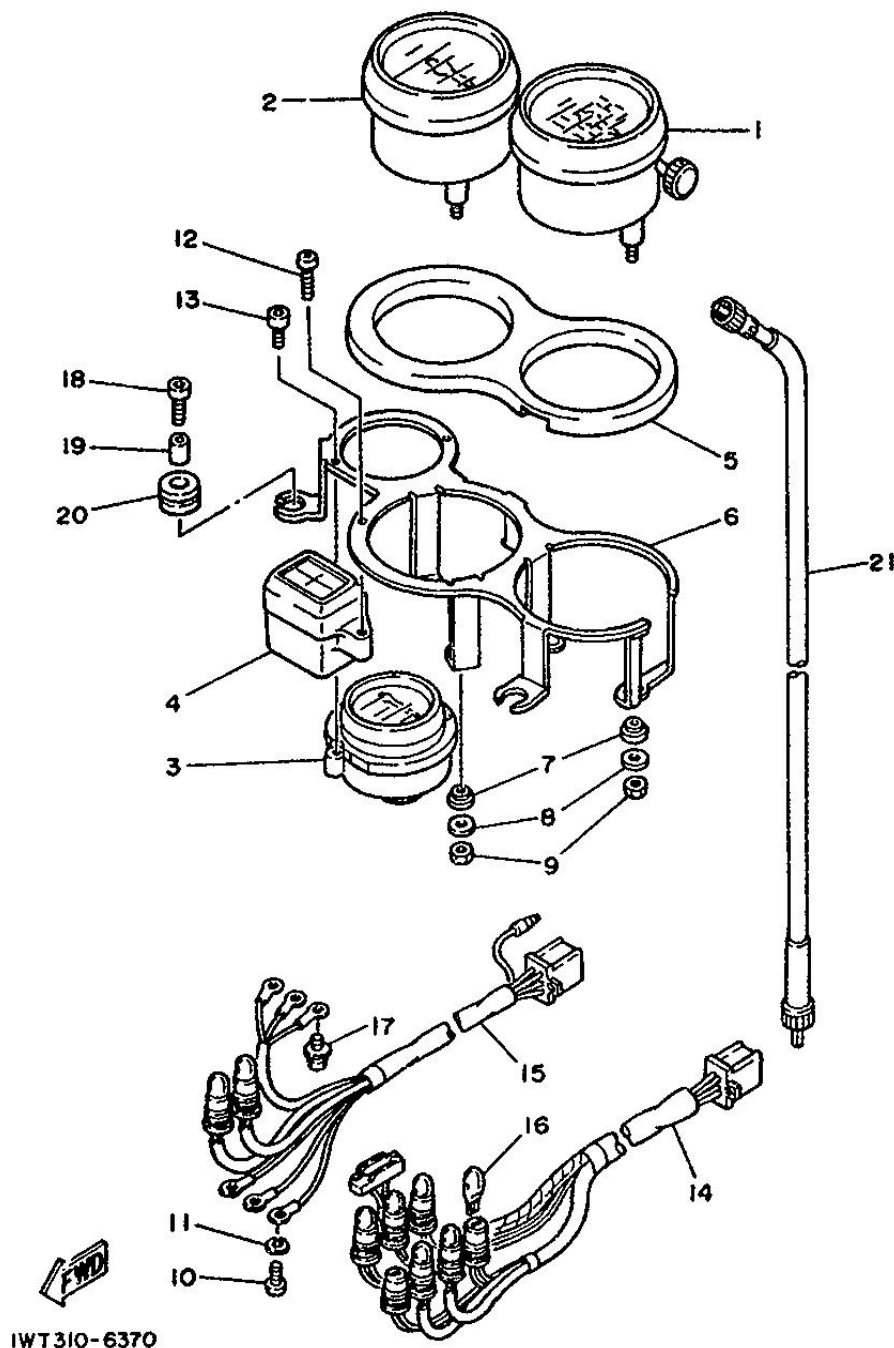

IWT 310-6370

N° réf.	Référence de la pièce	Description		Remarques
1	57V-83570-F0	SPEEDOMETER ASSY	1	
2	47X-83540-00	TACHOMETER ASSY	1	
3	47X-83590-00	WATER TEMPERATURE ASSY	1	
4	47X-83530-00	PILOT LIGHT ASSY	1	
5	47X-83513-00	DAMPER	1	
6	47X-83519-00	BRACKET, meter	1	
7	584-83523-00	DAMPER	4	
8	90201-052E2	WASHER, plate	4	
9	95306-05600	NUT	4	
10	98501-03012	SCREW, pan head	3	
11	92990-03100	WASHER, spring	3	
12	47X-83616-00	SCREW, tapping	1	
13	91316-03016	BOLT	2	
14	47X-83509-00	SOCKET CORD ASSY	1	
15	47X-83520-00	SOCKET CORD ASSY	1	
16	4G1-84744-00	BULB (12V-3.4W)	8	
17	90159-03102	SCREW, with washer	3	
18	90110-06087	BOLT, hexagon socket head	3	
19	90387-065L7	COLLAR	3	
20	90480-14229	GROMMET	3	
21	51L-83550-00	SPEEDOMETER CABLE ASSY	1	

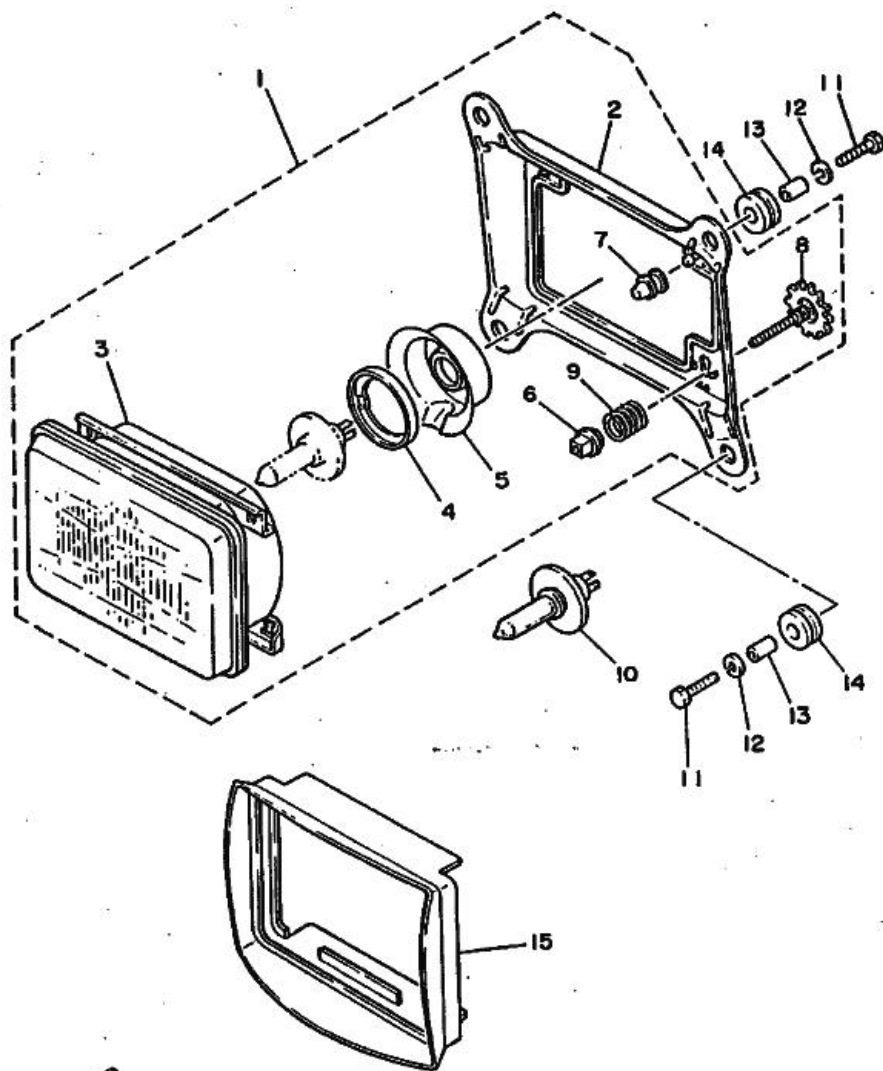

FWD
1AG171-5380

Fig. 38 HEADLIGHT

N° réfèrent	Référence de la pièce	Description		Remarques
1	1AG-84303-A0	HEADLIGHT UNIT ASSY	1	
2	51L-84311-00	.BODY, headlight	1	
3	52X-84320-A0	.LENS ASSY	1	
4	2F9-84375-00	.FITTING PLATE, bulb	1	
5	2F9-84397-01	.COVER, socket	1	
6	51L-84334-00	.NUT, adjusting	2	
7	51L-8431U-00	.HOLDER	1	
8	47X-84337-00	.BOLT, special	2	
9	51L-84332-00	.SPRING, screw	2	
10	*	BULB (12V-60/55W)	1	LM YMC-00903-00
11	97306-06025	BOLT	4	
12	92906-06100	WASHER, spring	4	
13	90387-07391	COLLAR	4	
14	90480-14229	GROMMET	4	
15	51L-84196-01	COVER, socket	1	

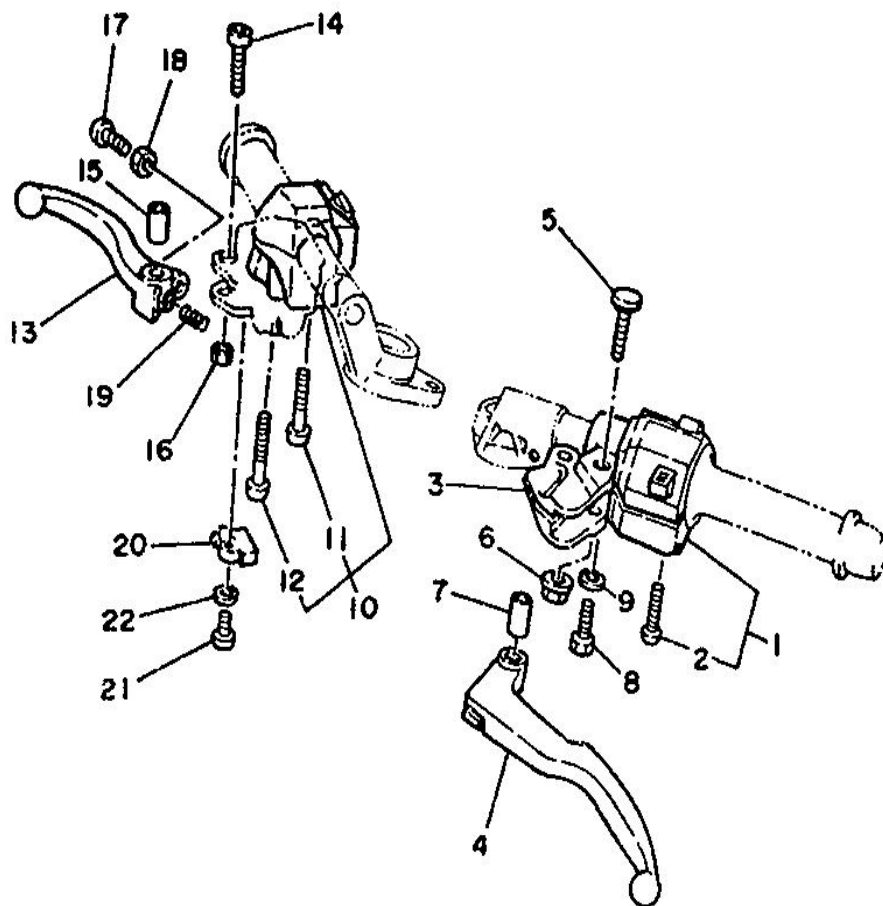


Fig. 40 HANDLE SWITCH & LEVER

N° réfèrent	Référence de la pièce	Description		Remarques
1	52X-83973-00	SWITCH, handle 3	1	
2	98506-05035	.SCREW, pan head	2	
3	29L-82911-01	HOLDER, lever 1	1	
4	29L-83912-01	LEVER 1	1	
5	31A-83945-00	BOLT, lever	1	
6	95706-06100	NUT, flange	1	
7	31A-83913-00	COLLAR, lever 1	1	
8	97306-06025	BOLT	1	
9	92906-06100	WASHER, spring	1	
10	1WV-83976-00	SWITCH, handle 1	1	
11	98506-05040	.SCREW, pan head	1	
12	98506-05045	.SCREW, pan head	1	
13	36Y-83922-00	LEVER 2	1	
14	90110-06074	BOLT, hexagon socket head	1	
15	36Y-83913-00	COLLAR, lever 1	1	
16	95606-06100	NUT, u	1	
17	90149-06153	SCREW	1	
18	90170-06010	NUT	1	
19	90501-10312	SPRING, compression	1	
20	36Y-83980-00	FRONT STOP SWITCH ASSY	1	
21	98506-04018	SCREW, pan head	1	
22	92906-04600	WASHER, plate	1	



IWT310-6400

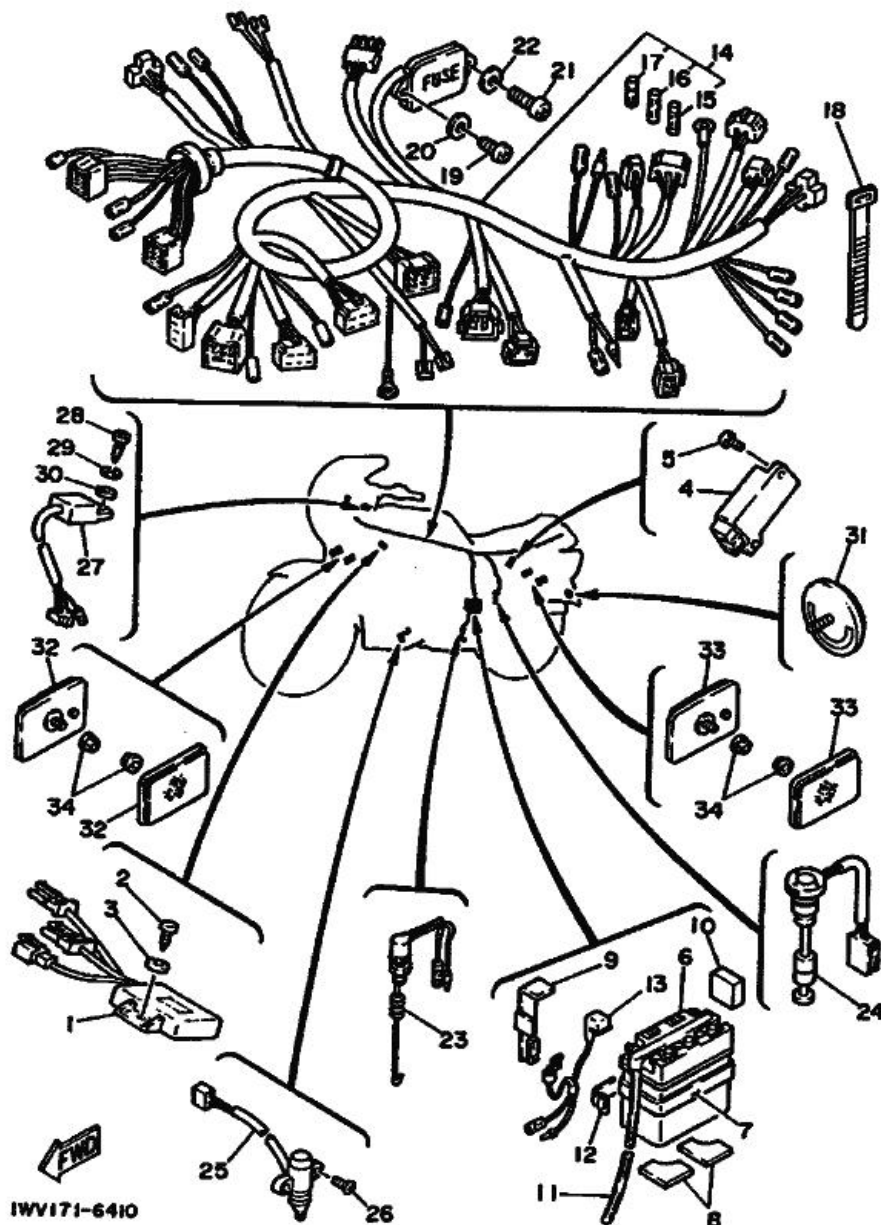


Fig. 41 ELECTRICAL 1

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-85540-50	C.D.I. UNIT ASSY	1	
2	97702-60520	SCREW, tapping	2	
3	92990-06200	WASHER, plain	2	
4	47X-81960-A0	RECTIFIER & REGULATOR ASSY	1	
5	92501-06012	SCREW, pan head	2	
6	43F-82110-60	BATTERY ASSY (GM4A-38)	1	
7	1UA-82124-00	BAND, battery	1	
8	1UA-82122-00	SEAT, battery	2	
9	29L-82129-00	COVER, battery	1	
10	1UA-82123-00	SEAT, battery	1	
11	90445-08336	HOSE	1	
12	29L-82131-00	BAND, battery	1	
13	4L0-82117-00	WIRE, lead	1	
14	1WV-82590-00	WIRE HARNESS ASSY	1	
15	1A0-82161-00	.FUSE (20A)	1	
16	4X7-82151-00	.FUSE (15A)	2	
17	5G2-82151-00	.FUSE (5A)	1	
18	437-83936-10	BAND, switch cord	1	
19	97780-60116	SCREW, tapping	1	
20	92901-06200	WASHER, plain	1	
21	92501-06014	SCREW, pan head	1	
22	92901-06600	WASHER, plate	1	
23	1T2-82530-00	STOP SWITCH ASSY	1	
24	34X-85720-00	OIL LEVEL GAUGE ASSY	1	
25	33E-82566-00	SWITCH, side stand	1	
26	98706-05016	SCREW, flat head	2	
27	4Y3-85590-M0	CONTROL UNIT ASSY	1	


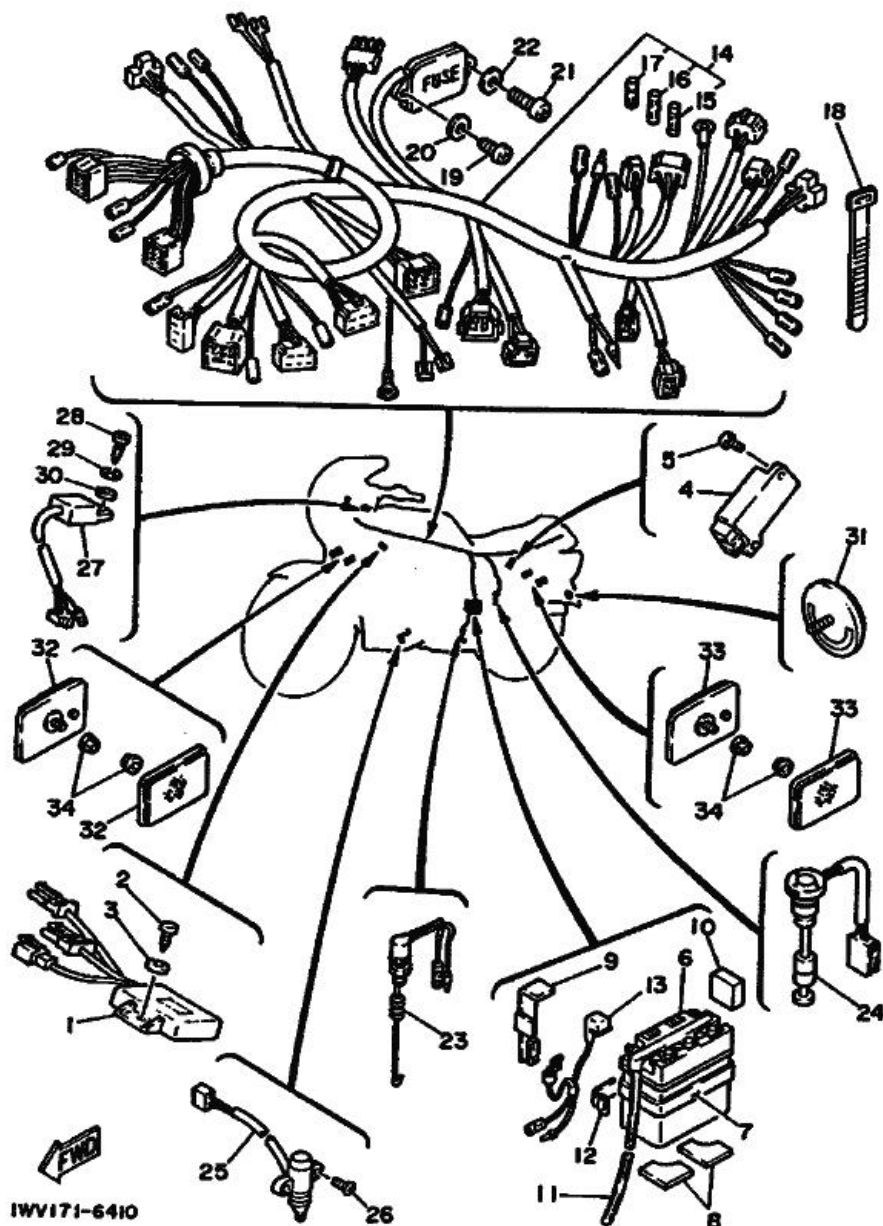


Fig. 41 ELECTRICAL 1

[illegible]

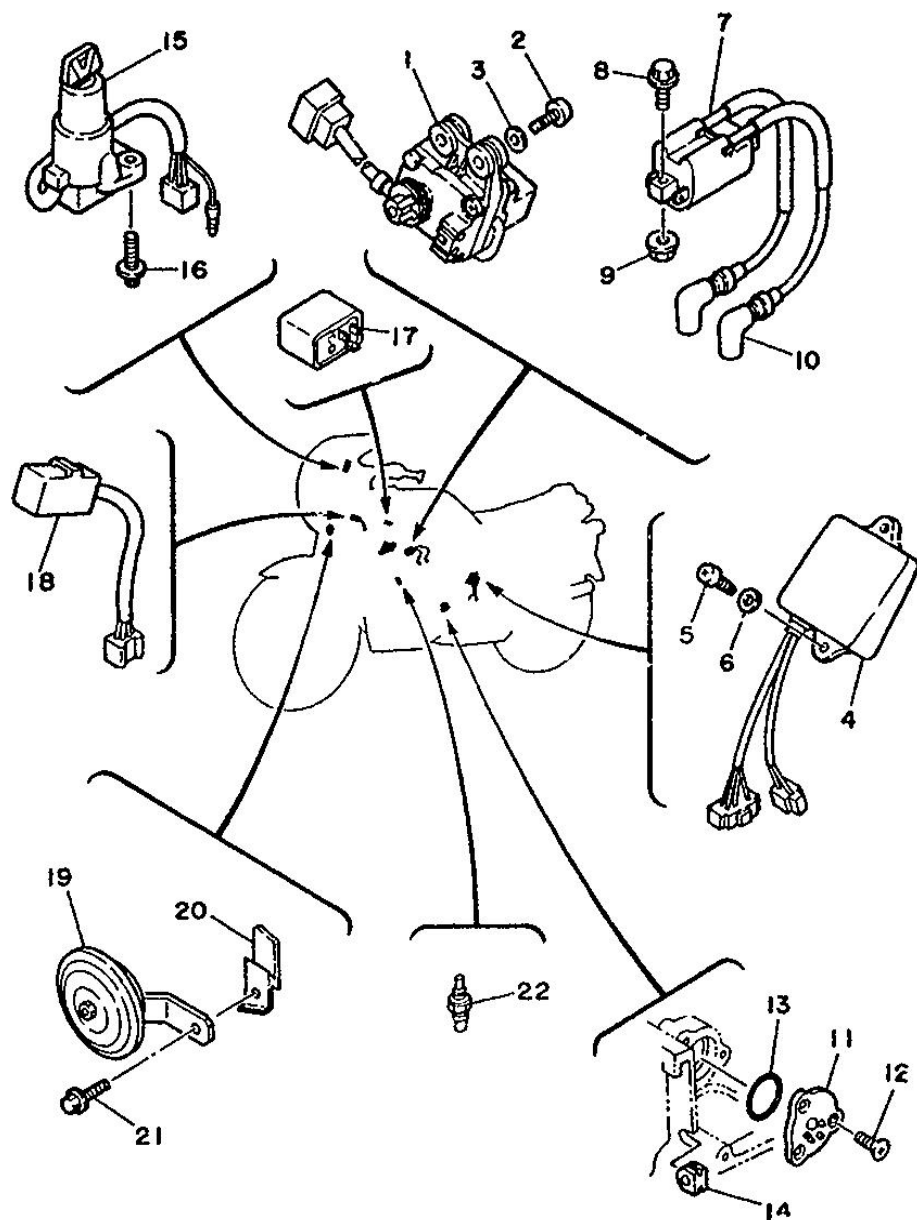

IWT310-6420

Fig. 42 ELECTRICAL 2

N° réfèrent	Référence de la pièce	Description		Remarques
1	1UA-85820-00	SERVO MOTOR ASSY	1	
2	92501-06025	SCREW, pan head	2	
3	90201-06067	WASHER, plate	2	
4	1UA-85830-00	CONTROL UNIT ASSY	1	
5	97702-60116	SCREW, tapping	2	
6	92990-06200	WASHER, plain	2	
7	1UA-82310-50	IGNITION COIL ASSY	1	
8	98002-06018	BOLT	2	
9	95702-06500	NUT, flange	1	
10	1M1-82370-21	PLUG CAP ASSY	2	WITH NOISE SUPPRESSOR
11	1L9-82540-00	NEUTRAL SWITCH ASSY	1	
12	98702-05012	SCREW, flat head	3	
13	93210-29147	O-RING	1	
14	90480-01148	GROMMET	1	
15	1UA-82501-00	MAIN SWITCH STEERING LOCK	1	
16	90109-06614	BOLT	2	
17	4H7-83350-70	FLASHER RELAY ASSY	1	
18	1A0-83395-03	FLASHER CANCELLING UNIT	1	
19	1WT-83371-00	HORN	1	
20	51L-83378-00	STAY, horn	1	
21	98006-08010	BOLT	1	
22	11H-83591-00	THERMO UNIT	1	